Central Management System

User's Manual

Version 2.12

Table of Contents

1. Overview 3
1.1 System Requirement 4
2. Software Installation 5
3. Start the CMS 10
3.1 Starting Up 10
3.2 Login 11
4. CMS Main Window 12
4.1 CMS Icon in the System Tray 17
5. Configure the CMS 18
5.1 Setup Groups 19
5.2 Manage the Sites 22
5.2.1 Add/Remove a Site 22
5.2.2 Setup the DVR Site via Device Search 24
5.2.3 Setup the DVR Site Manually 25
5.2.4 Setup the SIP Camera Site Manually 27
5.3 Setup the File Path 28
5.4 Alert Events 31
5.5 CMS User 35
5.6 Sequence 39
5.7 Login Setting 40
5.8 Network Setting 42
5.9 Log Data 43
5.10 Export or Import Settings 44
6. Operation of the CMS 45
6.1 View Live Image / Assign Camera 46
6.2 Camera Setting / Camera Info. 49
6.3 Display Mode 51
6.4 Zoom In/Out Control via Mouse 53
6.5 Sequence Display 54
6.6 Adjust the Image 55
6.7 Playback Recorded Video 56
6.8 Configure the OSD Menu of the Connected DVR 66
6.9 Search for Event Videos 67
6.10 CMS Motion Detection 70
6.11 Missing/Foreign Object Search 72
6.12 Take a Snapshot 75
6.13 Instant Record Function 76

6.14 Dome Setting / Dome Control 77
6.15 Schedule Record Function 79
6.16 E-MAP Function 84
6.17 Health Function 90
6.18 Lock Function 91
6.19 Digital Deterrent Function 92
Appendix A: The CMS Player 96
Appendix B: Troubleshooting 107

1. Overview

The Central Management System (CMS) offers a simple and centralized monitoring interface for the video surveillance equipments. It gives the user access to monitor multiple DVRs, and allows the user to simultaneously monitor 16 IP devices per group (up to 10 groups) within several clicks.

Features:

- **Monitor Multiple Sites** –Supports up to 16 IP devices
- **SSL Email Notification** – Supports SSL SMTP Server for email notifications
- **Alert Function (LAN Only)** –Sends live/event video clips and messages to the local computer from all connected DVR(s)
- **Device Configuration** – Configures the settings of the connected IP devices
- **Remote Playback** –Allows playback of recorded video stored in the connected DVR(s) or NVR(s)
- **HDD Information** –Displays information of HDDs in the local computer
- **eMap Management** – Keeps geographical marks of surveillance layout on self-selected maps
- **Analog & IP Speed Dome control / IP joystick support**

1.1 System Requirement

The following chart shows recommended computer system:

Operating Systems	Windows XP, Windows Vista, Windows 7	
CPU	Minimum: Intel Core 2 Duo 2.4GHz	Recommended: Intel Core 2 Quad 2.4GHz
RAM Memory	Minimum: 1GB (Connects up to 8 IP devices)	Recommended: 2GB (Connects up to 16 IP devices)
HDD	Minimum of 80GB HDD space is required if users are recording video to the local machine.	
Video Card	Minimum: Graphics card with more than 64MB RAM	Recommended: Graphics card with 512MB RAM
Ethernet	Minimum: 100 BaseT	Recommended: Gigabit LAN
Tested Setup	CPU: Intel® Core™ 2 Quad CPU Q6600 @2.4GHz, RAM: 2GB, OS: WinXp, Display: NVDIA GeForce 8400GS 512M, Ethernet: Gigabit HUB	

NOTE: If the operating system is Windows Vista, some functions (such as Record, Auto Reboot, etc) will not work properly due to User Account Control (UAC). Follow steps below to solve this problem.

Step 1. If a previous version of CMS is installed, export setting files of CMS servers (1~2) before installing the new version CMS.

Step 2. Due to UAC, user account in Windows Vista cannot properly run applications that will write in "C:\Program Files\" folder. Therefore, CMS will be installed in "C:\" folder instead.

Step 3. Once the new version CMS is installed, import the setting files back to CMS servers (1~2).

2. Software Installation

Follow the steps below to install CMS to the local computer.

Step 1. There are 2 ways to start the installation.

Option 1. Download the compressed file and extract it. Click on the CMS_Setup.exe file to start the installation.





NOTE: Some antivirus software might report false alarm when users move the mouse cursors over the CMS_Setup.exe file. Right click and select <Always ignore> in order to continue the installation.

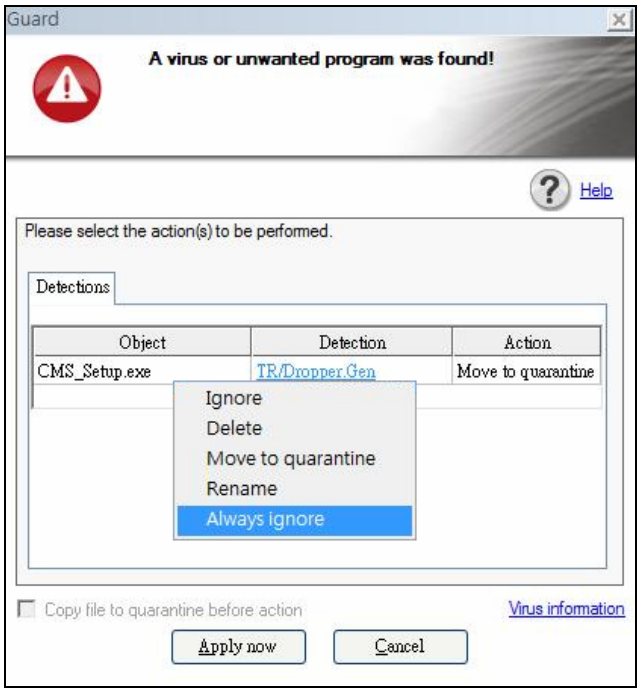

Option 2. If CMS will be installed via a CD, the installation will startup automatically when the CD is inserted into the CD-Rom. The <CMS Setup Menu> window will be displayed. Choose <INSTALL CMS> to start installing CMS. Choose <CMS USER'S MANUAL> to open the user's manual. Choose <EXIT> to exit the <CMS Setup Menu>.

NOTE: If an older version of the CMS had been installed in the local computer, a message box will be shown during the installation. Click <OK> to uninstall the previous version.

After clicking <OK>, an <CMS Installation Uninstall: Confirmation> dialog will be displayed. Click <Uninstall> to uninstall the older version and continue with the next step.

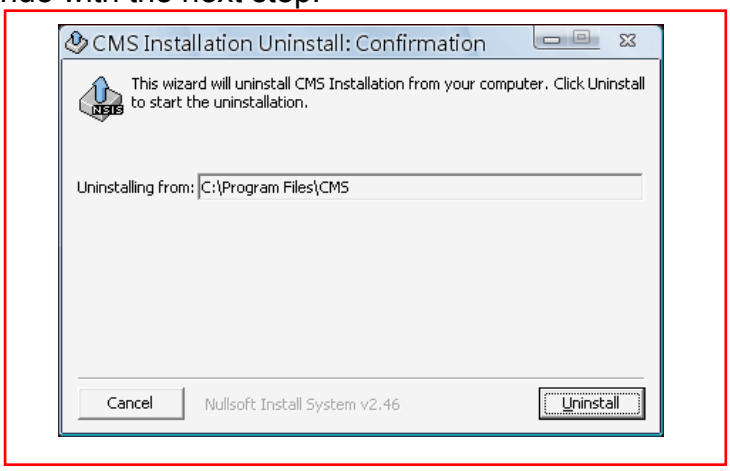
CMS Installation Uninstall: Confirmation
This wizard will uninstall CMS Installation from your computer. Click Uninstall to start the uninstallation.
Uninstalling from: C:\Program Files\CMS
Cancel
Nullsoft Install System v2.46
Uninstall

Step 1. Select the components that are going to be installed. It is strongly recommended to select the <Start Menu Shortcuts> to create shortcuts in the Start Menu and on the Desktop. Otherwise whenever the program is to be opened, it will have to be found under the path: "\CMS\EXE\CMS.exe". Click <Next> to go to next step.

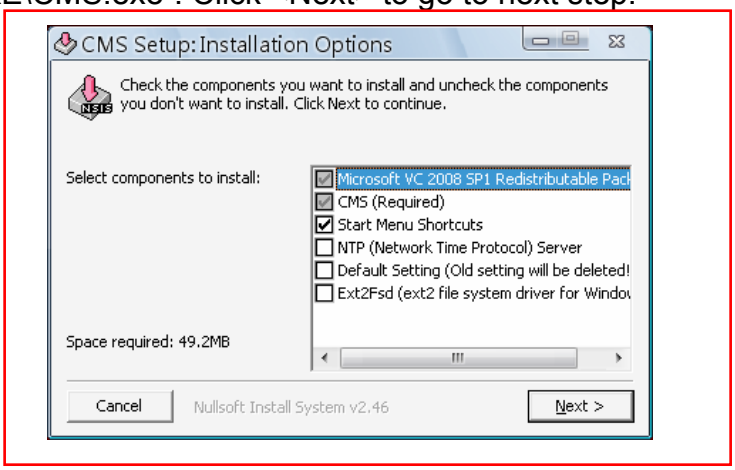
CMS Setup: Installation Options
Check the components you want to install and uncheck the components you don't want to install. Click Next to continue.
Select components to install:
Microsoft VC 2008 SP1 Redistributable Pack
CMS (Required)
Start Menu Shortcuts
NTP (Network Time Protocol) Server
Default Setting (Old setting will be deleted!
Ext2Fsd (ext2 file system driver for Windo
Space required: 49.2MB
Cancel
Nullsoft Install System v2.46
Next >

The components of the CMS Installation Setup are:

a. Microsoft VC 2008 SP1 Redistributable Package: This is an upgrade package required for correctly running CMS.
b. CMS: The CMS main program must be installed (default).
c. Start Menu Shortcuts: Check the box to create shortcuts in the Start Menu and on the Desktop.
d. NTP (Network Time Protocol) Server: Check the box to install the NTP server.
e. Default Setting (Old setting will be deleted!): Check the box to load default setting, or uncheck it to load the old setting of previous installed CMS.

f. Ext2Fsd (ext2 file system driver for Windows): Check the box to install driver in order to be able to read raw files in DVR HDD.

NOTE: If users have already installed the EXT2IFS driver and software, please uninstall it beforehand, for there might be confliction occurs while installing Ext2Fsd driver during CMS installation.

Step 2. The CMS main program will be the first program to be installed. Choose a folder to install the CMS or it will be installed to a default destination folder "\CMS\". Click <Install> to start the Installation; or click <Back> to go back to the previous step.

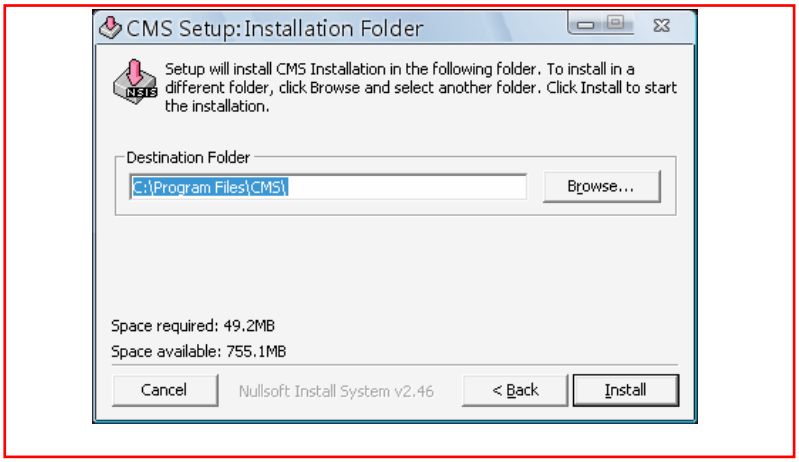
CMS Setup: Installation Folder
Setup will install CMS Installation in the following folder. To install in a different folder, click Browse and select another folder. Click Install to start the installation.
Destination Folder
C:\Program Files\CMS\
Browse...
Space required: 49.2MB
Space available: 755.1MB
Cancel
Nullsoft Install System v2.46
< Back
Install

Step 3. The NTP Server will be the next program to be installed. The NTP Server enables the local computer, which is running the CMS, to become a central NTP Server for the connected DVR(s) so the time for the local computer and the connected DVR(s) is synchronized.

Click <OK> to start installing the NTP Server.

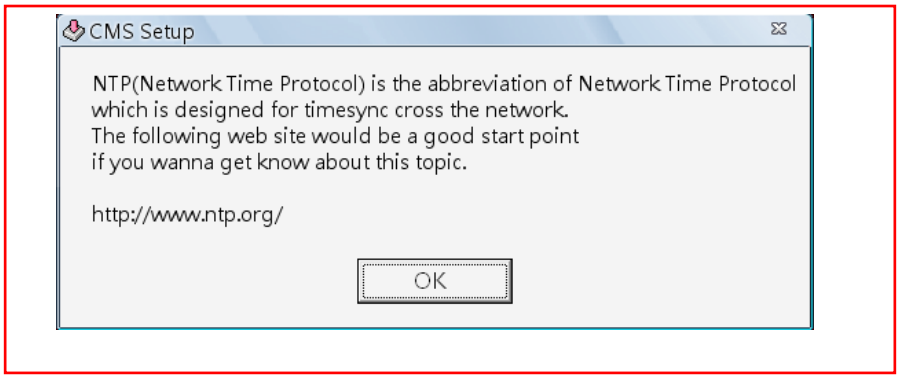
CMS Setup
NTP(Network Time Protocol) is the abbreviation of Network Time Protocol which is designed for timesync cross the network.
The following web site would be a good start point if you wanna get know about this topic.
http://www.ntp.org/
OK

Step 4. Click <Close>, and the Software Installation is complete.

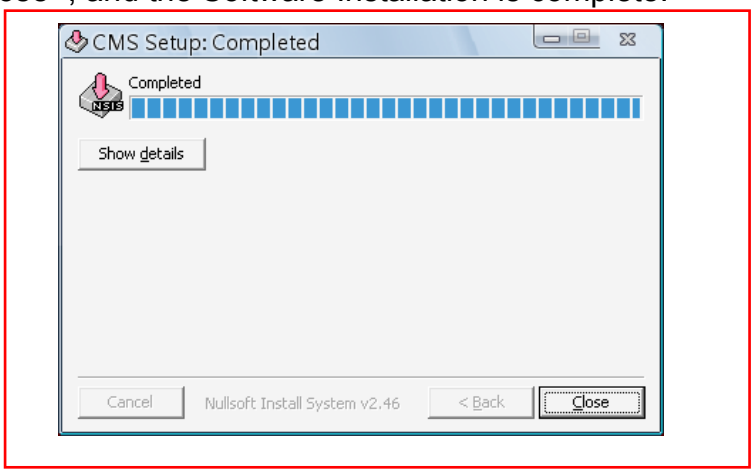

NTP Service (Server)

The NTP Service (Server) enables the local computer, which is running the CMS, to become a central NTP server for the connected DVR(s) so the time for the connected DVR(s) and the local computer is synchronized.

To do so, the IP address of the local computer is needed.

Go to **Start** menu, select **Run**.

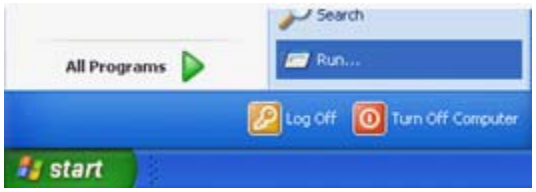

Type in **cmd** and click OK.

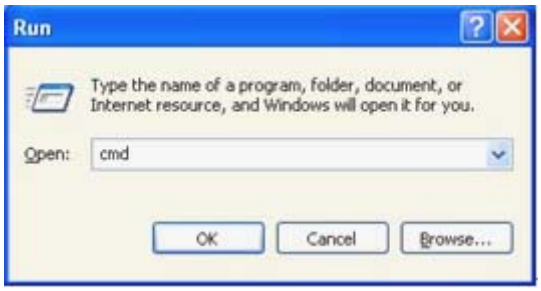

Type in **ipconfig** to get the IP Address of the local computer. Write down the IP address on a piece of paper for later use.

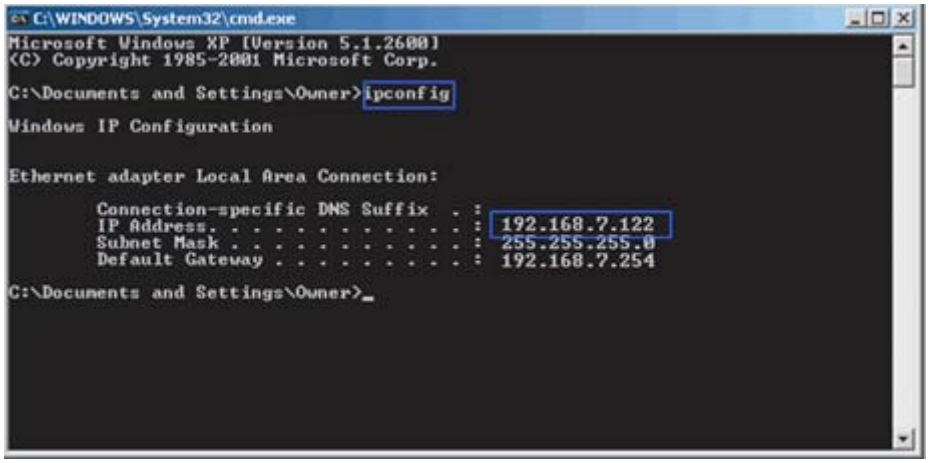
C:\WINDOWS\System32\cmd.exe
Microsoft Windows XP [Version 5.1.2600]
(C) Copyright 1985-2001 Microsoft Corp.
C:\Documents and Settings\Owner>ipconfig
Windows IP Configuration
Ethernet adapter Local Area Connection:
Connection-specific DNS Suffix . :
IP Address. . . . . : 192.168.7.122
Subnet Mask . . . . . : 255.255.255.0
Default Gateway . . . . . : 192.168.7.254
C:\Documents and Settings\Owner>_

After the IP address is found, setup the connected DVR(s).

First, go to <Main Menu> → <System Setup> → <Date/Time> → <Time Zone> to setup time zone. To find out the local time zone, please visit www.greenwichmeantime.com

NOTE: The <Time Zone> must be set or the <Network Time Protocol Setup> will not be accessible.

After entered the local time zone, the <Network Time Protocol Setup> option will be accessible. Go to <Main Menu> → <System Setup> → <Date/Time> → <Network Time Protocol Setup>, and the following menu will be displayed.

Network Time Protocol Setup	
1. NTP Server	time.nist.gov
2. Automatically Time Sync	ON
3. Manually Time Sync	No

In this example, the NTP server should be set to "192.168.7.122" which is the IP address of the local computer. After the NTP server is set, select <Manually Time Sync> to sync the time with the local computer. The time sync can also be updated periodically. Select 'ON' for <Automatically Time Sync>, and the time will be automatically synced once an hour.

3. Start the CMS

There are 3 ways to start the CMS. Note that method A and B are only available if the "Start Menu Shortcuts" component is installed. Please see section *Software Installation* for more information.

Method A. Click Start menu and select Programs; find "CMS" from the listed programs.
Method B. Double click on the shortcut icon on the desktop.
Method C. Go to "\CMS\EXE\" and double click on the CMS icon.

3.1 Starting Up

If the CMS is started for the first time, select a desired language for the interface. The available languages are listed in the scroll box. Click <OK> to confirm the selection.

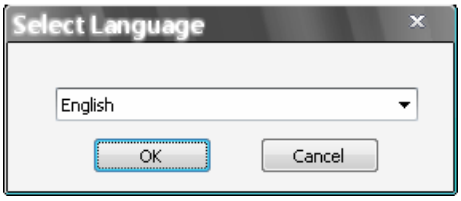

If the system memory or CPU frequency is less than the requirement, the error message shown as below will be displayed.

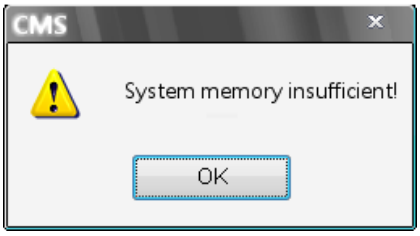

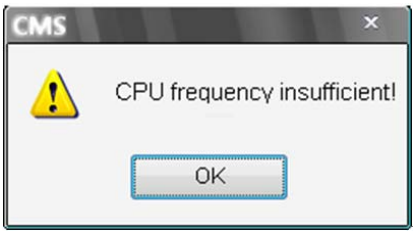

3.2 Login

The default User Name & Password are listed below.

User Name: admin
Password: 1234

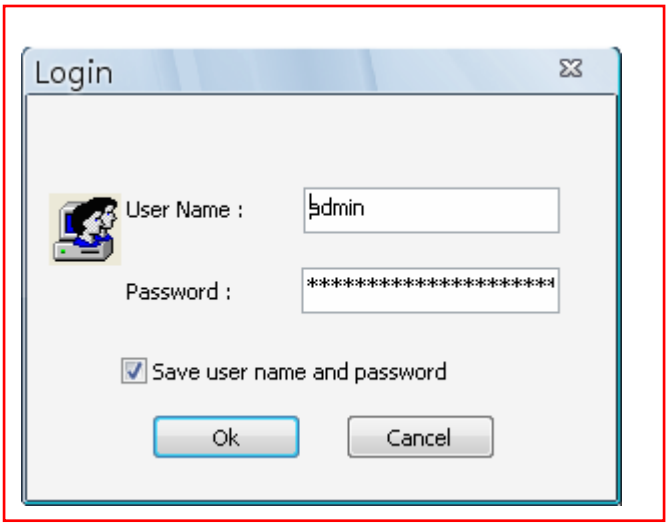

Check <Save user name and password> to save time from entering username and password every time the CMS starts. Click <OK> to login.

The username and password accounts can be added or removed under the <CMS User> tab in <Setting> configuration window. Refer to the *CMS User* section for more information.

NOTE: If the wrong username or password is entered for 3 times, the message below will be shown, and the CMS will be closed automatically after <OK> is clicked. Reopen the CMS to enter the correct username and password.

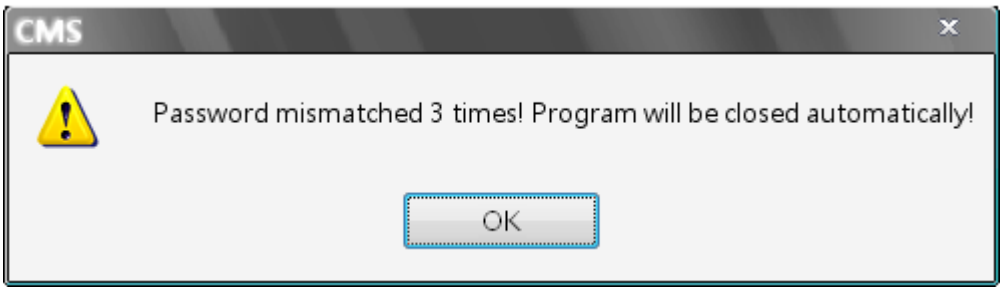

4. CMS Main Window

After starting the CMS, the main window of the CMS will be shown as the figure below. The name of each button is indicated as follows.

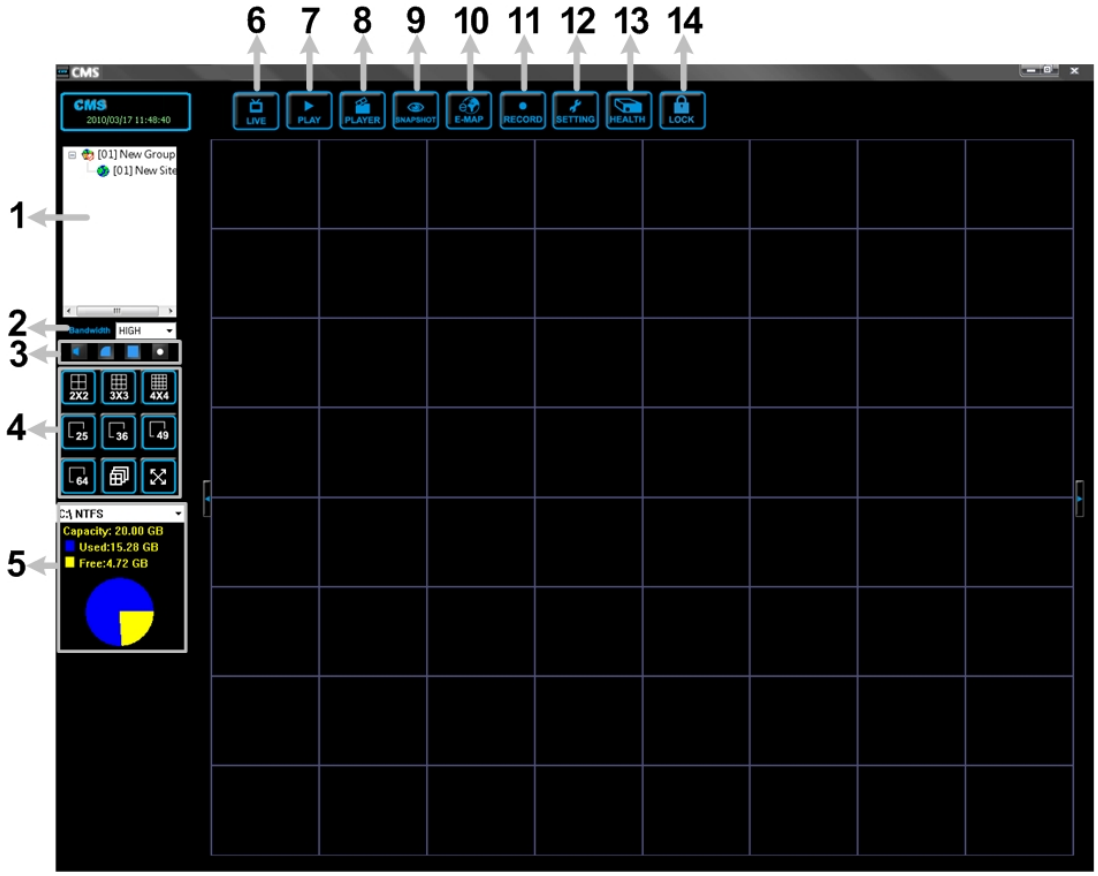

1	Site Tree	**4**	Display Modes	**10**	E-MAP
2	Bandwidth – Normal/Dual Streaming	**5**	HDD Info	**11**	RECORD
3	Audio	**6**	LIVE	**12**	SETTING
	Smooth	**7**	PLAY	**13**	HEALTH
	Deflicker	**8**	PLAYER	**14**	LOCK
	Record	**9**	SNAPSHOT		

The usage and function of each button will be briefly described as follows.

Site Tree

Displays the site(s) that users are currently viewing. If the connection to a certain camera is failed, there will not be image displayed on its assigned grid. Right click on the "site" and click <ReConnect> to try to establish the connection to the site. The <DisConnect> option allows the user to only disconnect a certain site.

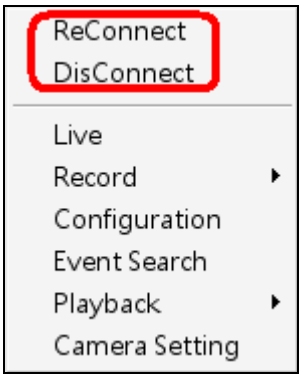

The user can also rename the camera directly by right clicking on the camera and selecting <Rename>. The new name will be shown on the upper left corner of the camera's assigned grid. Note that group and site cannot be renamed at the site tree.

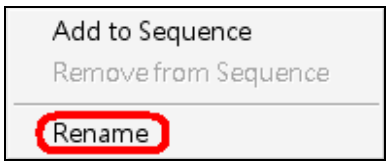

By right clicking on the group icon, the options shown as on the right allows the user to expand or hide the site tree.



Bandwidth – Normal/Dual Streaming

For different networks with different bandwidths, two streaming options are provided – normal streaming and dual streaming. Users who are using high-speed networks, normal streaming will be a recommended choice. Depending on the HDD capacity and network usage, set to high, middle, or low bandwidths.

For networks with limited bandwidth, dual streaming will be a better choice. It enables coexistence of high quality streaming at local DVR site and lower quality streaming but faster transmission for CMS site. To select dual streaming, click on the bandwidth icon and the icon will change color. Then users can furthermore choose different bit rates to adjust for the best displaying quality.

The setting will be applied immediately, and is going to be saved for CMS next startup.

NOTE: Dual streaming will only be available when DVR's total PPS is set to one-half of the max PPS, for example, set 30PPS for D1 recording. The reserved half of the max PPS will be handling the low rate streaming for transmission to the remote monitoring site.

Audio

Click on the audio button to switch on/off the audio.

NOTE: Switching ON/OFF the audio on CMS will not affect the audio setting of the connected DVR(s).

Smooth Adjustment

Click on the smooth adjustment button to switch on/off the smooth adjustment function. Switching on the function helps to give the image more sharpness.

Deflicker

Click on the deflicker button to turn on/off the deflicker function. Switching on the function helps to avoid gleaming of images.

Record

Click on the recording button to start recording videos of all connected sites. The recorded data will be stored in the preset file path specified in settings.

Display Modes

Click any of them to view the image in a multiple window mode. The selections include 4-window, 9-window, 16-window, 25-window, 36-window, 49-window, and 64-window modes. Refer to section **Display Mode** for more details on operation.

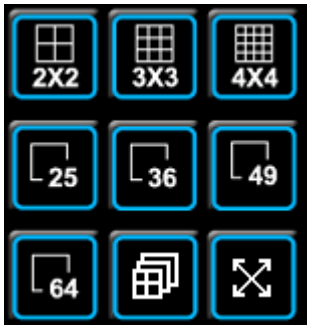

Click to start displaying the sequence list. See section **Sequence** for more detailed information.

Click to extend the current viewing grids to full screen. Hit <Esc> to exit.

HDD Info

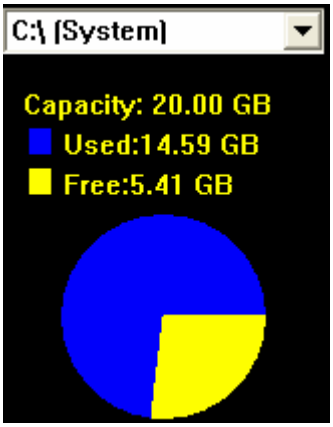

The pie chart on the bottom left displays the HDD information. This is especially useful when the user uses the CMS to record the video to the local computer.

Scroll down the menu and users can see all the HDD drives installed on the local computer, such as C drive, D drive…etc. The blue part of the pie chart indicates the used space, and the yellow part indicates the available space.

The information will be updated every 30 seconds. If file circular is enabled, the circulation will as well be updated every 30 seconds.

LIVE

Click on this button to view the live video. Note that after viewing recorded video, click this button to switch back to the live mode.

PLAY

Click to view recorded video stored in the HDD of the connected DVR. Please refer to section **Playback Recorded Video** for more information about playing back the video.

PLAYER

Click to open the CMS Player. The CMS Player is a compact version of the standard DVR Player. Please refer to the **Appendix A** for more information.

NOTE: When CMS is terminated, CMS Player will also be ended at the same time.

SNAPSHOT

Click to save a snapshot of the current window(s). Refer to section **Take a Snapshot** for detailed information.

E-MAP

Click to open the E-MAP program. The E-Map is a program that allows the user to illustrate the positions of the cameras on a self selected image.

RECORD

Click to schedule the recording time frame for the sites.

SETTING

Click to set up the configuration. Refer to section **Configure The CMS** for detailed information.

HEALTH

Click to see the HDD information of the connected DVR(s). The data will be updated every 5 minutes. The following figure is an example. See **Health Function** section for more detailed information.

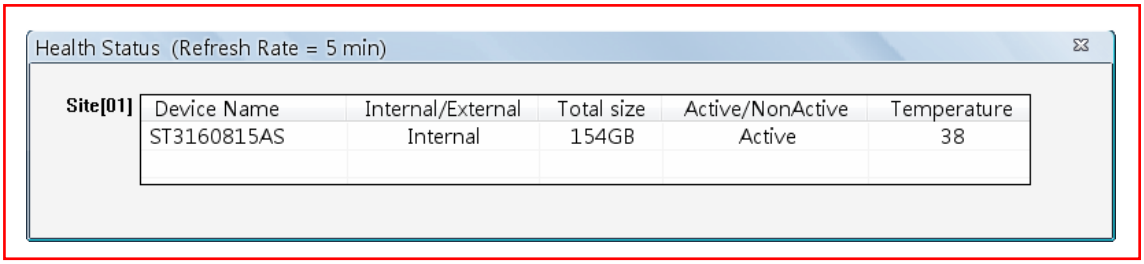

NOTE: If more than half of the connected devices are not our products, a warning message as below will be shown and the CMS will be closed automatically.

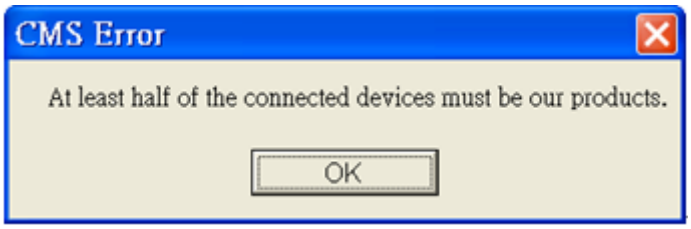

LOCK

Click to lock the CMS to protect the works on the CMS when the user needs to be away from the computer for a while. This function is the same as the computer's screensaver. See **Lock Function** section for more detailed information.

4.1 CMS Icon in the System Tray

When CMS is started up, CMS icon will always be shown in the system tray. Right click on CMS icon and the menu items will be as shown on the right.

If <Minimize To Tray> is checked, CMS window will shrink to CMS icon in the system tray when it is minimized. The task button will also disappear.

To restore CMS window, click on CMS icon and the task button will appear again. Then click on the task button to maximize CMS window. Alternatively, right click on CMS icon and select <Open CMS> and CMS window will be restored.

Right click on CMS icon and select <Help> will display CMS User's Manual.

Details of <Alert Info.> are explained in section ***Alert Events***.

5. Configure the CMS

The CMS supports up to 10 groups, and at most 16 IP devices can be added to each group. The following sections guide users to setup the CMS step by step.

Click on the <Setting> icon and the figure below will be displayed.

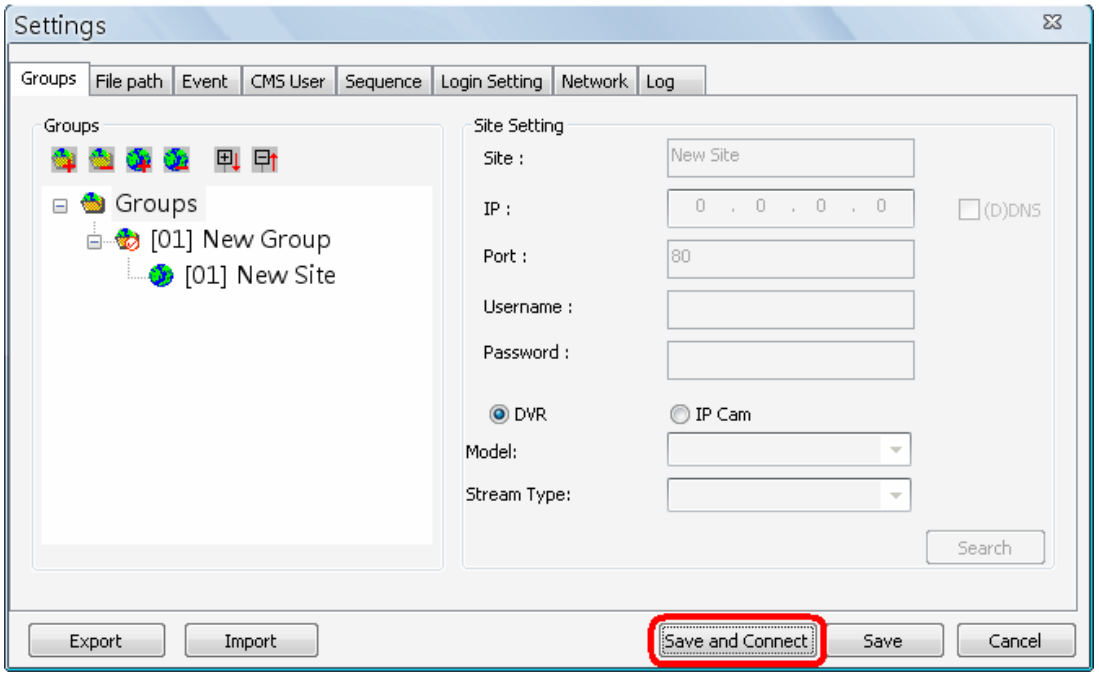

NOTE: The configuration in "Group" tab and "Import" function will be unable to be saved when the CMS is detecting network connection or is connecting to some sites. Error messages will be shown to inform the users.

NOTE: When the setting of connecting group or sites is changed, users can directly click on <Save and Connect> to re-establish the connection.

5.1 Setup Groups

Up to 10 groups can be set in the CMS. This section guides the user to add or remove a group, and also shows the user how to set "start group".

Add a group

Click button to add a group. Double click on the group to rename it.

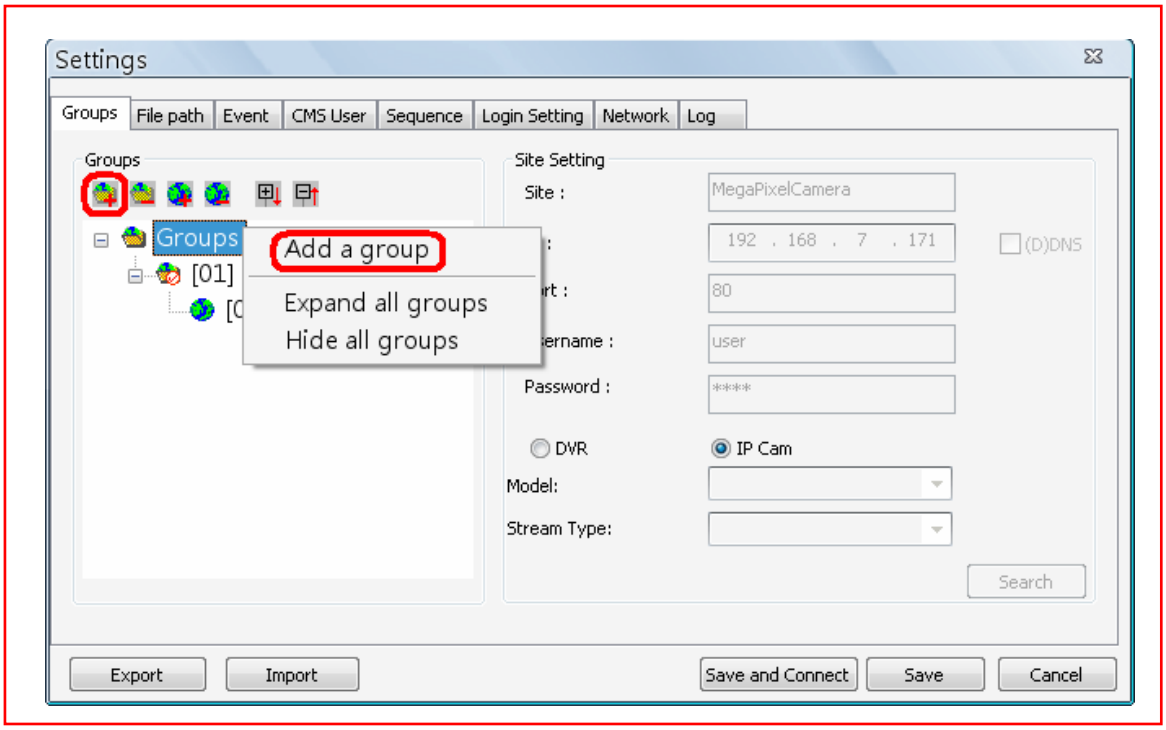

The other way to add a group is to right click on <Groups>, and select <Add a group>.

Set Start Group

"Start Group" is the group that will be connected after starting the CMS.

Right click on the group to be set as "start group", and select <Set as start group> from the pull-down menu.

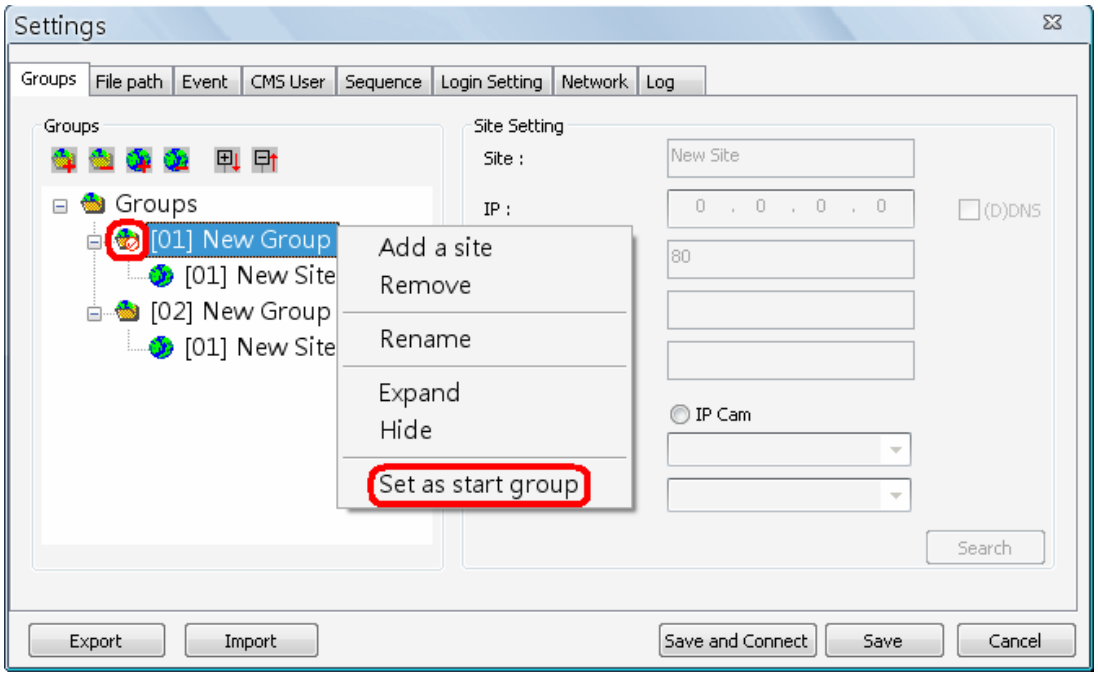

NOTE: If a group is set as the "start group", the icon will be changed as shown in the figure above.

Expand/ Hide a Group

There are two ways to expand or hide a group. One way is to use the buttons; the other way is to right click on the group and select <Expand> or <Hide> from the pull-down menu.

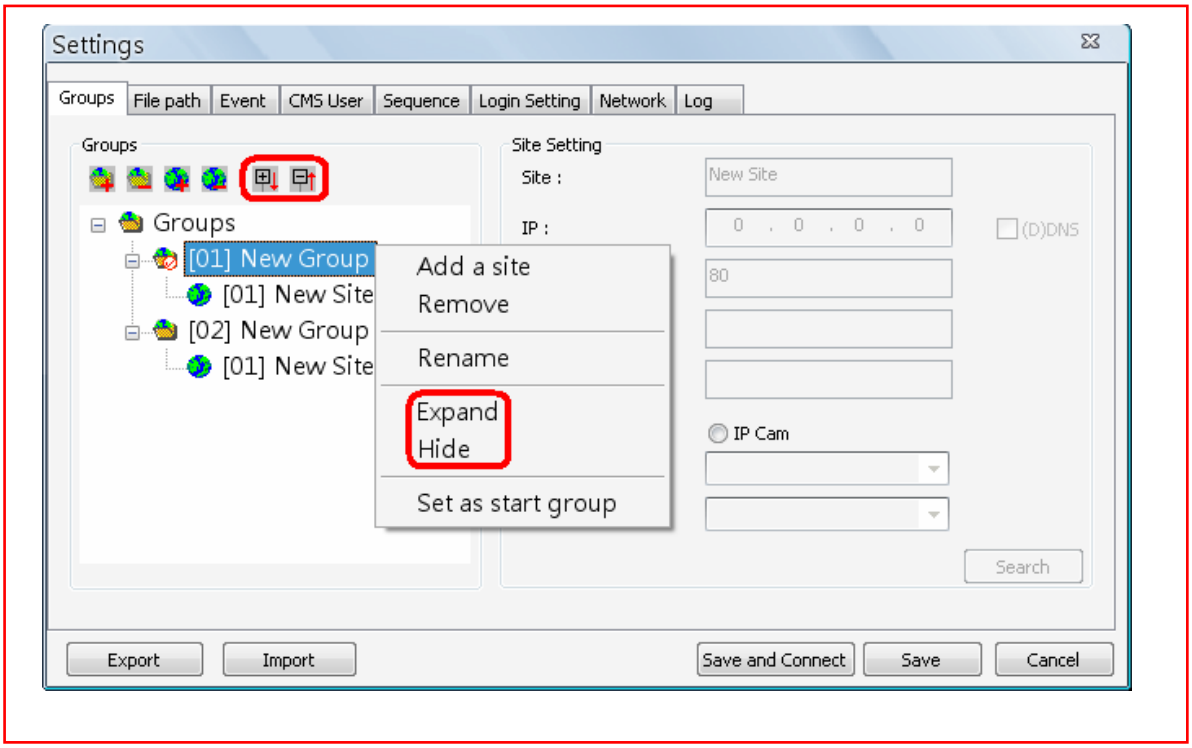

Remove a Group

To remove a group, click on the group to be removed, and then click the button directly to remove the group. The other way to remove a group is to choose <Remove> after right clicked the group.

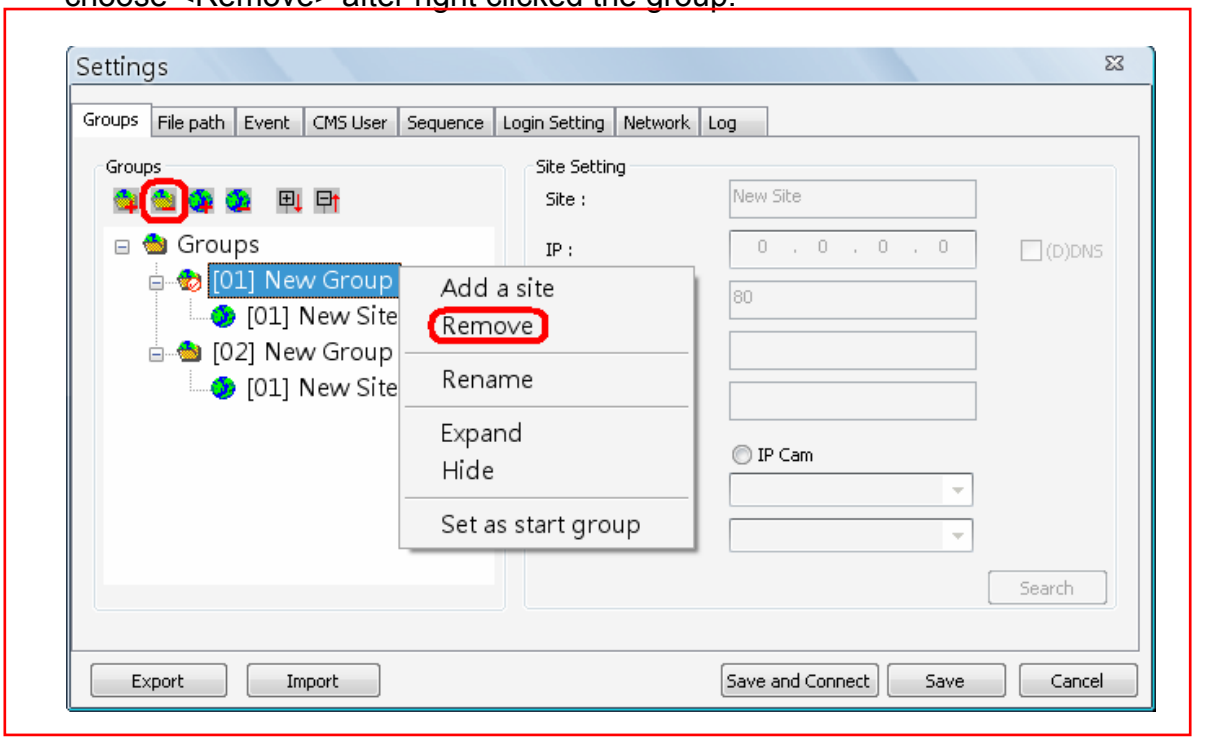

5.2 Manage the Sites

The following sections are instruction of the management of the sites, including add or remove sites and configuration.

5.2.1 Add/Remove a Site

This section describes how to add or remove a site. Up to 10 groups can be created with a capacity of 16 sites.

Add a site

Choose a group to add a new site. Click the button to add a site to this group. The next section will show how to setup the site step by step.

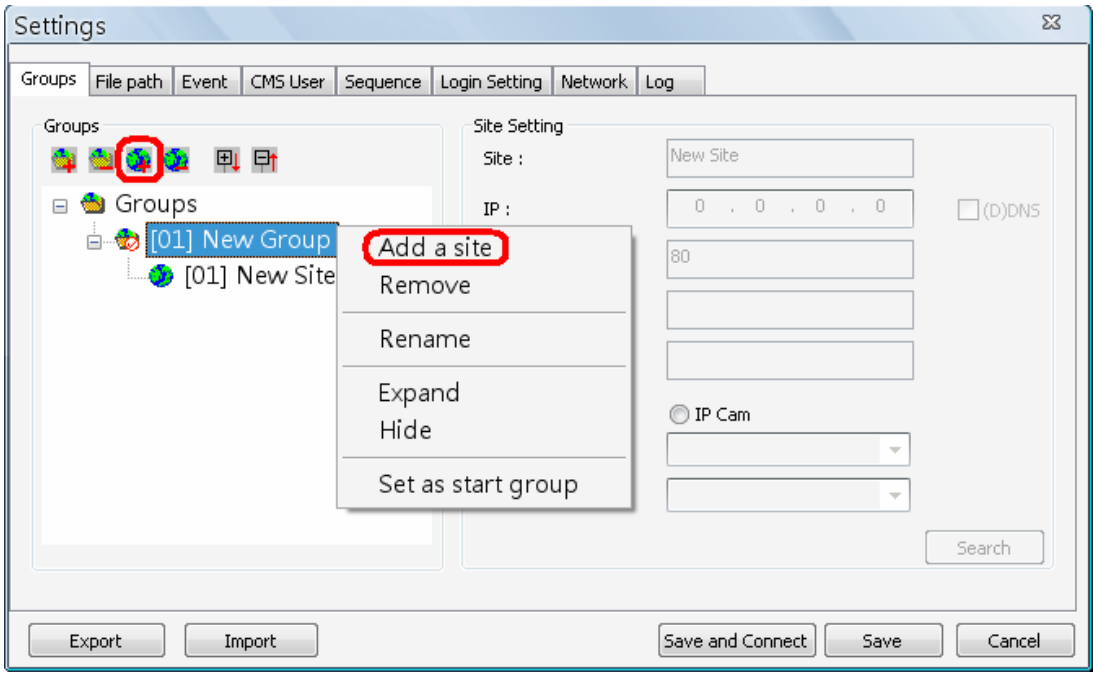

The other way to add a new site to a group is to right click on the group, and select <Add a site>.

Remove a site

To remove a site, click on the site that is to be removed, and click the button directly to remove the site.

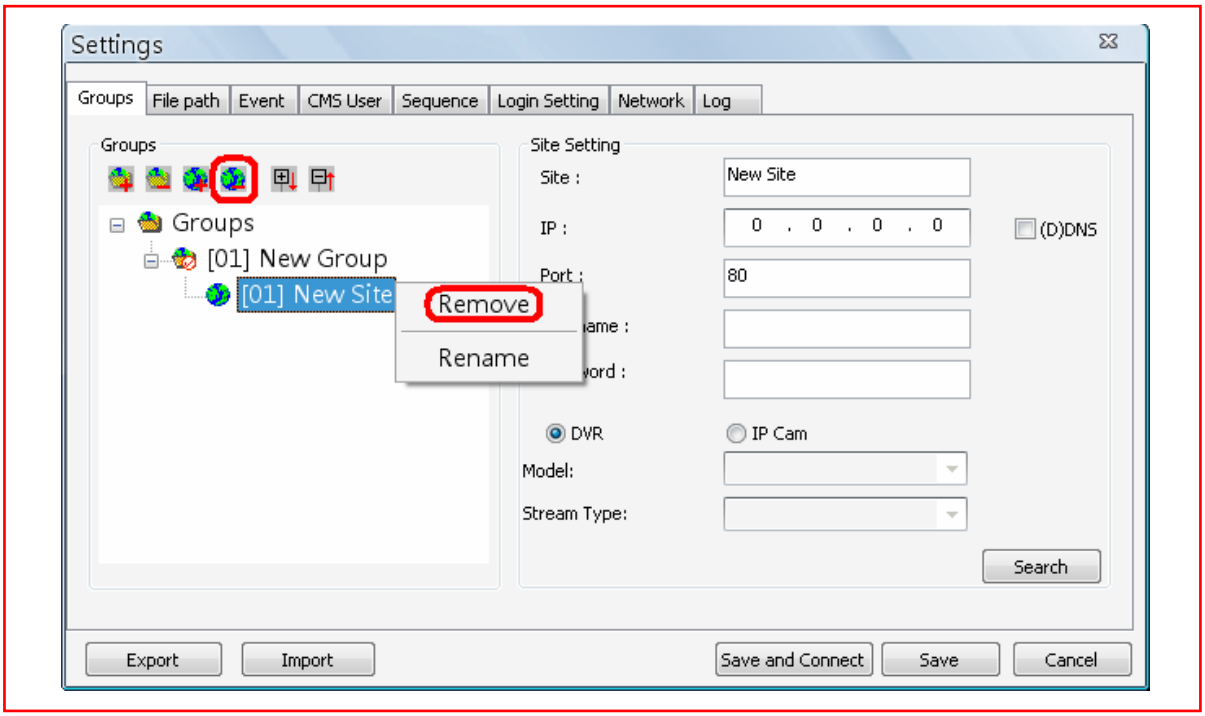

The other way to remove a site is to right click on the site, and select <Remove> from the pull-down menu.

A new site can either be a DVR or a SIP Camera, and the number of sites equals to the number of DVRs and SIP Cameras. The following sections will show how to setup configuration of the sites.

5.2.2 Setup the DVR Site via Device Search

There are two ways to setup a DVR site. The simple way is via Device Search.

The CMS is able to search for the IP address of the DVR(s) connected to the LAN. The ports used for device search are 6666 and 6667. Please make sure that these two ports are not in-use nor blocked by firewall or virus scan software.

Follow steps below to search for DVR(s):

Step 1: If there is a LAN network, the CMS can search the LAN network for IP address of available DVR(s). Click the Search button (**on the bottom right**) to open the Search window.

Step 2: Click <Refresh> to find the IP address of DVR(s) available in the LAN network. Select from the list and **Double click** on the IP address to add it to a site. Then enter username and password of the site.

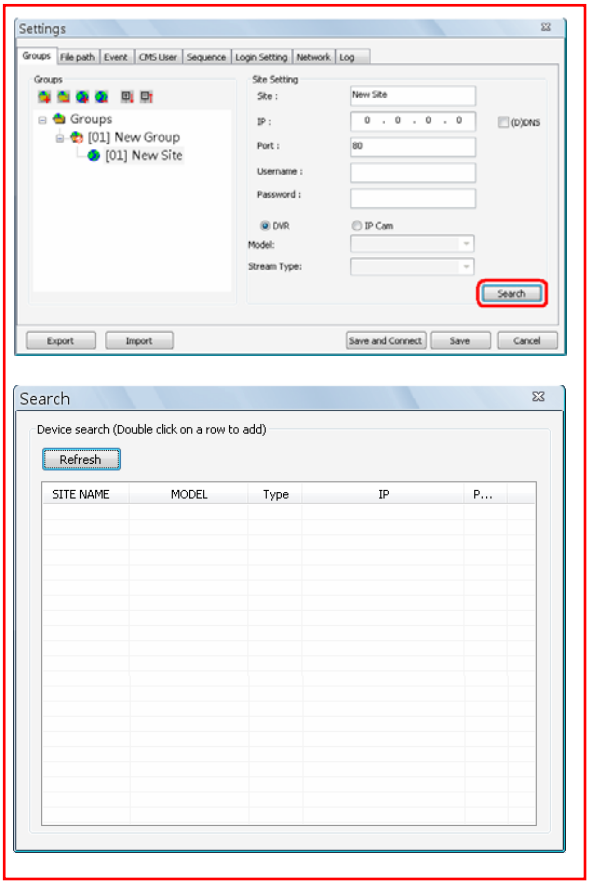

NOTE: The Device Search function can only be used to search for addresses within the same LAN. For example, if the local computer uses an IP address of 192.168.**1**.5, and a connected DVR has an IP address of 192.168.**1**.7, the CMS will be able to find the IP address of the DVR. However, if there is another DVR connected to another LAN network such as 192.168.**3**.6, the CMS (whose IP is 192.168.**1**.5) will not be able to find the IP address of the DVR in another LAN network.

5.2.3 Setup the DVR Site Manually

If the detailed information (IP address, port, username, and password) of the connected DVR is provided, a site can be setup manually.

Add a new site and enter the Name, IP address, Port, Username, and Password. Select "DVR" and click <OK> to complete the setting.

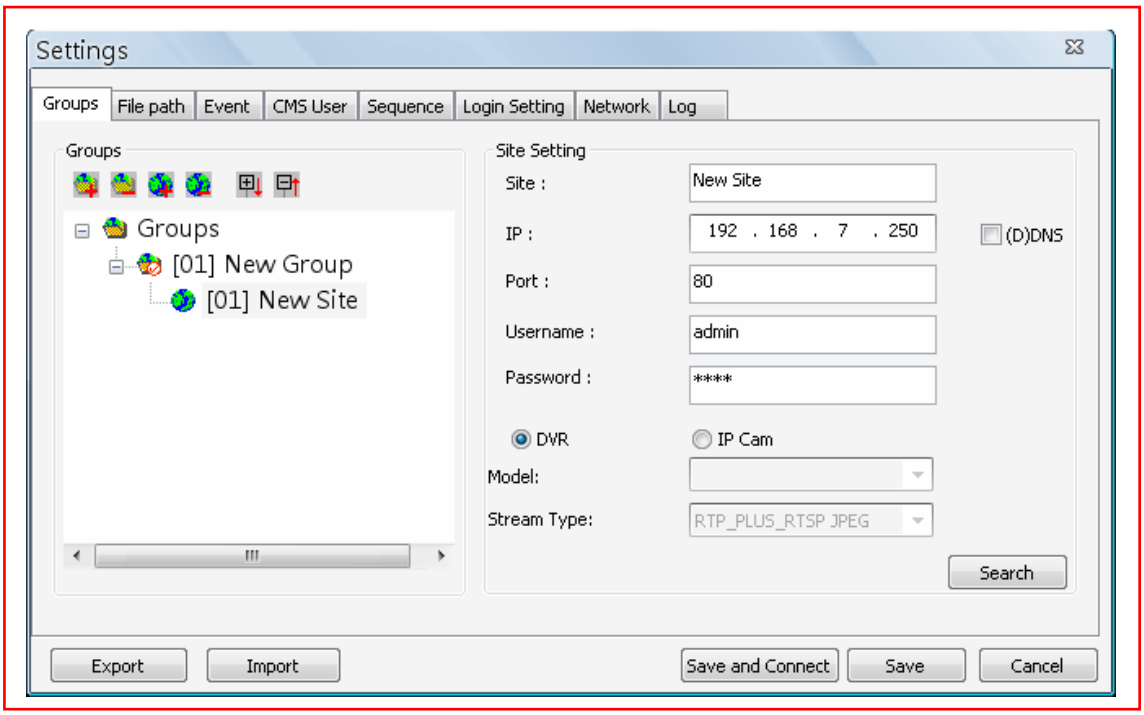

NOTE: If the entered Username and Password is a user account instead of an administrator account, the same DVR account restriction will be applied. When a user account accessed a function that is restricted, the following message will be shown:

If the DDNS information of the DVR is known, the DDNS data can be used to setup a site. Check the box <(D)DNS> circled below, and type in the DDNS data. Click <OK> to complete the setting. An example of the DDNS address looks like: *********.ddns.specoddns.net**

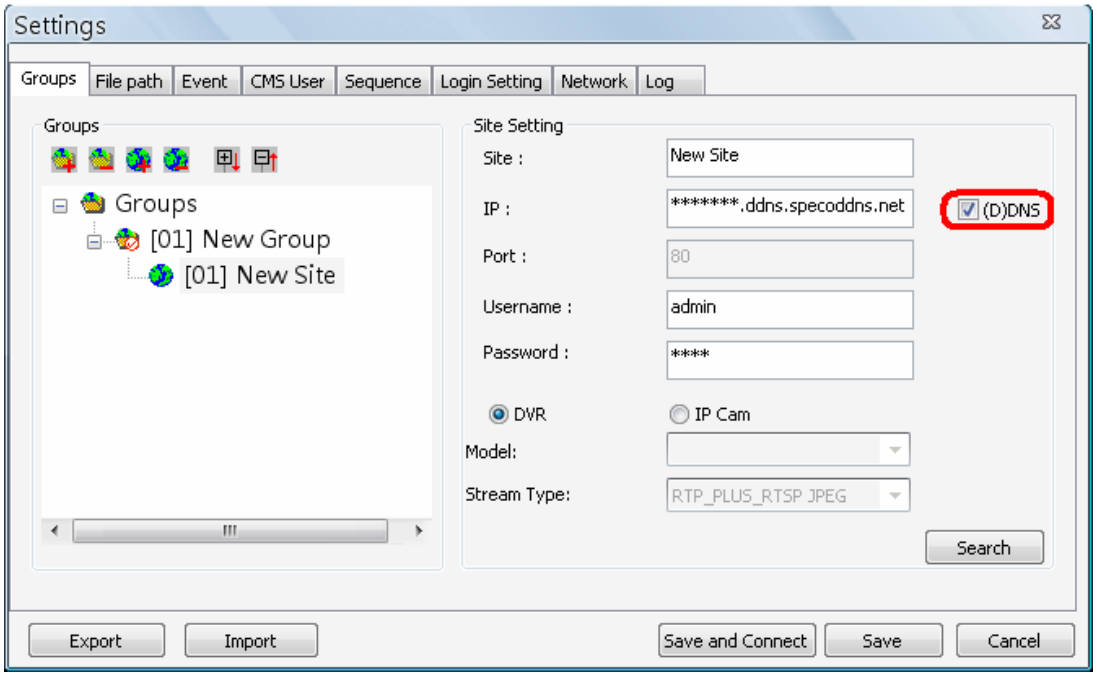

NOTE: Port number does not apply to DDNS entries. Therefore, if the <(D)DNS> box had been checked, the port number does not need to be changed.

5.2.4 Setup the SIP Camera Site Manually

If a SIP Camera is going to be added to CMS, the required information includes the IP address, port, username, password, and streaming type of the SIP Camera. Enter the data and select "IP Cam" as circled below. Then choose the <Model> and <Stream Type> of the SIP Camera. Click <OK> to complete the setting.

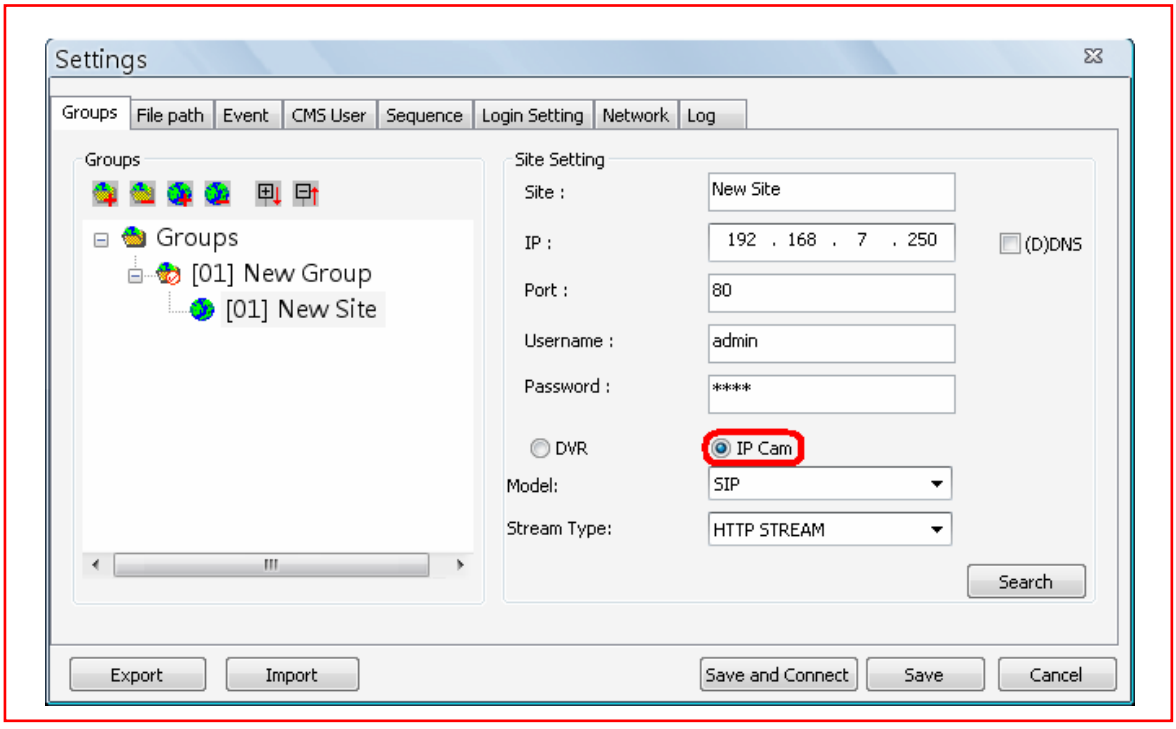

NOTE: Each group can only connect to at most 16 SIP cameras.

5.3 Setup the File Path

The file path menu defines stored destination of snapshot, archive files, and recorded videos. It is recommended to use the default folders.

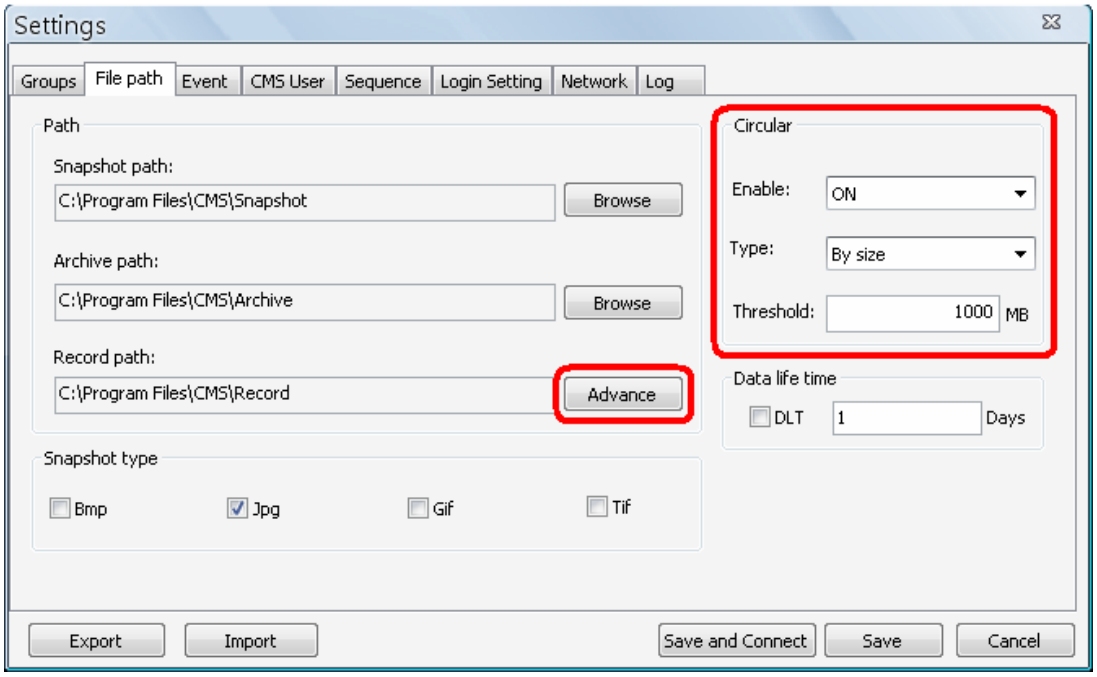

Record Path

The recorded videos can be stored in more than one folder. Click on <Advance> and the following window will be shown:

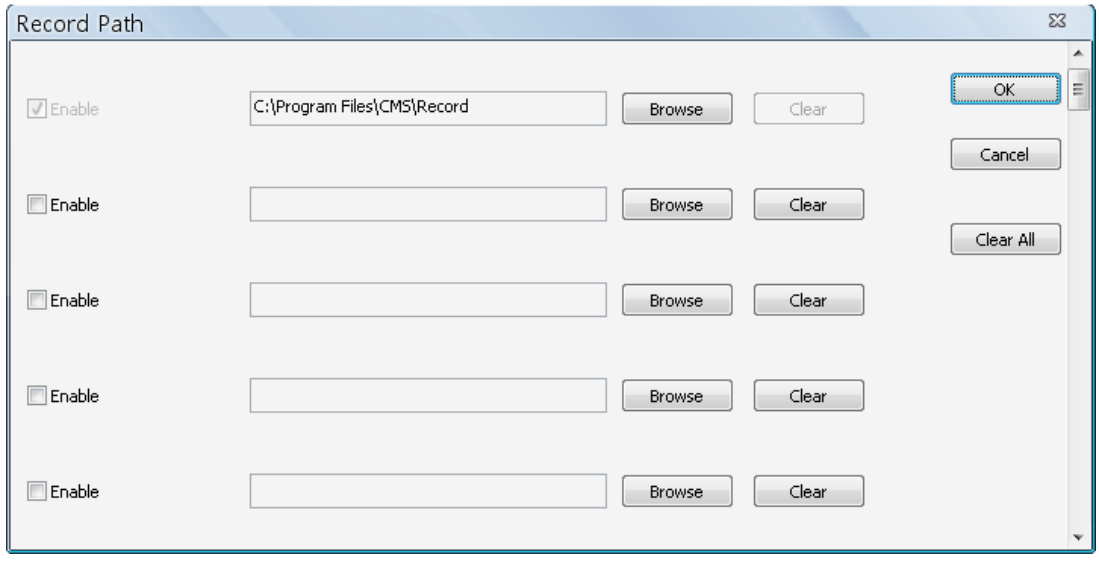

The number of selectable folders equals to the number of HDDs the PC connects to, excluding HDDs with capacity less than 1GB. Check the "Enable" box and click <Browse> to set more destination folders. Each folder should be from different HDD or an error message will be displayed. Note that if a HDD with less than 1GB capacity is selected, an error message will be shown. Click on <Clear All> will delete all folders except the first preset folder.

In each folder, subfolders will automatically be created with folder name "RecordFolder********", which ******** represents an 8-digit serial number. Each subfolder can store up to 500 videos. Once a subfolder is full, a new subfolder with a subsequent number will be created and new files will be stored to the new subfolder.

Circular Function

The <Circular> function is used to adjust the HDD space usage of CMS. For example, when the threshold is set to 1GB, and there are 20GB free disk space remaining in the HDD, CMS can only access the HDD no more than 19GB. When the free disk size is smaller than threshold:

1. If the circulation of files is performed at first time, CMS will start to overwrite the earliest recoded data. Next time when CMS starts up, the circulation of files will continue from where it was up to.
2. If the destination folders are reset, new folders will be created to store new files. The old files will be deleted and rewritten with new files.

Record Videos from SIP Cameras to Remote Network Disks

When videos from SIP cameras will be recorded to a remote network disk, the DRV file is going to be stored under a temporary folder "\CMS\TEMP_REC\" if the file size is less than 100MB. Once the file size reached 100MB, the file will automatically be transferred to the designated remote network disk.

If the recording is interrupted (either connection reset, disconnected, stop recording, etc), a progress bar will be shown to inform the user that the DRV file is being transferred to the designated remote network disk.

NOTE: For CMS server 2, the temporary folders will be named as TEMP_REC2.

Data Life Time

If users checked the box in front of "DLT" to enable Data Life Time function, the duration in days has also to be defined. When Data Life Time function is enabled, CMS will check the file edit time of the recorded video files in all "Record Path" and any video files exceed the defined duration will automatically be permanently deleted.

Snapshot Type

CMS has a snapshot function, and the file type for snapshot can be defined here. Note that if more than one type are selected, take 2 types for example, then each snapshot is saved to 2 types of files. They are the same image, but in different formats. For instance, if Bmp & Tif are selected and the snapshot is taken, two types of image files of the same snapshot image will be created.

5.4 Alert Events

The alert function enables the connected DVR(s) to send alert signals to the CMS within the network. This section describes how the alert function works.

Setting up the alert function:

Step 1. Find the IP address of the local computer.

Go to **Start** menu, select **Run**.

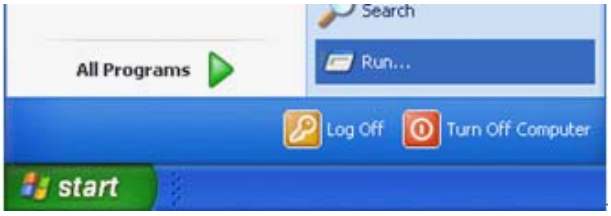

Type in **cmd** and click OK.

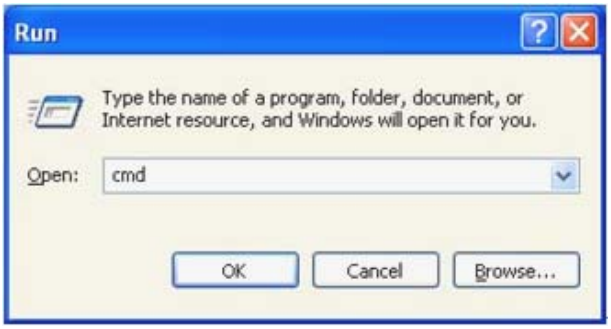

Type in **ipconfig** to get the IP Address of the local computer. Write down the IP address on a piece of paper for later use.

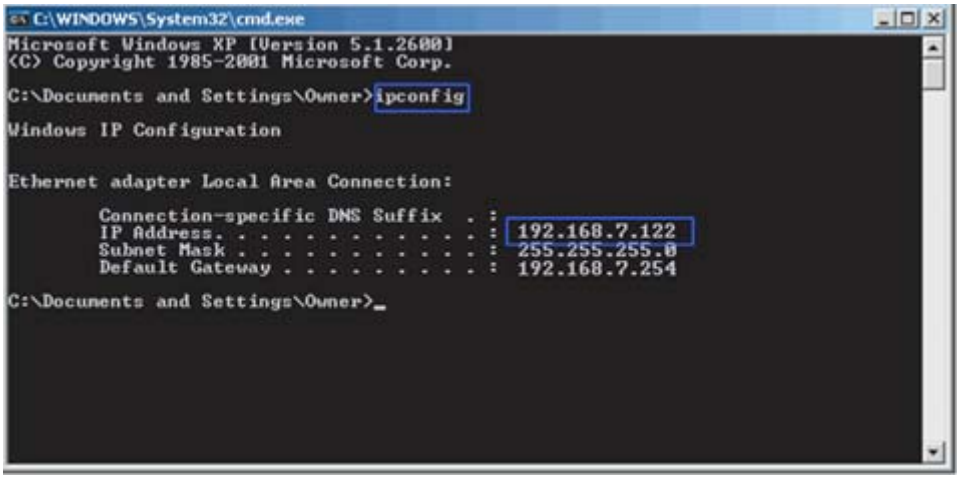
C:\WINDOWS\System32\cmd.exe
Microsoft Windows XP [Version 5.1.2600]
(C) Copyright 1985-2001 Microsoft Corp.
C:\Documents and Settings\Owner>ipconfig
Windows IP Configuration
Ethernet adapter Local Area Connection:
Connection-specific DNS Suffix . :
IP Address. . . . . : 192.168.7.122
Subnet Mask . . . . . : 255.255.255.0
Default Gateway . . . . . : 192.168.7.254
C:\Documents and Settings\Owner>_

Step 2. Setup the <Alert Notification Setup> on the connected DVR(s). The <Alert Notification Setup> allows the user to send alert notifications to the CMS program which had been installed to the computer.

Alert Notification Setup	
Alert Configuration Set	1
Alert Notification	OFF
Alert IP	192.168.7.122
Alert Port	9999
Alive Interval	120sec

- Alert Configuration Set
  <Alert Configuration Set> provides 3 combinations of Alert Notification, IP, and Port. The user can match the connected DVR to at most 3 different CMS servers.

- Alert Notification
  4 options are included in this item; <OFF>, <Event>, <Alive>, and <Both>.
  <**OFF**>: The Alert Notification is turned off.
  <**Event**>: When the alarm is triggered, the DVR will send an alert message to the CMS.
  <**Alive**>: The DVR will send an alive message to CMS every *N* second just to show that the connection between the DVR and CMS is in effect. The time interval *N* can be adjusted in <Alive Interval>.
  <**Both**>: This enables the DVR to send both Event and Alive alert messages to the CMS.

- Alert IP
  The Alert IP must match the IP address of the local computer. In this example, the IP address of the local computer is 192.168.7.122.

- Alert Port
  The Alert Port is the port used for sending and receiving alert signals. Choose any port that is not restricted by the network. The ports for both connected DVR and CMS Alert **must be the same**. In this example, the port is set to 9999.

  NOTE: If 2 configuration sets are corresponding to 2 different CMS servers, each CMS server must have its own unique port number.

- Alive Interval
  Time interval (1 to 255 sec) between each alive message can be set here.

Step 3. Setup the Alert of the CMS.

Click on the <Setting> icon and go to Event tab to setup the port. Port 9999 is used in this example. Select <ON> to enable the alert function. <Event Full Screen> is used to display full screen of the alerted channel. Select <ON> to activate this function, or <OFF> to deactivate it. <Event Recording Duration> is for users to define recording duration of event videos, when schedule is set and/or when motion recording is enabled. In addition, users can send notice to a specific email via a SMTP server by s selecting <ON> next to <Enable> under "Email Notice". If the email server requires SSL, select <ON> next to <SSL>. Then enter all required SMTP information. If the format of the email address is entered incorrectly, an alert message will be displayed.

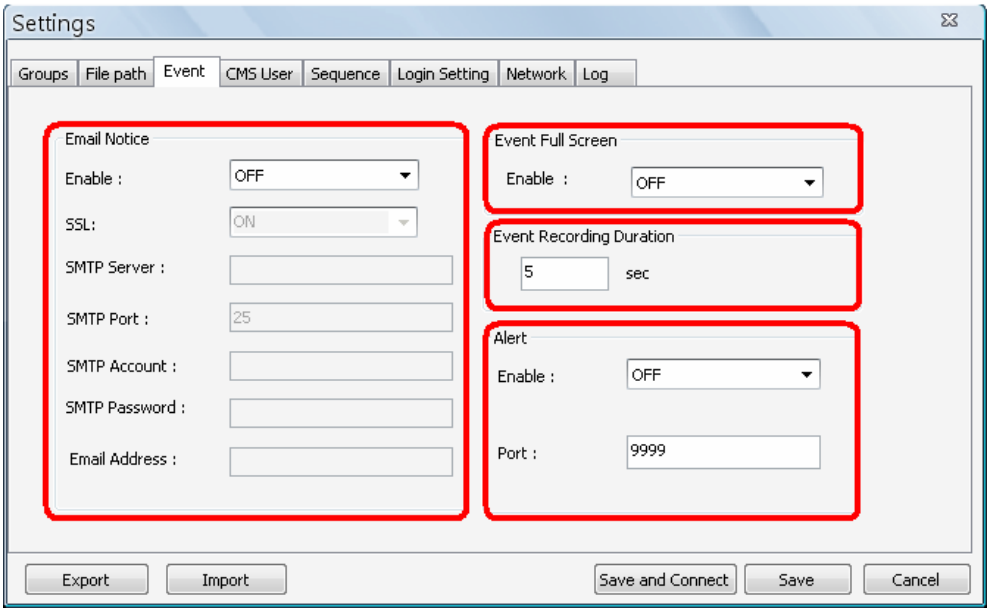

NOTE: If the user reconnect or disconnect the sites, the list of the event full screen will be cleared.

NOTE: Once the list of the event full screen finished playing, the window will return to former viewing status**.**

Step 4. Alert Action

The connected DVR sends 4 types of alert message (State) to the CMS: Alive, Alarm, Motion, and Video Loss. Alive messages are sent when the notification option is set to <Alive> or <Both> in the connected DVR. Alarm, Motion, and Video Loss messages are sent when the notification option is set to <Event> or <Both> in the connected DVR.

Viewing the alert events:

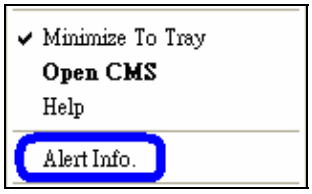

When an alert is triggered while the alert function is enabled, CMS icon shown in the system tray will change to Alert icon to indicate that an alert is being triggered. Right click on CMS icon and choose <Alert Info> to show the Alert Info window. Alternatively, double click on the blinking CMS icon can also display the Alert Info window.

Users can click on the <Save> button to save the alert information list.

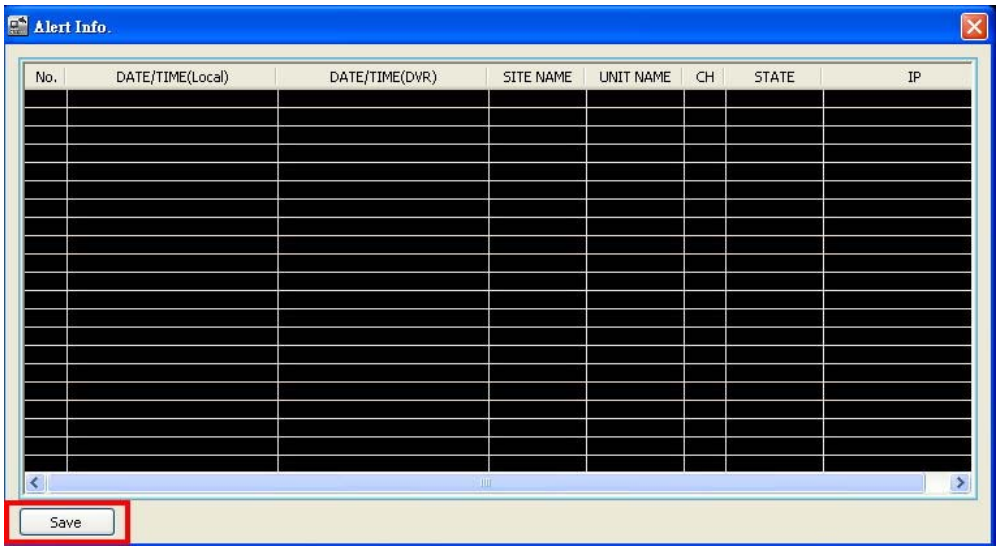

NOTE: The maximum number of items can be kept on the alert list are 1,000. When the list reached 1,000 items, the earliest alert messages will be deleted while the new ones are being saved.

Double click on the Event Messages (Alarm, Motion, or Video Loss) to view the event video in full screen. If the DVR sending the Event Messages is not currently connected to the CMS, a message box will be displayed. Connect the DVR and the event video will be available.

Icons of alert types, as listed below, will be displayed at bottom-left of the grid.

	Motion		Alarm		Video Loss

NOTE: The Alert function works ONLY within LAN network. (Please refer to the note of the Search function)

NOTE: If the alert event has not yet been added to the database of the DVR, a warning message will be shown to notify the user.

5.5 CMS User

The <CMS User> is for the management of login accounts in the CMS. Users can setup information and privileges of login accounts. The default username and password are: "admin" and "1234".

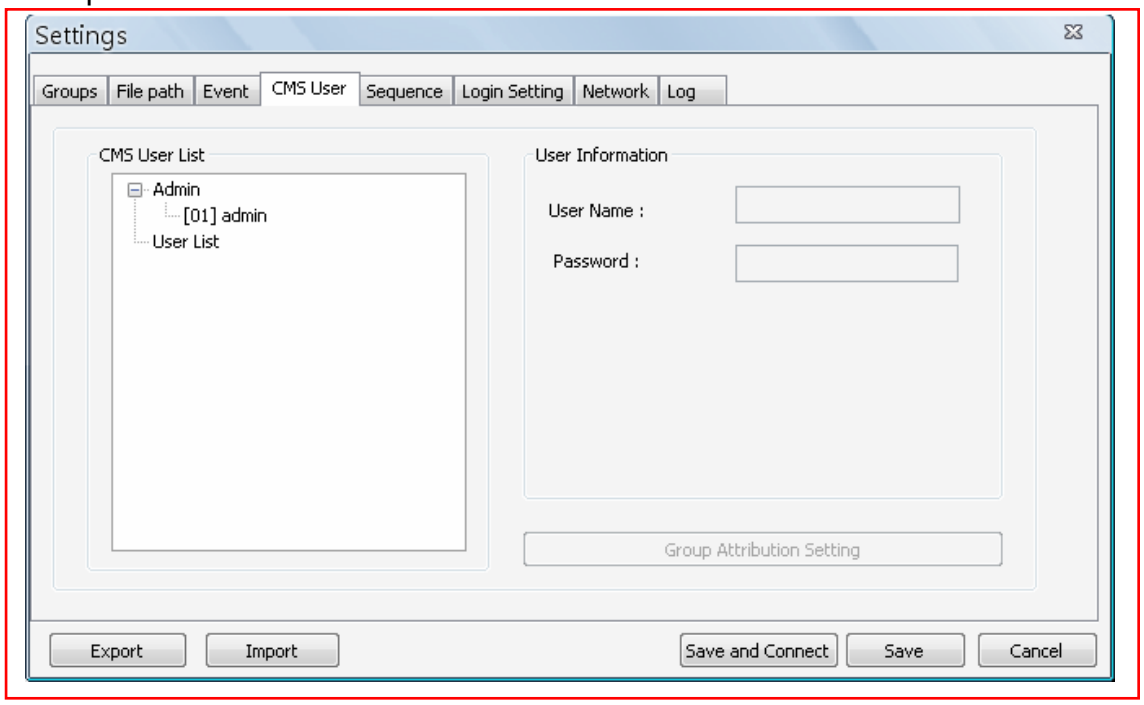

NOTE: Only login accounts under the <Admin> group have the privilege to change the settings in <CMS User>.

To add a user account, users must first add a group. Right click on <User List> and select <Add Group> from the pull-down menu.

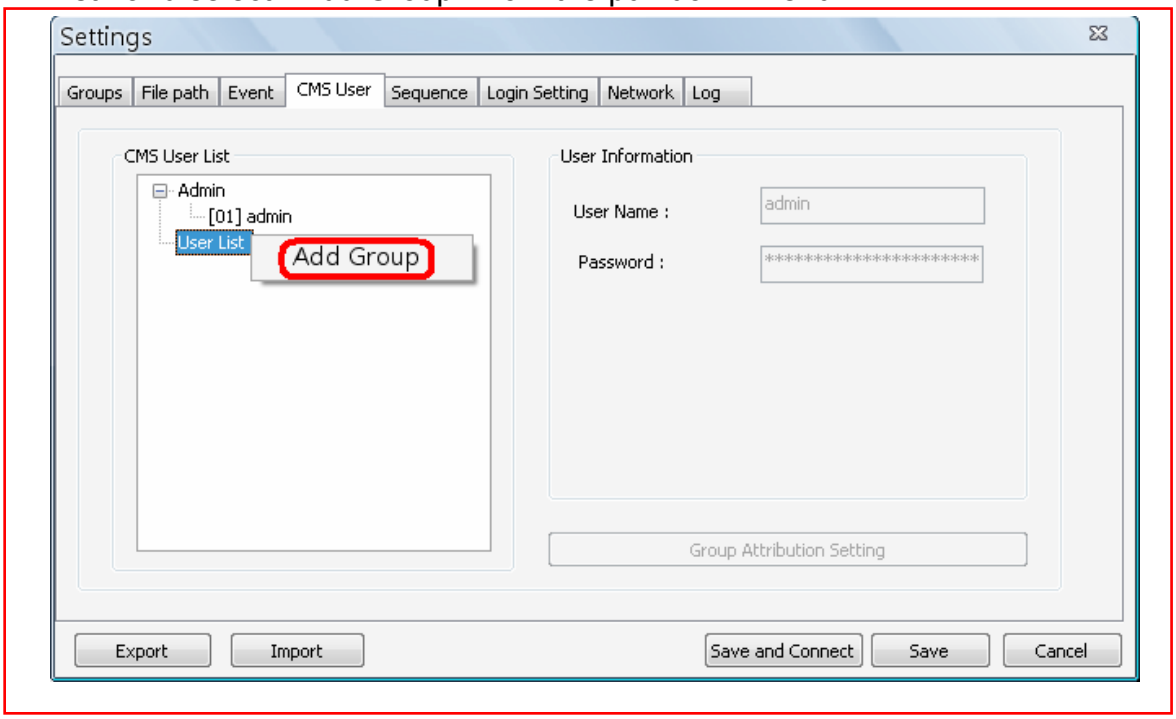

After the group is added, the first user account of the group will also be created. Users **MUST** set the password for this account before users can go to the next step.

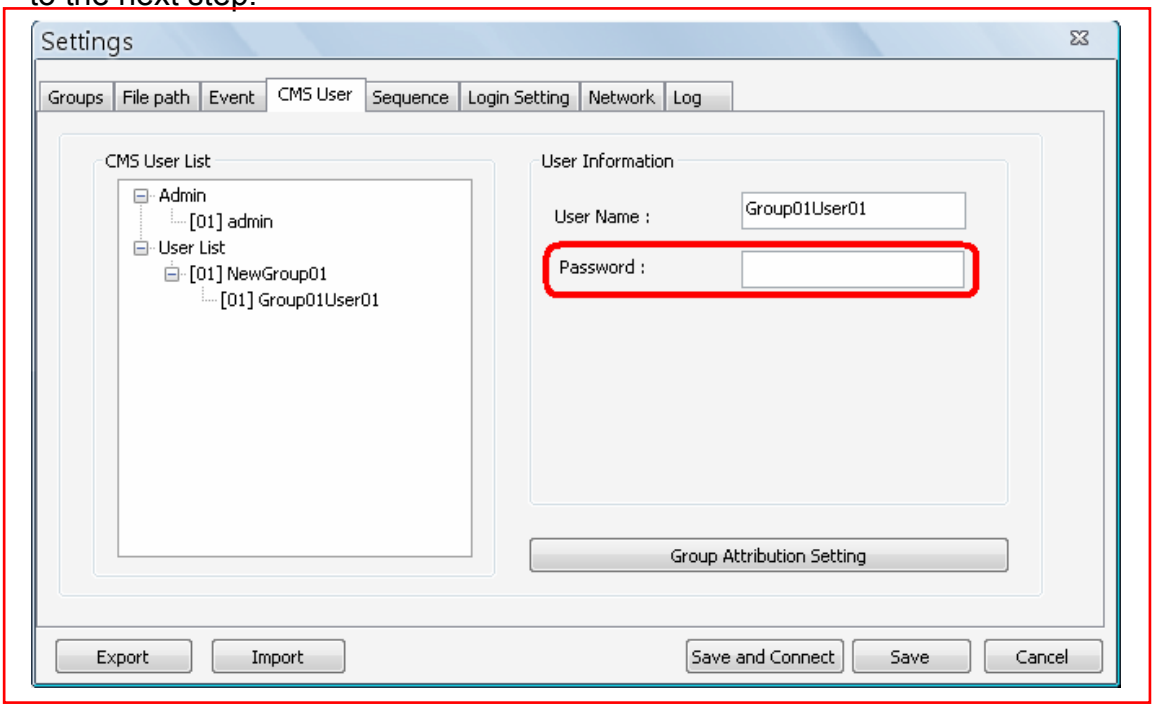

Right click on <NewGroup01> to add a user, remove a group, or rename the group.

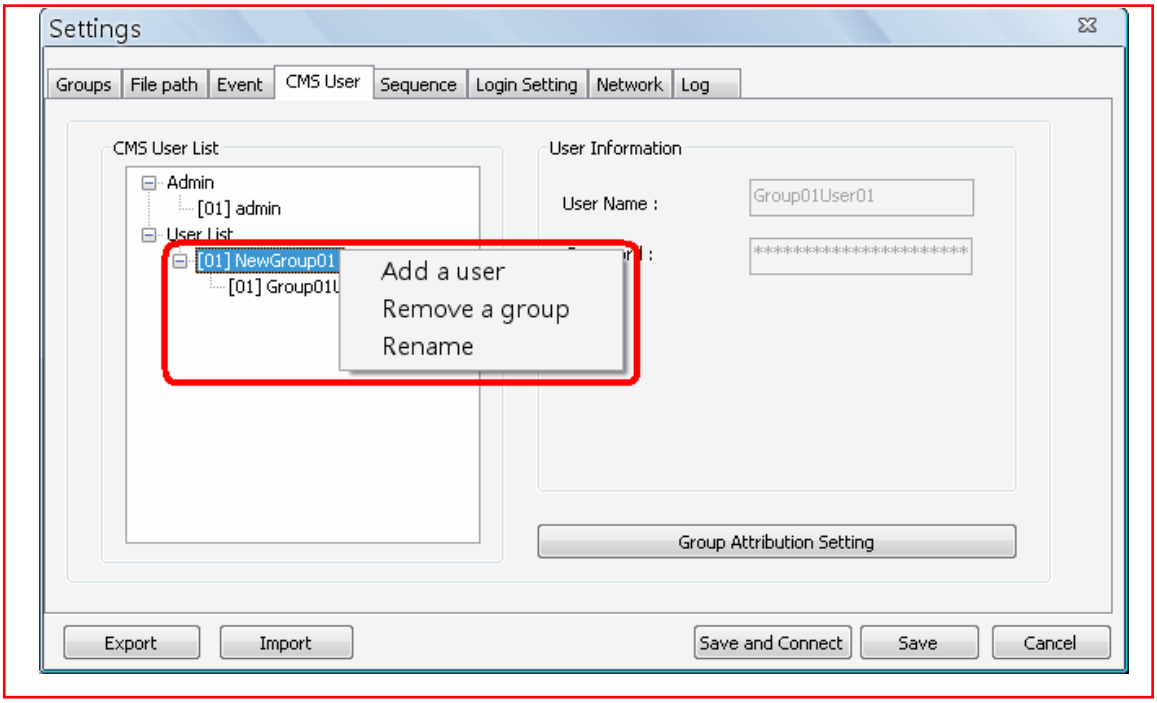

NOTE: The account currently used to login cannot be deleted.

Right Click on <Group01User01> to remove a user or rename the username.

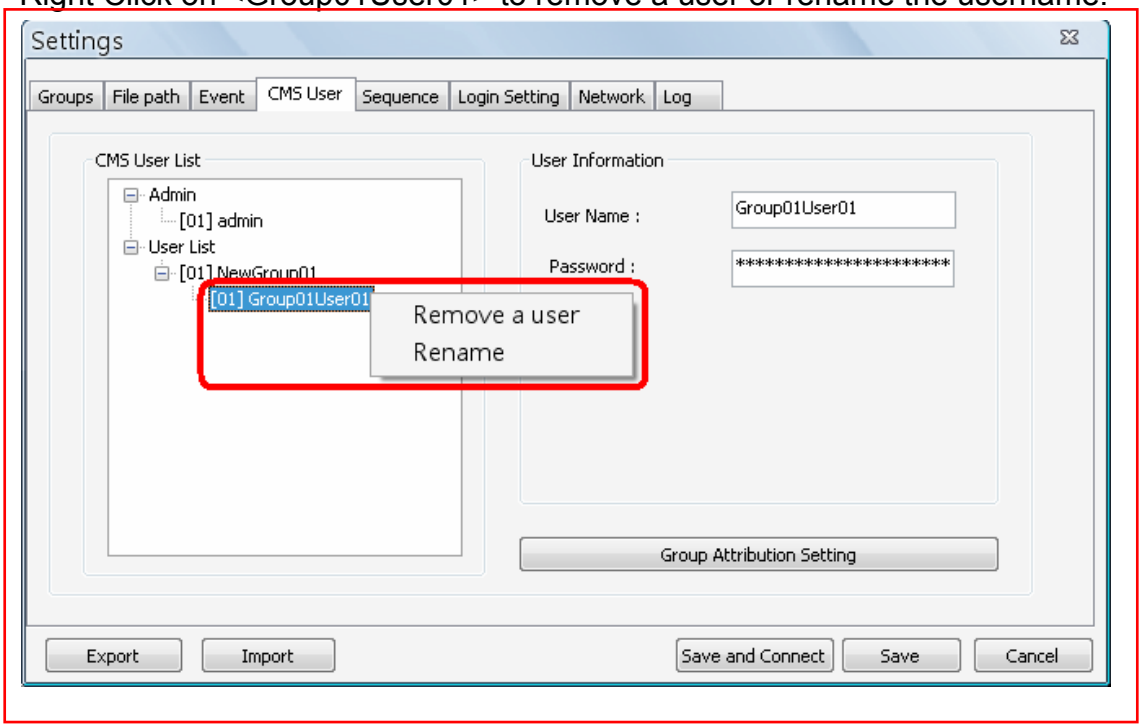

The <Group Attribution Setting> is for setting up the privileges of the selected user. Users can give each user account different privileges by configuring this function.

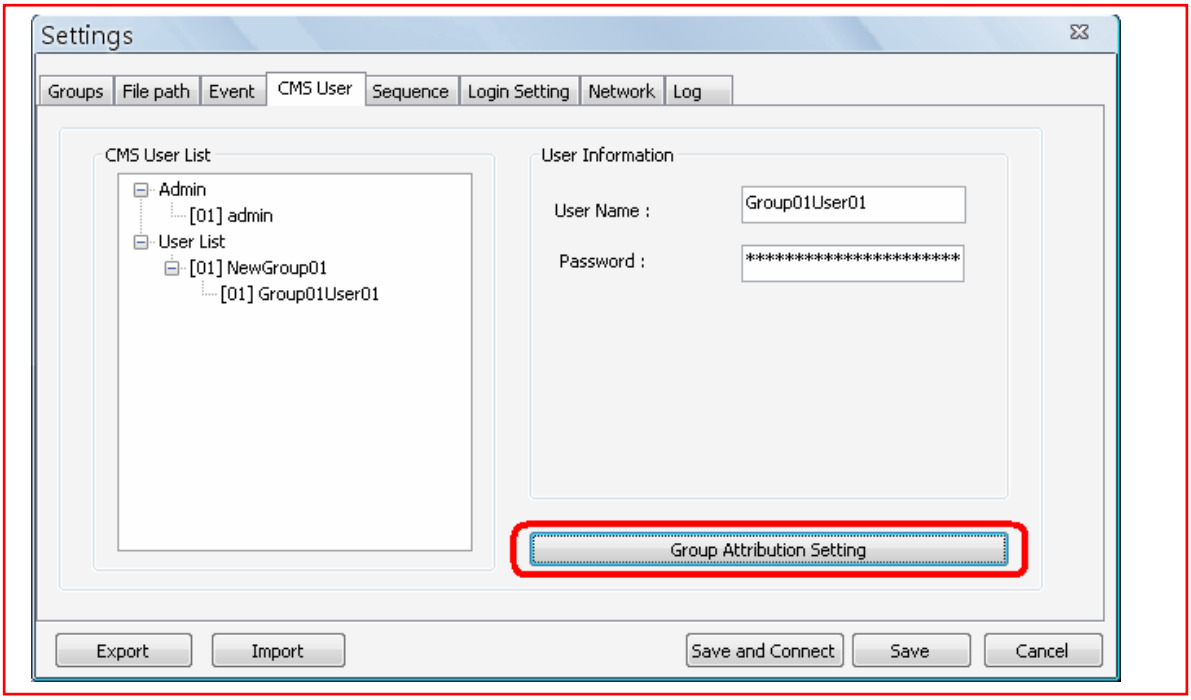

After entering the <Group Attribution Setting>, the following diagram will be shown. Select a user account in <Select CMS Group>, and users can click on the buttons to enable or disable its privileges.

- Blue buttons are CMS menu controls including: Playback, CMS Player, EMAP, Schedule Record, Setting, and Lock.
- Green buttons are site controls including: ReConnect/DisConnect, Record, Configuration, Event Search, and Camera Setting.
- Orange buttons are camera controls including: Sequence, Rename, Dome Setting, Dome Control, Remove, and Sound Notification.

Each camera can be set to enable/disable Live, Play, or Record function individually after clicked on <Advance Setting>. Refer to the following figure for details.

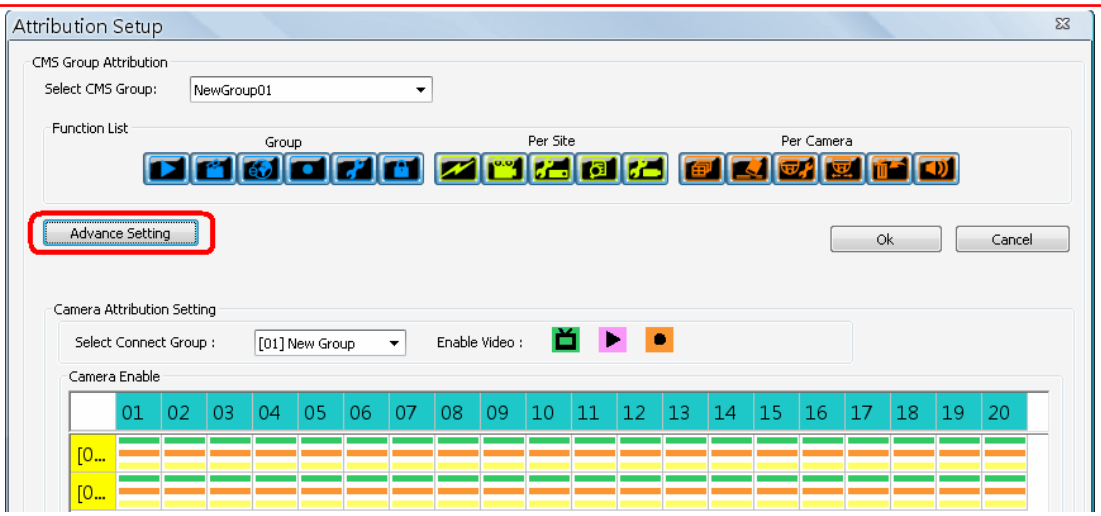

NOTE: The preset is 20 cameras for all sites. The real number of cameras per each site will not be detected.

NOTE: These settings will affect the whole operation of the CMS. Please be very careful while configuring the settings.

Next time when users login, users can choose to enter the CMS either as the admin or the user.

5.6 Sequence

This function is used to set the displaying sequence. Before starting sequence display, users need to add channels to the sequence list. Right click on any channel and select <Add to Sequence> to add, or <Remove from Sequence> to remove. Note that when the channel is added to the sequence, a capital "S" will be shown on the icon.

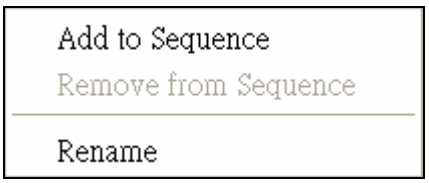

After the channels are added to the sequence, click on the <Setting> icon and choose <Sequence> to setup the sequence. Under the <Sequence Setup> option, users can setup the dwell time (1 to 120 seconds), and split mode (1*1, 2*2, 3*3, 4*4, or 5*5). <Sequence Order> lists the channels that have been added to the list in order. Click <OK> to save the settings.

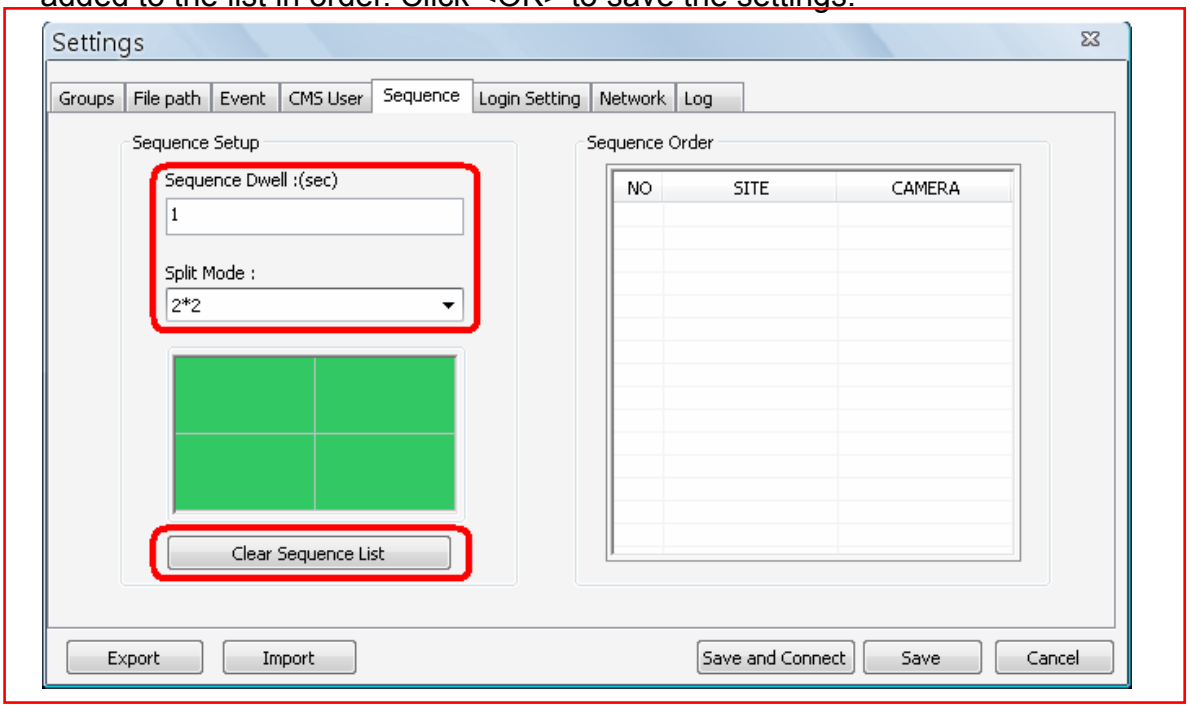

Click <Clear Sequence List> to empty the list. A message window will be shown for confirmation.

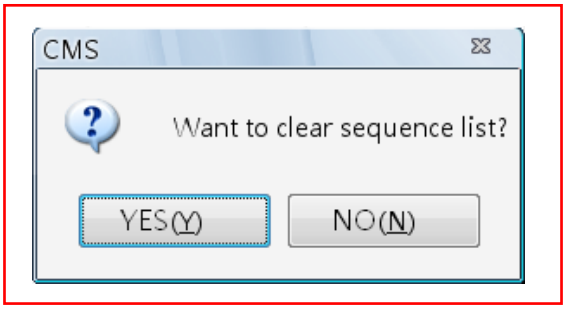

5.7 Login Setting

The user can edit options regarding login settings in this section. Administrator username and password is required to edit the setting.

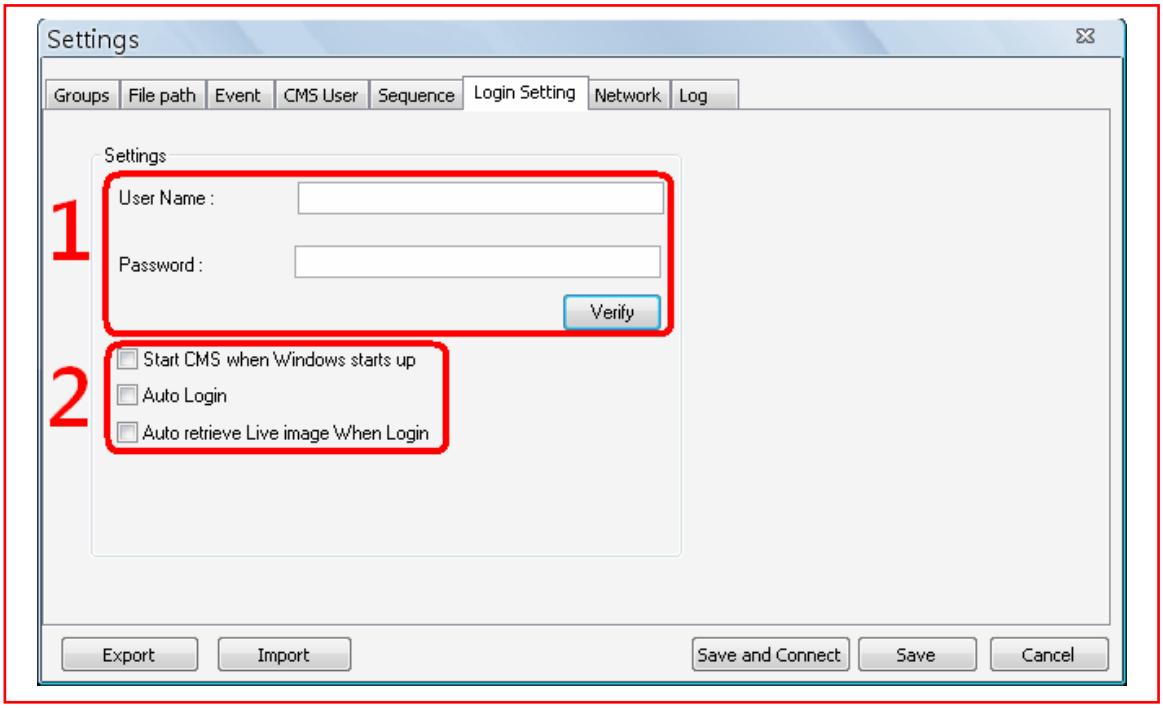

As shown in the above picture, the box marked "1" is where the user can enter a set of username and password to be used for auto login. The "Verify" button can help the user to check if the username and password are correct. The following messages boxes will show to inform the result of verification.

Correct

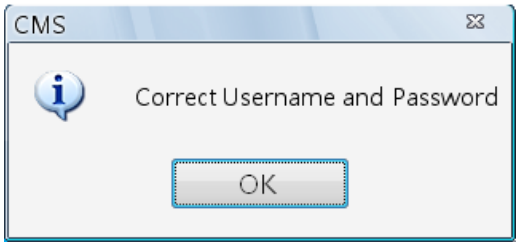

Wrong

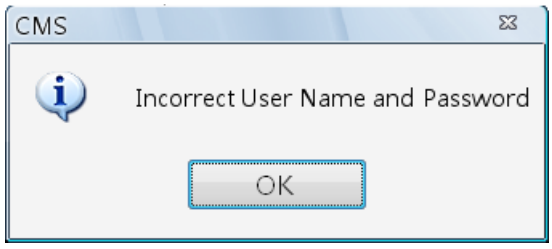

The box marked "2" contains the options regarding automatic actions. Clicking the first option "Start CMS when Windows starts up" to request the computer to open CMS in the mean time when the system startup. Note that the other two options "Auto Login" and "Auto retrieve Live image When Login" will be checked at the same time. Nonetheless, it is still the user's choice to determine the favorite setting.

The following message will be shown when the CMS is auto opening after the system started up. Click "Cancel" can terminate opening the CMS.

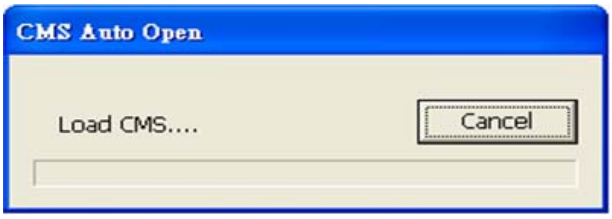

Click the second option "Auto Login" to automatically login when the CMS starts. Remember to enter and verify username and password in box 1.

Click the third option "Auto retrieve Live image When Login" to automatically connect to the sites in the start group when the CMS starts. Detection of internet connection will be performed before hand and the following message will be displayed. Click <Stop> to terminate the detection and AutoLive will not be initiated.

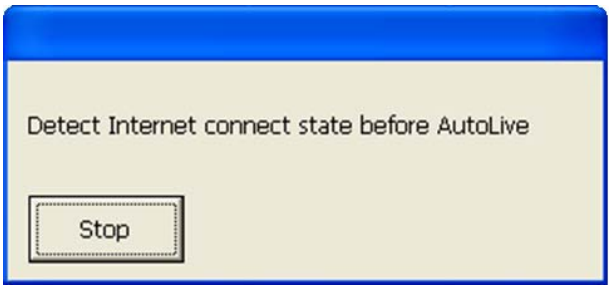

5.8 Network Setting

The CMS provides the option of connection via proxy server for Speco DVRs. Click <Network> tab and the setting items are shown as the following.

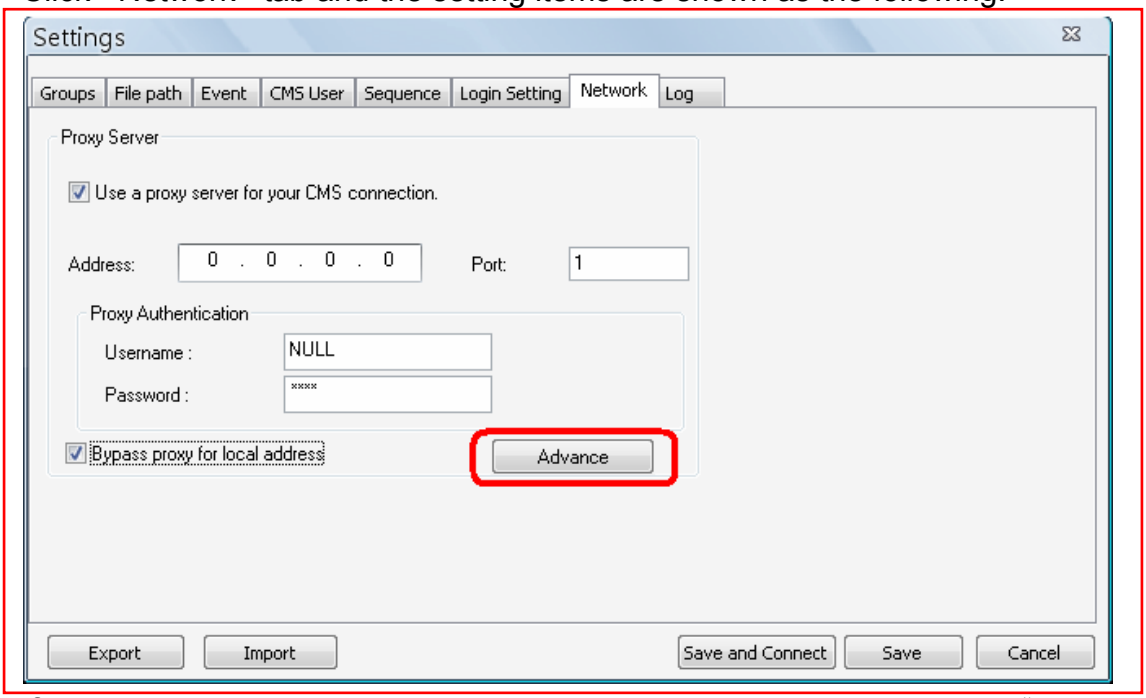

If users wish to create the connection via a proxy server, check the box "Use a proxy server for your CMS connection." Then enter the IP address and port of the proxy server. Enter username and password if authentication is required.

NOTE: The CMS supports the most common authentication keys "Digest" and "Basic". The authentication will be automatically detected and performed.

Check the box "Bypass proxy for local address" to disable connection via the proxy server for local LAN network.

The <Advance> button allows the user to edit an exception list where addresses in the list will not be connected via the proxy server. The addresses can be subnets. Refer to the picture on the right for an example of the exception list.

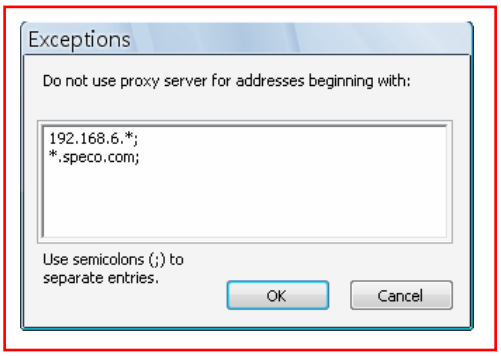

NOTE: All functions of the proxy server are tested with the most common "Squid Proxy Server". Some other proxy servers may not work properly.

5.9 Log Data

The step by step operation of the CMS will be recorded by the CMS log function. Refer to the following picture for data kept in the log file.

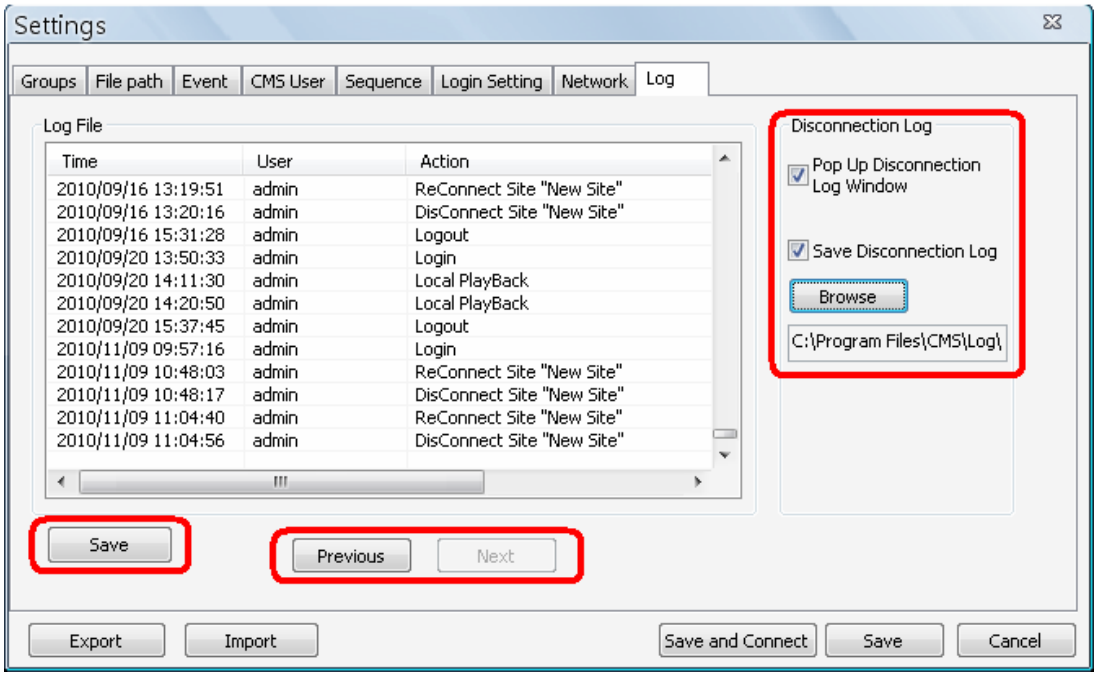

The list will display 1,000 items with latest ones shown at the bottom. The list can store up to 10,000 items in circulation, which means the oldest ones will be deleted when the number of items exceeds 10,000.

Save button:

Click this button to save the log file to a desired destination.

Previous button:

Click this button to show previous 1,000 items.

Next button:

Click this button to show next 1,000 items.

On the right hand side of the window, users can choose whether to show and/or save disconnection logs. Check the box next to "Pup Up Disconnection Log Window" to display disconnection logs. If users wish to save disconnection logs, check the box next to "Save Disconnection Log" and click <Browse> to setup the directory folder and the file name of the disconnection log file.

5.10 Export or Import Settings

The export/import function provides users the option to backup the settings as needed.

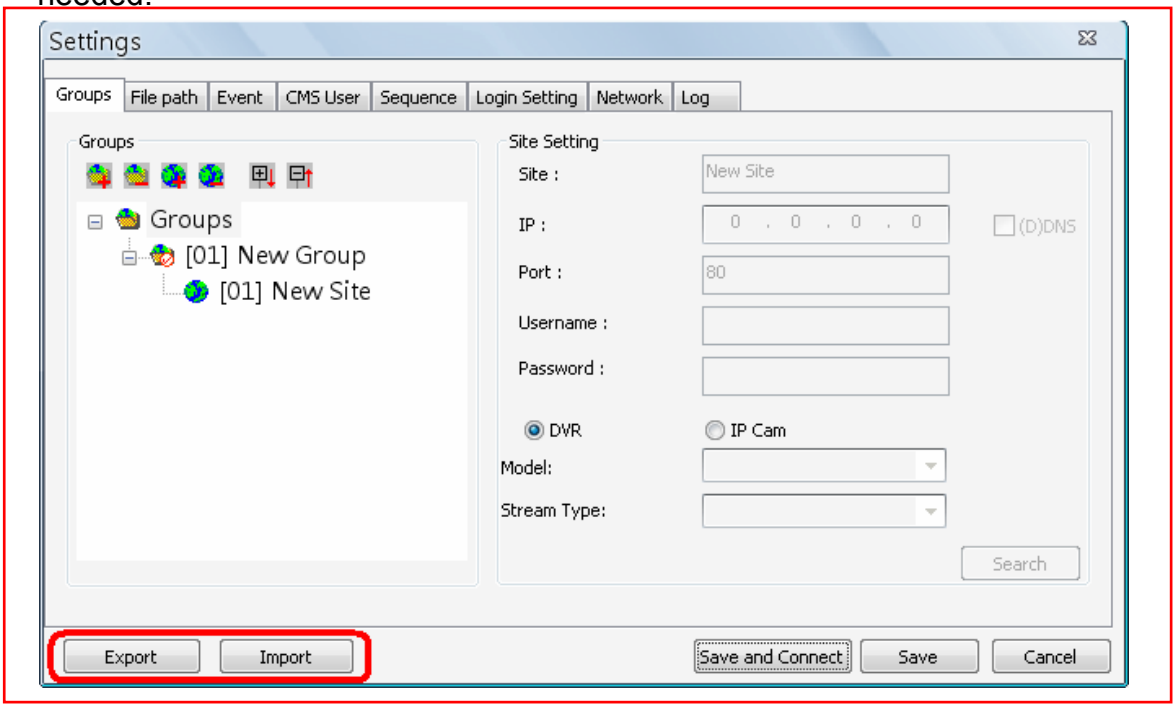

To export the configuration, click <Export> and select a directory to save the *.zip file.

To import a previous saved configuration, click <Import> and find the *.zip file that was previously saved.

NOTE: After a setting is imported and saved, the imported setting will be loaded immediately and the CMS will reconnect to the sites in the live group.

6. Operation of the CMS

There can be at most **2** CMS instances opened simultaneously. If the PC is connected to two monitors, then the PC can open up to 2 CMS instances at the same time on the 2 monitors respectively. However the processor and RAM of the PC will limit the number of CMS instances as well. Note that all monitors have to be set to the same resolution. The CMS supports high resolution 2048x1536.

CMS multiple instances limitation according to the PC:

Dual Core or Hyper-Threading	RAM ≥ 512MB	Open 1 CMS
	RAM ≥ 1GB	Open up to 2 CMS
Single Core and Frequency > 2.0GHz	RAM ≥ 512MB	Open 1 CMS
	RAM ≥ 1GB	Open up to 2 CMS
Single Core and Frequency ≤ 2.0GHz	RAM ≥ 512MB	Open 1 CMS

NOTE: It is recommended to keep the connected channels within 512 channels if multiple CMS instances are opened.

Network Connection Detection

CMS will auto detect network connection status. If CMS lost network connection, the following error message will be displayed.

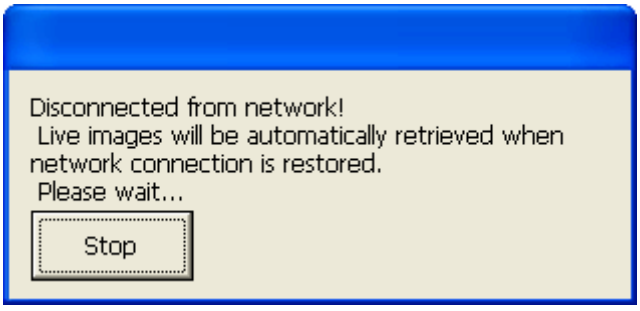
Disconnected from network!
Live images will be automatically retrieved when network connection is restored.
Please wait...
Stop

When CMS detected the restore of network connection, the error message will disappear. Click on <Stop> to cancel this function.

6.1 View Live Image / Assign Camera

The user can view live video or connect to the connected DVR using the live button. Click on the <Live> button to see the live view.

Connect/Reconnect/Disconnect the Sites

If the connection between the CMS and the connected DVR has been interrupted, users can reconnect to it by right clicking on the **Site**, and select <ReConnect> from the pull-down menu. users can also disconnect specific sites by selecting <DisConnect> from the pull-down menu.

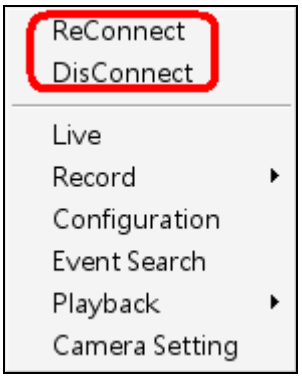

Auto Detection of Disconnected Sites:

The CMS will automatically detect if any sites that are connected at the beginning are disconnected for some reason later on in every 3 minutes. A list will be shown (as on the right) when there are sites detected to be disconnected.

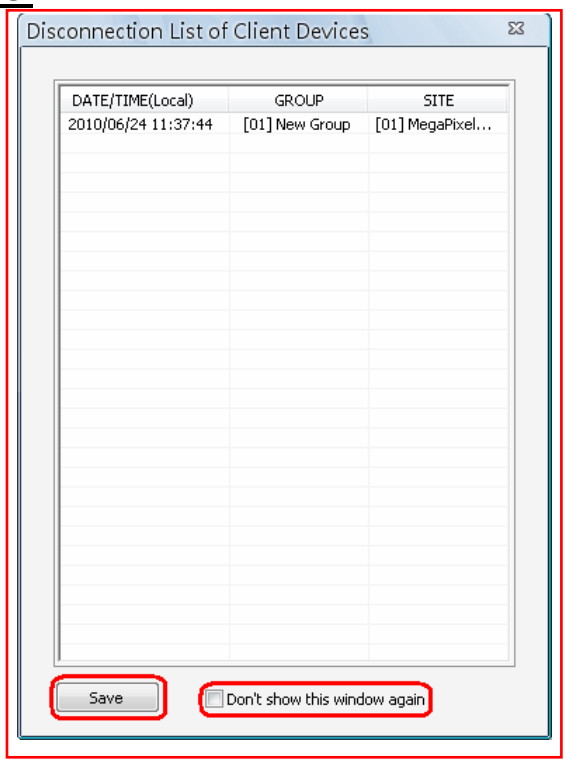

The list can be saved as a TXT file by clicking on <SAVE> at bottom left.

Check the box to disable pop up of the disconnection list. To enable it again, click on the <Setting> icon and go to the <Log> tab.

NOTE: Besides auto-reconnect, a progress bar will be displayed as below. The connecting process will take at most 30 seconds.

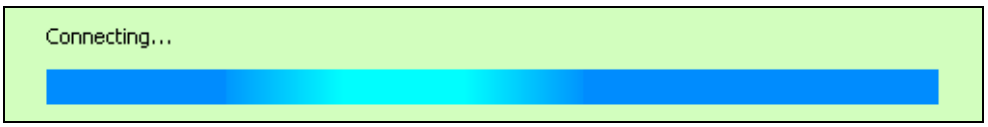

Auto-Reconnect of Specific Disconnected Sites:

The CMS will automatically reconnect to specific disconnected sites every 7 minutes. Refer to the following table for all cases.

Situation	Auto-Reconnect
Sites that are not connected at the beginning:	Yes
Sites that are disconnected manually	No
Sites that are connected at the beginning but disconnected for some reason later on	Yes

Displaying Color of Camera Titles

There are three different displaying colors for camera titles, Red, White, and Green. The following chart shows the meaning of three different colors.

Red	The connected site is a DVR currently recording.
White	1. The connected site is a DVR **NOT** recording. 2. The connected site is an IP Camera or a Video Server.
Green	CMS is remotely playing back videos from connected sites.

Assign a Channel/Site to Certain Window(s):

The CMS allows users to assign any channel/site in the site tree to any grid of the CMS main window. Follow steps below to complete assignment.

Step 1: Click and hold the channel/site users want.

Step 2: Drag and drop it onto the window that users want to assign in.

Resort/Remove Display Window Grids:

Right click on any channel and select <Re-sort> to rearrange camera images of connected sites in order, up to 512 channels.

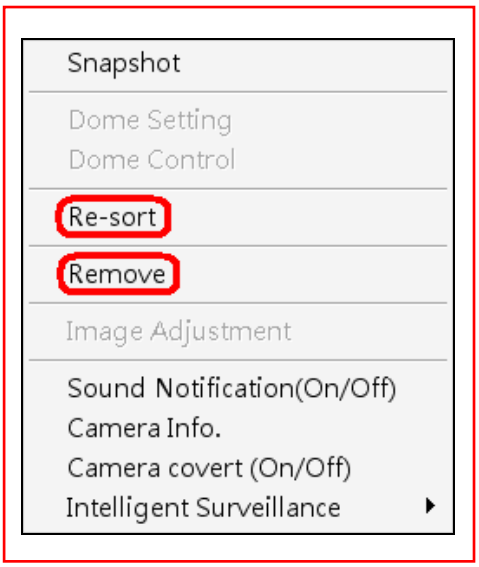

Alternatively, users can also remove any channel by right clicking on the grid and select <Remove>. Or users can select any grid and press <Delete> key on the keyboard to remove the channel.

Note that clicking <Re-sort> will restore the removed channels, or users can add the channels back to any grid via drag and drop.

NOTE: These functions are also available in the CMS Player window BUT not accessible in sequence mode.

Save Layout Files:

The layout arrangement can be individually memorized for each connected group. Also, the CMS will keep the layout arrangement when it's closed and restore the same layout when it's opened again.

Each login account can save it's own layout files. Right click on any mode icons and the pull-down menu will be shown, as on the right. After selected <Layout file> the setting window will be displayed, as below:

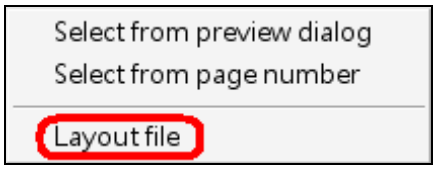

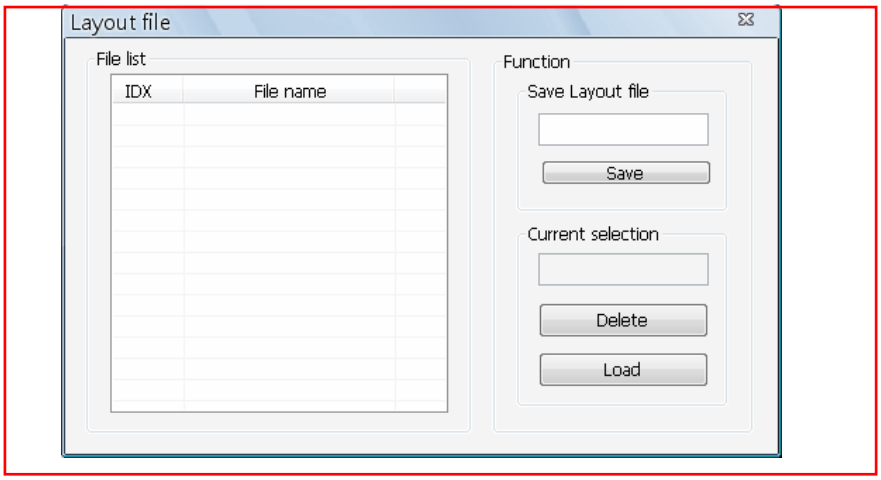

The layout files are for backup or other users' use. Once the file name is entered and clicked <Save>, the new layout file will be shown on the file list. Select a layout file from the list and click <Delete> to delete the file, or press the "Delete" key on the keyboard can also delete the selected file. A message will be shown to confirm the deletion.

To load a layout file, select a file and click <Load>, or double click on the file.

Show Covert Camera Images:

If a camera is set to covert at DVR site, right click on the grid and select <Camera cover (On/OFF)> to un-covert at CMS site. Then video stream will come in, and an icon " " will be shown at bottom-left of the grid. The icon represents that the camera is covert at DVR site.

This function is only available when CMS and DVR site are logged in using accounts with administrator authority.

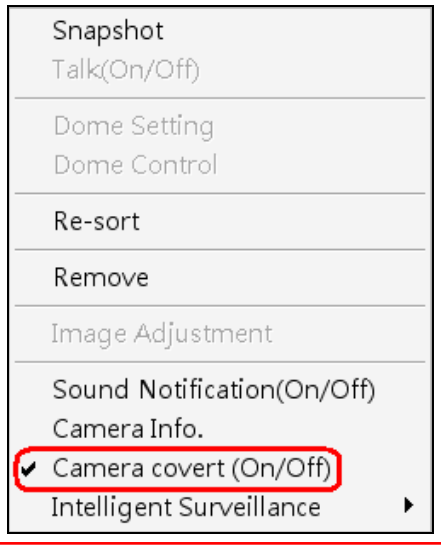

6.2 Camera Setting / Camera Info.

Configure Camera Setting:

Camera setting can be configured by right clicking on a site and select <Camera Setting>.

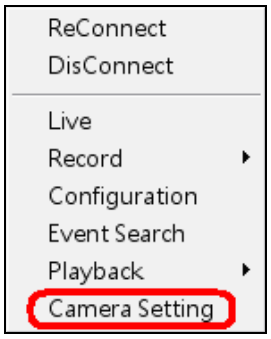

Camera viewing setting enables the user to set the display of *Site Name*, *Channel Name*, or *Time* on the top-left corner of the image.

Camera sound notification enables preset sound file to be played when an alert event occurs. It can be set via Site Base or Channel Base:

Setting via Channel Base:

Select <Channel Base> from the menu and click <Load> to select a sound file. Then click <OK> to save the setting. Next right click on a channel grid to apply the sound setting by selecting <Sound Notification(On/Off)> from the pull-down menu. Note a message window will arise if sound file is not selected yet.

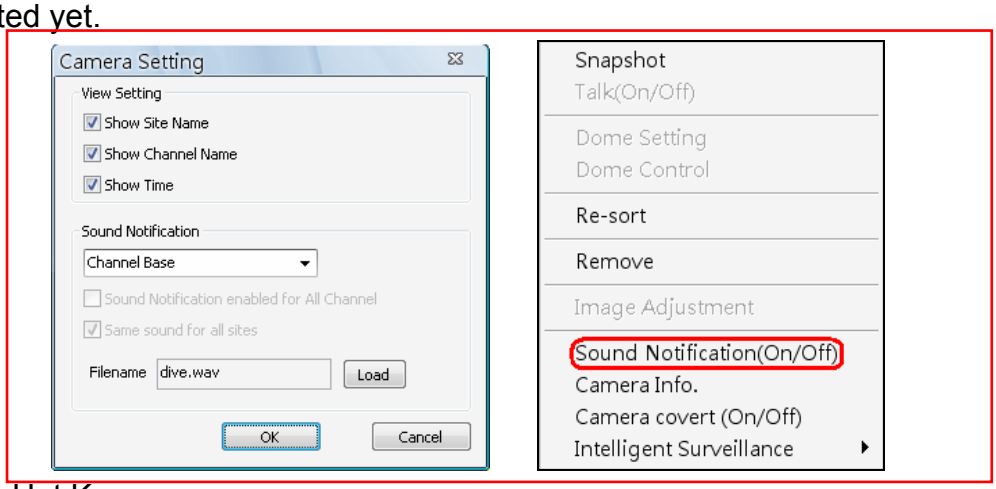

Quick Hot Key:

Click a channel grid and press the following keys:

- Ctrl + n: Sound Notification ON
- Ctrl + f: Sound Notification OFF

NOTE: The sound files selected will be saved in CMS folder \Setting\SoundNotification\.

NOTE: On the top-left of the grid will show [SN] to indicate sound notification is turned on.

Setting via Site Base:

Select <Site Base> from the menu and check the option <Sound Notification enabled for All Channel> and/or <Same sound for all sites> as needed. Click <Load> to select a sound file. Then click <OK> to save the setting. The sites have the option <Same sound for all sites> checked will play the same sound, and the latest set sound will be played.

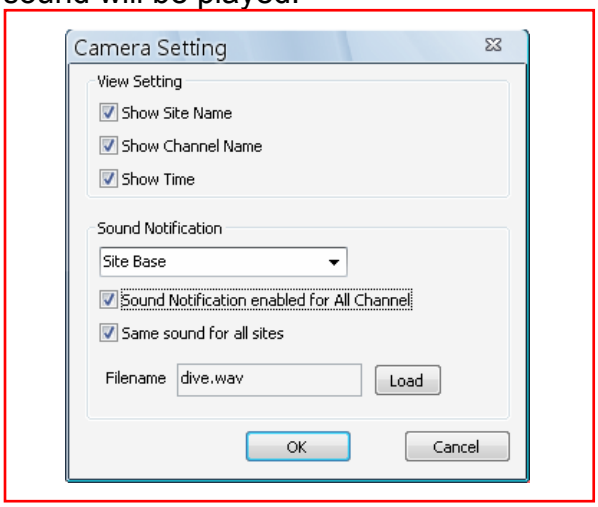

Quick Hot Key:

1. Click a channel grid and press the following keys:
   - Ctrl + Alt + n: Sound Notification ON for all sites
   - Ctrl + Alt + f: Sound Notification OFF for all sites
2. Click a site in the Site Tree and press the following keys:
   - Ctrl + Alt + n: Sound Notification ON for the selected sites
   - Ctrl + Alt + f: Sound Notification OFF for the selected sites

View Camera Info:

The Camera Info can be viewed both in CMS and CMS Player. Right click on any channel grid and select <Camera Info.> from the pull-down menu to view the information. Refer to the following for examples:

Camera Info of CMS

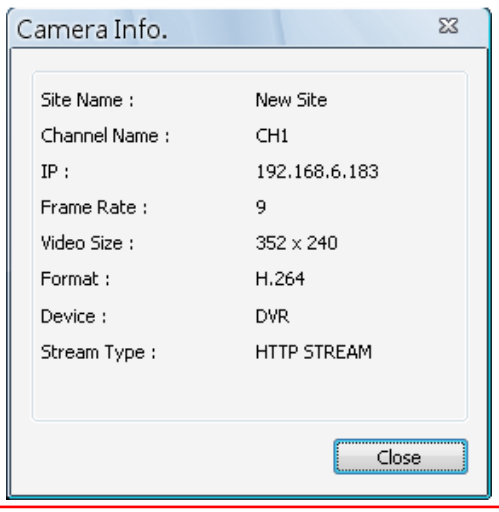

Camera Info of CMS Player

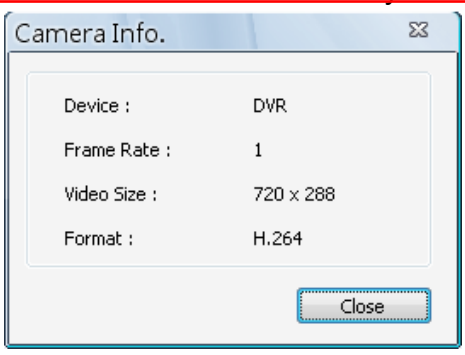

6.3 Display Mode

The available display modes are single channel, 2X2, 3X3, 4X4, 5X5, 6X6, 7X7, and 8X8.

There are two arrow buttons at the left and right hand sides of the screen, as shown below. Click on the left arrow button to display images of the previous page. On the other hand, click on the right arrow button to display images of the next page.

To view in multiple-window mode, right click on the desired icon and a menu will be display as on the right. The selections are described as the following.

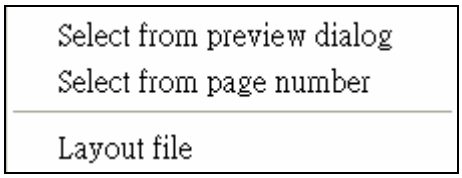

Note that details of <Layout file> are explained in section ***View Live Image / Assign Camera***.

Select from preview dialog:

Choose this option and the picture as below will be shown. When the mouse pointed to any item, the preview display will be shown on the right. Double click on any item to display it on the viewing area.

Select from page number:

Choose this option and the picture as on the right will be shown. Select any page number to display the chosen page on the viewing area. Since the maximum channel connection is 512ch, the choices of page number for 2*2 will be from 1 to 128. A control icon <X> is provided to exit without selection.

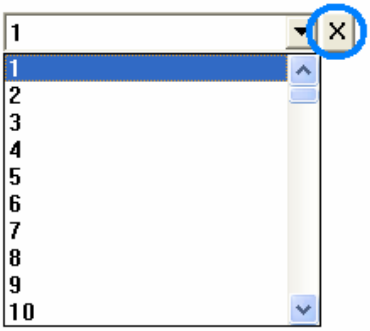

6.4 Zoom In/Out Control via Mouse

Both in CMS and CMS Player, zoom in/out can be easily control via mouse scroll wheel. Either in CMS or CMS Player, click on any grid that users wish to zoom in viewing area. Move the scroll wheel away from users to zoom in and the screen will show like the following picture.

On the upper left-hand corner will show zoom-in multiple. The maximum multiple is X7. Also on the lower right-hand corner will show the position of current viewing area, shown as an inner white rectangle, comparing with the original screen, shown as an outer rectangle frame.

In addition, the viewing area can be dragged and moved by left clicking and holding the mouse while moving. On a zoomed-in screen, the mouse pointer will change to and when the mouse is clicked the pointer will become to indicate that the image is dragged.

NOTE: This function is not available in Dome Camera Control mode. Scrolling the wheel of the mouse will zoom in/out the camera lens of the dome camera.

NOTE: This function will use a lot of CPU resources. It is recommended not to open too many programs at the same time to avoid crash of CPU.

6.5 Sequence Display

To start displaying the sequence list, click on the <Sequence> icon to start the sequence. The color of the icon will change to red color when the sequence mode starts. The initial display mode will be what was set in sequence setup (1*1, 2*2, 3*3, 4*4 or 5*5).

Another way to start displaying the sequence list is by right clicking on the sequence icon and a list will be displayed as shown below. Move the mouse to any item and the preview window will be displayed on the right. This list gives choices to the user to begin displaying the sequence from any item. Double click on the desired item to start sequence mode.

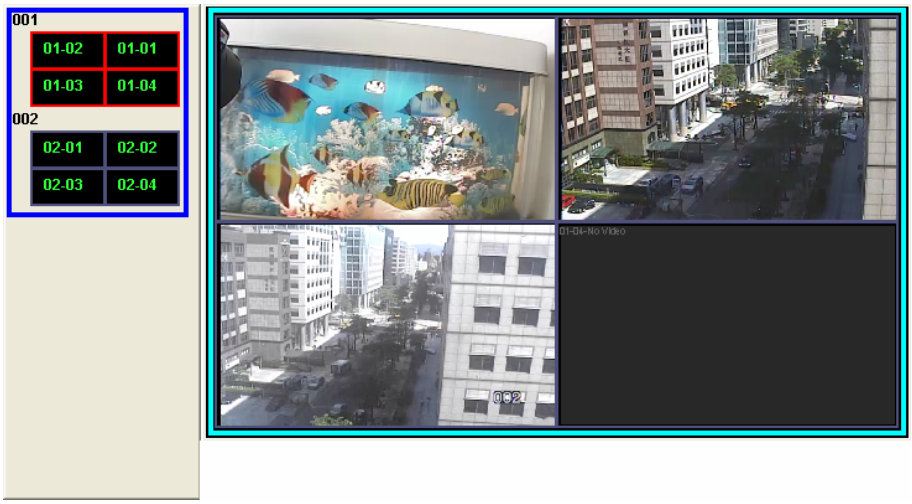

After the sequence is started, users can still change the split mode by clicking on the display mode icons for 2X2, 3X3, 4X4 or 5X5. However, the starting split mode set in <Sequence> will remain the same. Note that icons for 6X6, 7X7 or 8X8 will not be accessible because they are not allowed to be shown in sequence mode.

The following functions are disabled in sequence mode:

1. Right click to see channel menu
2. Zoom In/Out
3. Drag and drop channels or sites to the display grids
4. Remove any channel grids on the display windows

NOTE: If users enabled the <Event Full Screen> and an event is triggered while running the sequence, the CMS will display event full screen. The sequence will not resume until event full screen ends.

Click on the <Sequence> icon or the <Live> icon to exit the sequence mode

6.6 Adjust the Image

Both CMS and CMS player provide image adjustment function. Double click on a channel, then right click on it. Select <Image Adjustment> from the pull-down menu, and the image adjustment window will be displayed. Users can change the brightness, saturation, hue, and contrast of the channel.

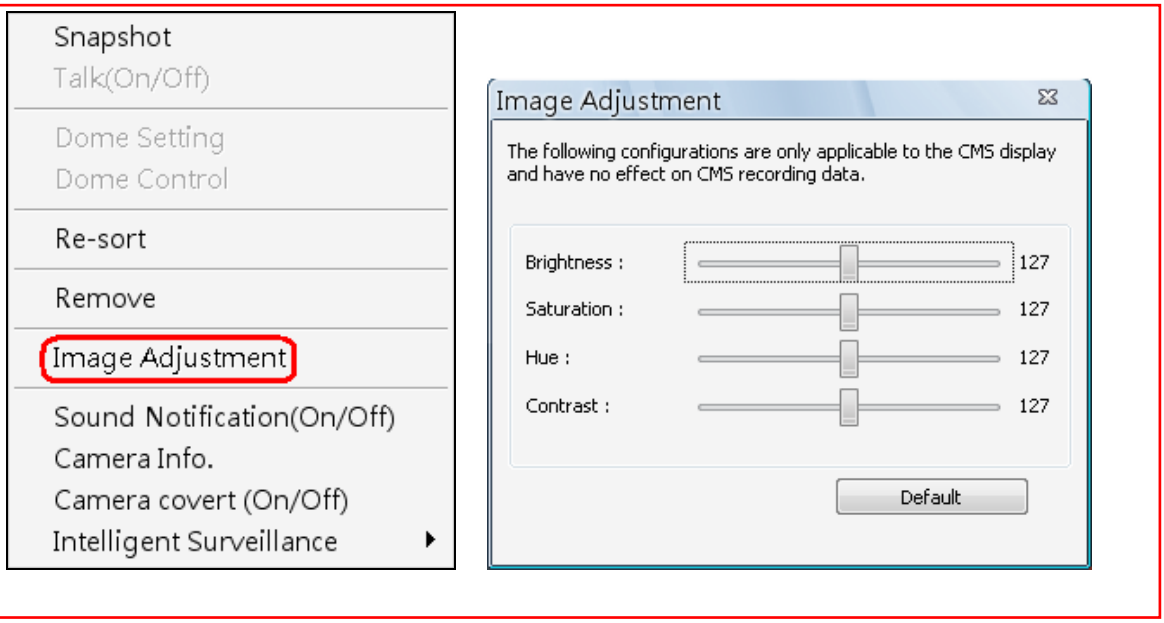

NOTE: The <Image Adjustment> option will only be available when viewing single-channel screen.

Click the <Default> button to reset the value to the original preset.

NOTE: The <Image Adjustment> function has no effect on the recorded video. Whatever changes made to the <Image Adjustment> will not be applied to the recorded video.

6.7 Playback Recorded Video

This function allows the CMS user to retrieve and play videos stored in the connected DVR. Click on the <Playback> icon, the figure below will be displayed.

<Valid Time> indicates that the connected DVR starts recording from a certain period of time and ends at a certain period of time.

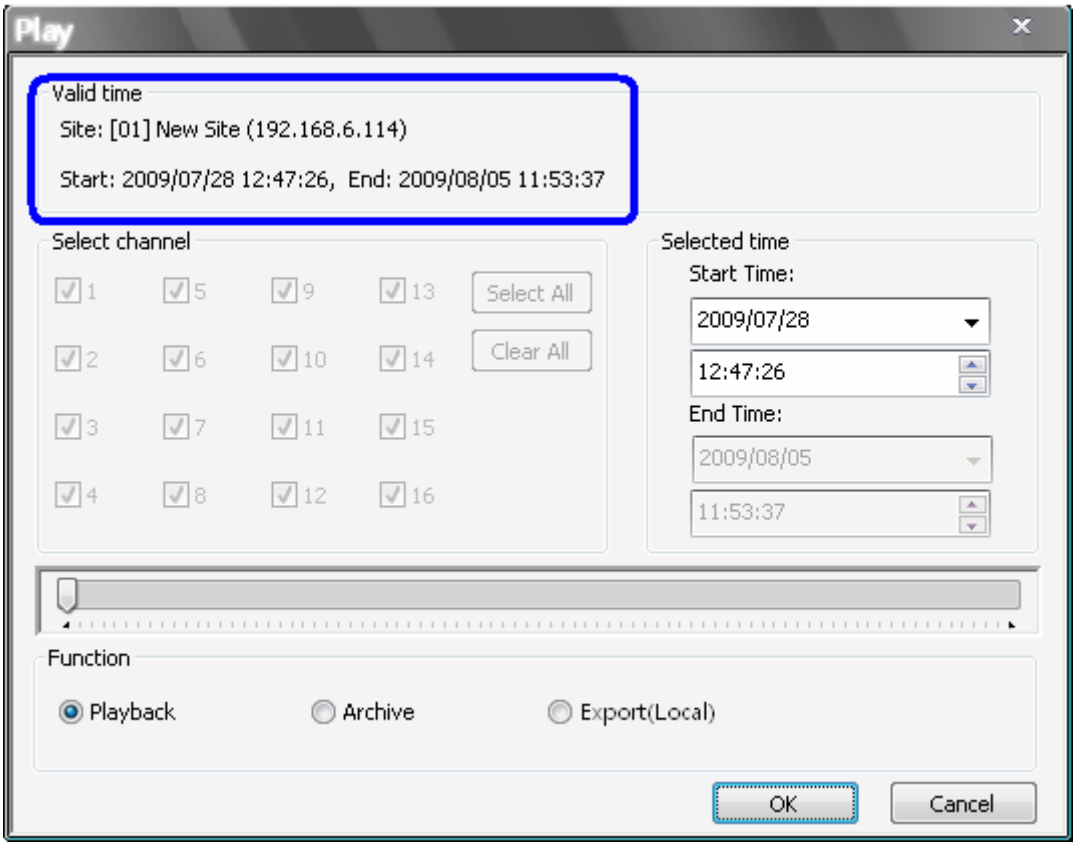

The other way to display the above windwo is to right click on the site in the site tree and select <Playback> → <Remote Playback> from the pull-down menu.

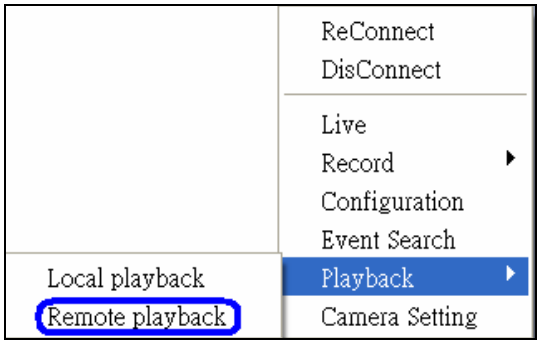

Playback the video stored in HDD of the connected DVR

Follow steps below to playback the video stored in the connected DVR.

Step 1. First select <Playback> in "Function" area.

Step 2. Specify the starting time for playback by setting the <Selected time> or by moving the arrow of the slider bar at the bottom. Then click <OK> to playback the video

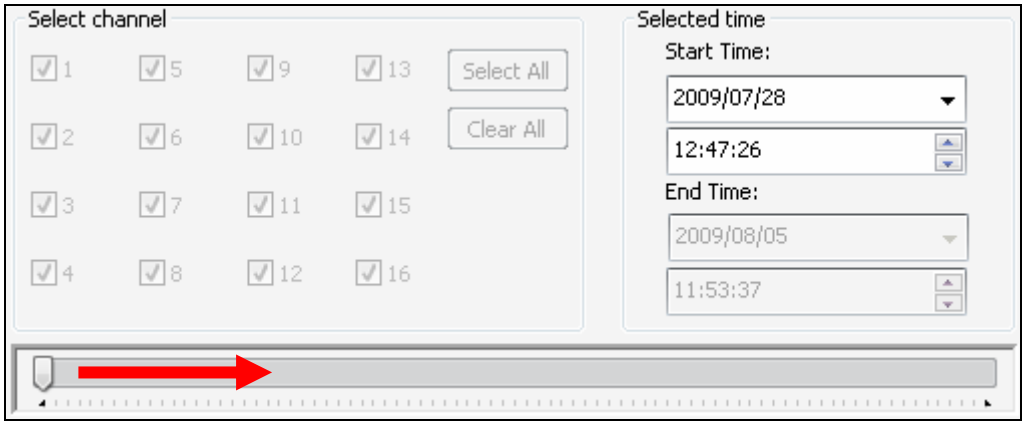

NOTE: The "Select time" and slider bar will show the stop time from last playback, if playback of video is previously accessed.

Save the *.drv files to the local computer

Follow steps below to save the video to the local computer.

Step 1. First select <Archive> in "Function" area. Then "Selected channel" area will be available for users to choose desired channels.

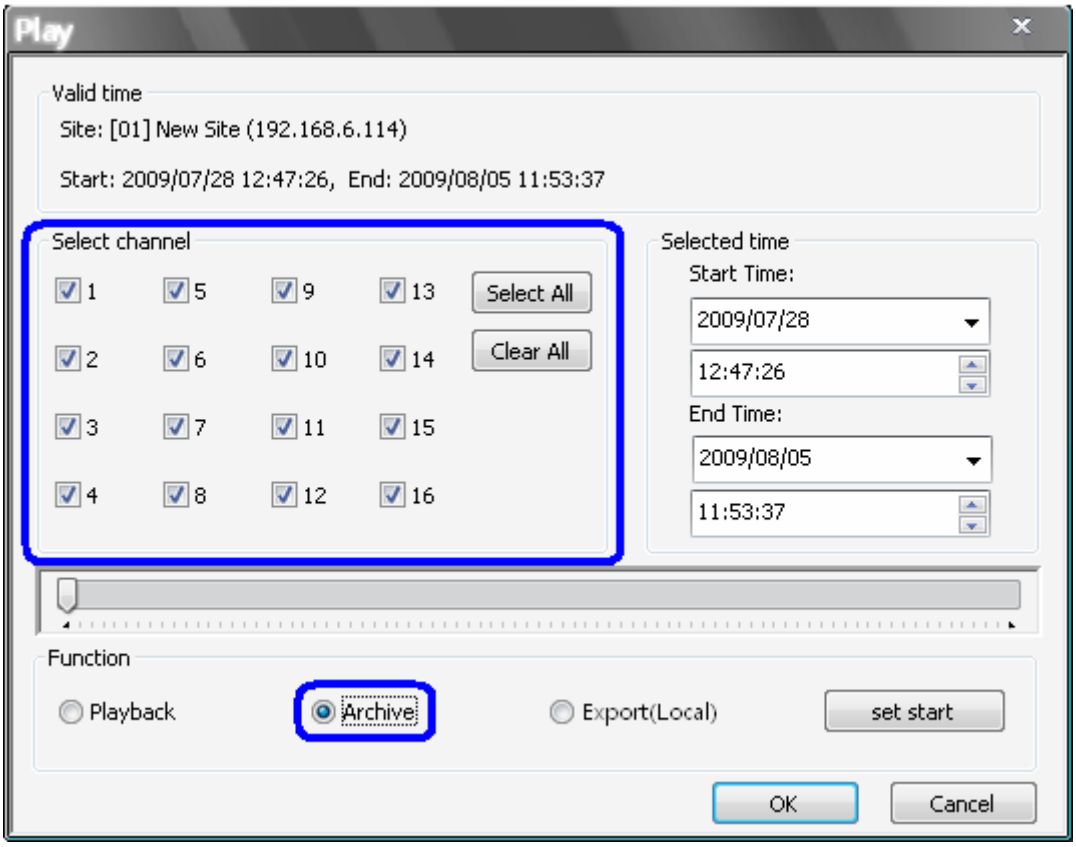

Step 2. Specify the Start Time in "Selected time" area and click <set start> in "Function" area. Then specify the End Time and click <set end>. Alternatively, use the slider bar to select start time and end time. Click <OK> and specify the filename of the DRV file. Then CMS will start to download the video data. Close the <Archive> window to exit. The default archive path is "\CMS\Archive\".

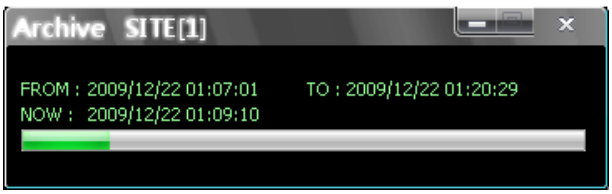

Export video data at the connected DVR site

TL models with software version "2125" or newer can export video data at DVR site through CMS control. Software version is defined at the second column of software serial numbers, for example, 7630.**2125**.0301.0539. As well, TN models with software version "2121" or newer can perform the same function. For TH series, all models can perform this function.

Follow steps below to export video data at the connected DVR site. Note that only the administrator has the authority to perform this function.

Step 1. First select <Export(Local)> in "Function" area.

Step 2. Specify the Start Time (<Set start>) and End Time (<Set end>) and click <OK> to start exporting video data.

Step 3. After the user click on <OK>, the DVR will start to export video data to connected devices. A window will be displayed to show current status.

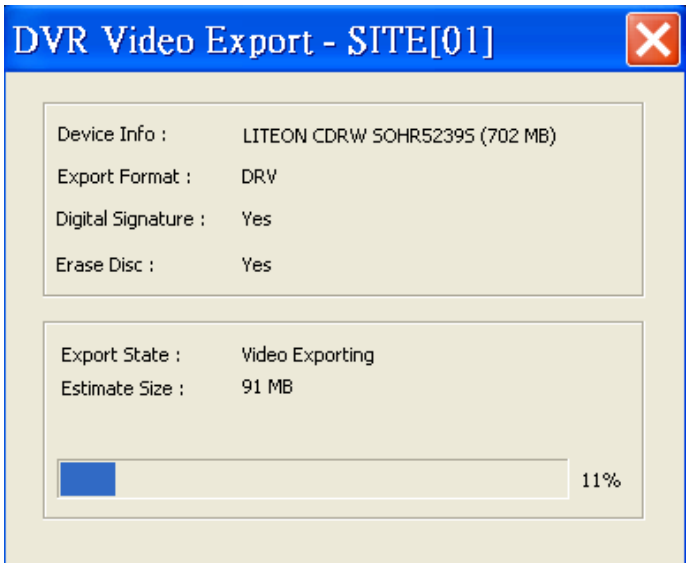
DVR Video Export - SITE[01]
Device Info : LITEON CDRW SOHR5239S (702 MB)
Export Format : DRV
Digital Signature : Yes
Erase Disc : Yes
Export State : Video Exporting
Estimate Size : 91 MB
11%

The <Export State> will show: "Export Module Initializing", "File Collecting", "Signaturing", or "Video Exporting". The status will be updated every 10 seconds.

The DVR will select destination devices by the following order:

1. External DVD±RW
2. External Storage device
3. Internal DVD±RW

Step 4. Some error conditions listed below will interrupt video data exporting:

- When the DVR did not answer for more than 2 minutes, the CMS will assume the connection is disrupted.
- When the available space is less than 10MB, the exporting process will not be started.
- When the size of the "Event" video data is larger than the capacity, the accommodated number of events within the capacity will be calculated and the exporting process will begin.
- When the size of the "Normal" video data is larger than the available space, the recordable length of video data will be calculated and the exporting process will continue.

When the exporting process is completed, a message window will be shown to notify whether the exporting process is successful or failed.

NOTE: The exporting process for different sites can be performed simultaneously.

Playback video stored in the HDD of local computer

If users wish to playback videos that have already been saved to the local computer, launch CMS Player.

NOTE: CMS Player can only be started through CMS. If users try to start up the CMSPlayer.exe, an error message will be displayed.

There are two ways to launch CMS Player. One way is to click on the <CMS Player> icon. Alternatively, right click on a site in the site tree and select <Playback> → <Local Playback>.

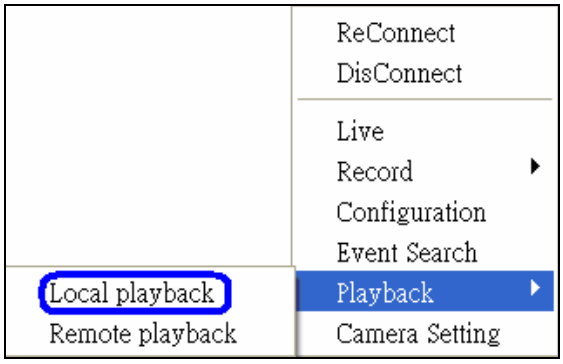

Then CMS Player will be displayed. Click on the <Open Video File> icon as marked below. Alternatively, scroll down the <FILE> menu and select <OPEN VIDEO FILE>.

The "Playback Search" window will be displayed as below. The following steps will guide users to playback designated videos.

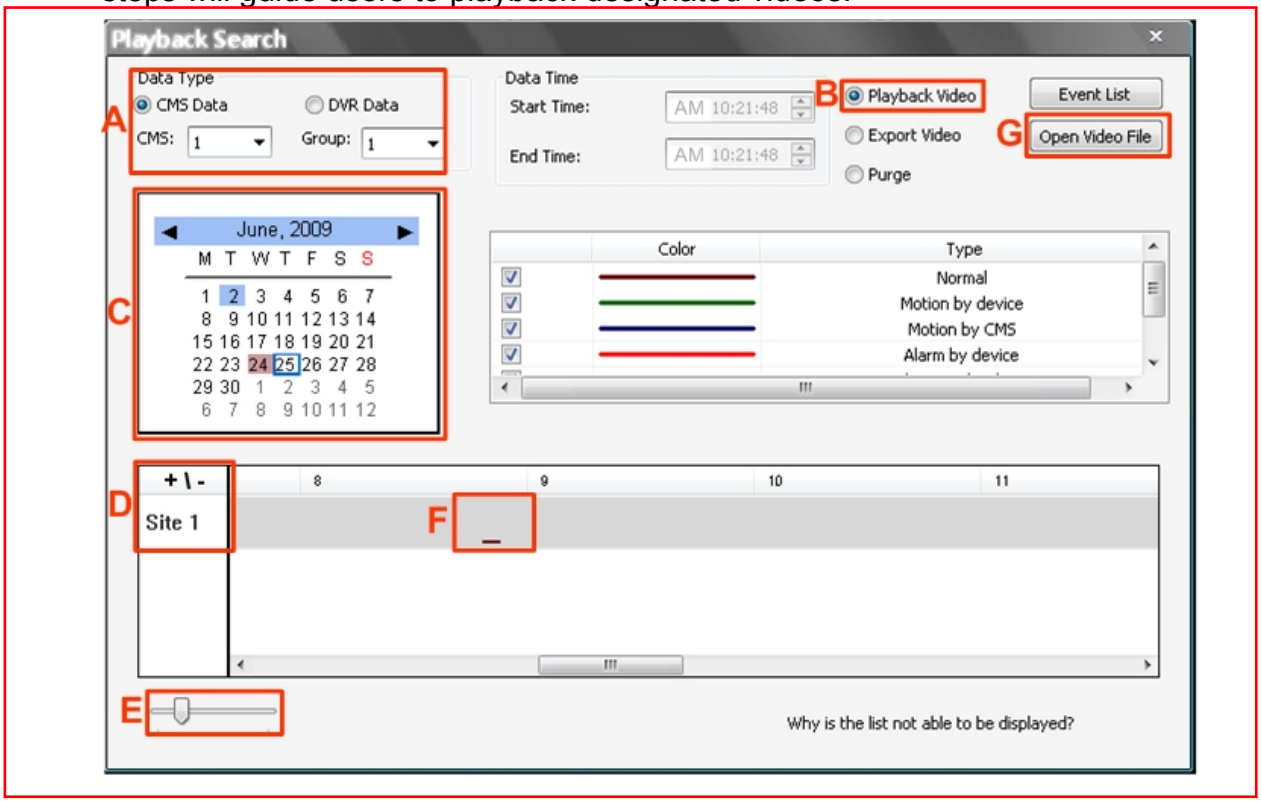

Step A. Select <CMS Data> and choose CMS server & group. Alternatively, select <DVR Data> and allocate a folder containing DVR HDD files.

Step B. Select <Playback Video>.

Step C. Select date of designated videos. Today's date is in blue box, the date with video data is highlighted in brown, and the selected date is highlighted in blue.

Step D. For playback of CMS Data, select sites. Click on <+\-> to select or deselect all sites. The selected site will change to gray color. For playback of DVR Data, there is no need to select sites, since it's just the DVR itself.

Step E. Scroll the slider bar to zoom in/out the displaying time.

Step F. Point the cursor at designated time and double click to start playback the video.

Step G. Click on the <Open Video File> button to search for videos via file list. Users can also convert DRV files to AVI files here. Refer to the next page for instruction of conversion.

NOTE: The recorded video of IP camera can only be played back by CMS player. Some errors might occur if playing back with DVRPlayer.

Convert *.drv files to *.avi files

Click on the <Open Video File> button in the "Playback Search" window, then the "Select a folder" window will be displayed. On the top center of this window, select <Convert To AVI> and double click on the file which users wish to convert. A "Conversion List" window will pop up and the file will be added to the list. The other way to add files to the list is to right click on the file and select <Add To List> or <Add All To List>.

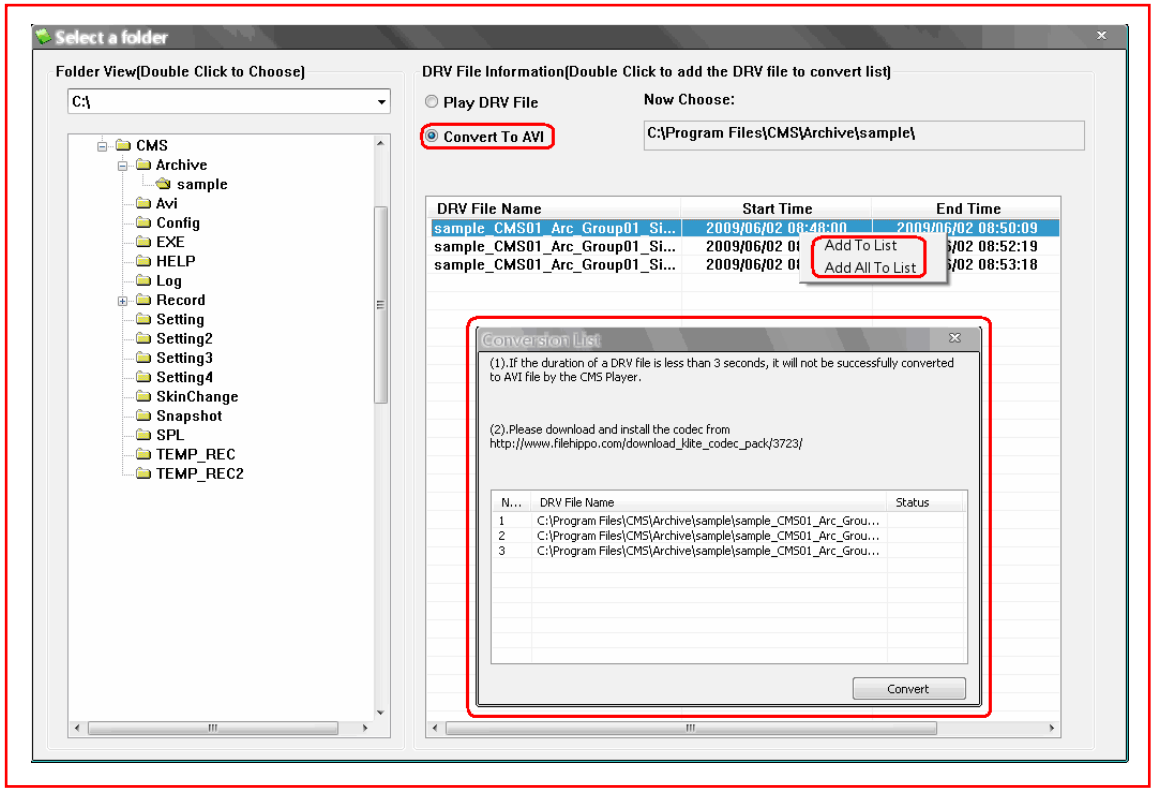

NOTE: The list can contain files from different folders.

The messages shown on the conversion list windows are very important. If the duration of a DRV file is less than 3 seconds, the file will not be successfully converted. In addition, a link is provided for users to download and install video codec in order to playback the converted AVI files.

If users wish to remove any file from the conversion list, right click on the file and select <Remove> or <Remove All> to delete files from the list. Click <Convert> to start conversion of files on the list.

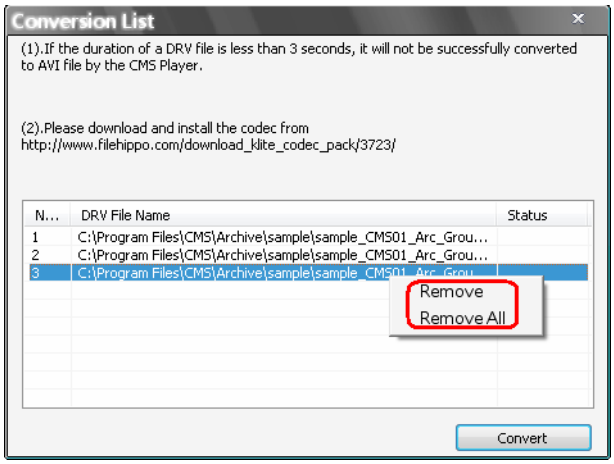
Conversion List
(1).If the duration of a DRV file is less than 3 seconds, it will not be successfully converted to AVI file by the CMS Player.
(2).Please download and install the codec from http://www.filehippo.com/download_klite_codec_pack/3723/
N...
DRV File Name
Status
1 C:\Program Files\CMS\Archive\sample\sample_CMS01_Arc_Grou...
2 C:\Program Files\CMS\Archive\sample\sample_CMS01_Arc_Grou...
3 C:\Program Files\CMS\Archive\sample\sample_CMS01_Arc_Grou
Remove
Remove All
Convert

A small window will be displayed as on the right to show the progress of conversion. If users wish to terminate the conversion, click <STOP> to abort.

If the conversion is aborted, the status column will show "Break Off" for the specific file aborted. If the file failed to be converted, the status column will show "Fail".

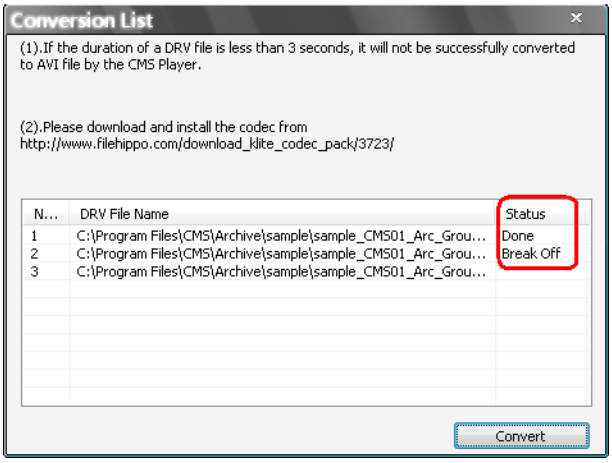
Conversion List
(1).If the duration of a DRV file is less than 3 seconds, it will not be successfully converted to AVI file by the CMS Player.
(2).Please download and install the codec from http://www.filehippo.com/download_klite_codec_pack/3723/
N...
DRV File Name
Status
1 C:\Program Files\CMS\Archive\sample\sample_CMS01_Arc_Grou... Done
2 C:\Program Files\CMS\Archive\sample\sample_CMS01_Arc_Grou... Break Off
3 C:\Program Files\CMS\Archive\sample\sample_CMS01_Arc_Grou...
Convert

If the conversion is completed, the message as on the right will be displayed. The converted files will be stored in the folder specified in file path setting of CMS Player.

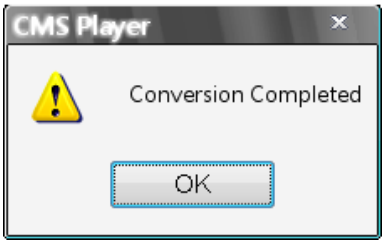

For more information about other CMS Player operations, please refer to the **Appendix A**.

Install required codec to playback converted AVI files

In order to correctly playback converted AVI files, install K-Lite Codec Pack and select codec options as described below.

1. Check <Mu-law, A-law> & <MS ADPCM> under <Other audio formats (ffdshow)>.

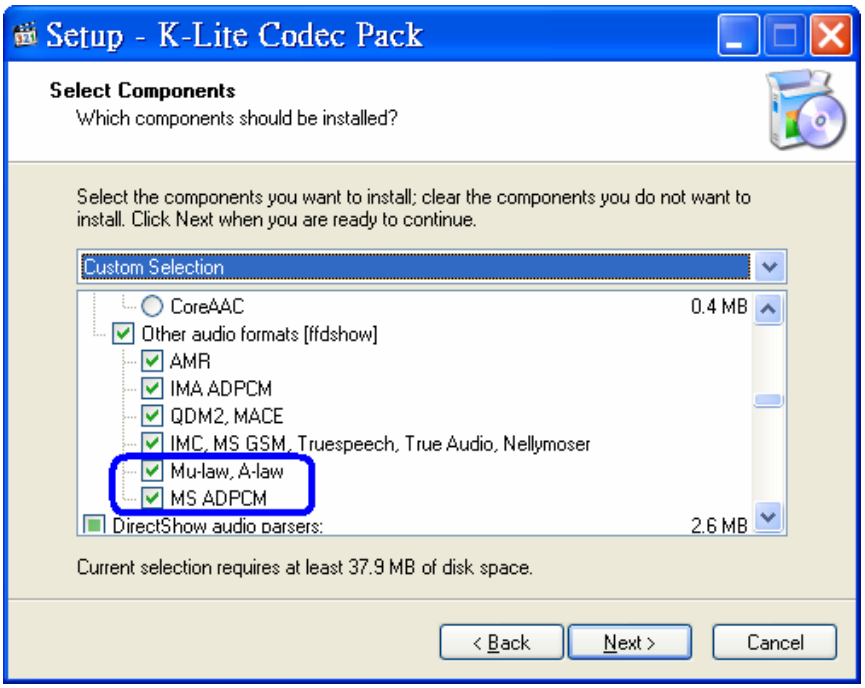
Setup - K-Lite Codec Pack
Select Components
Which components should be installed?
Select the components you want to install; clear the components you do not want to install. Click Next when you are ready to continue.
Custom Selection
CoreAAC 0.4 MB
Other audio formats [ffdshow]
AMR
IMA ADPCM
QDM2, MACE
IMC, MS GSM, Truespeech, True Audio, Nellymoser
Mu-law, A-law
MS ADPCM
DirectShow audio parsers: 2.6 MB
Current selection requires at least 37.9 MB of disk space.
< Back
Next >
Cancel

2. Check <Microsoft> for <AVI splitter> under <DirectShow source filters:>.

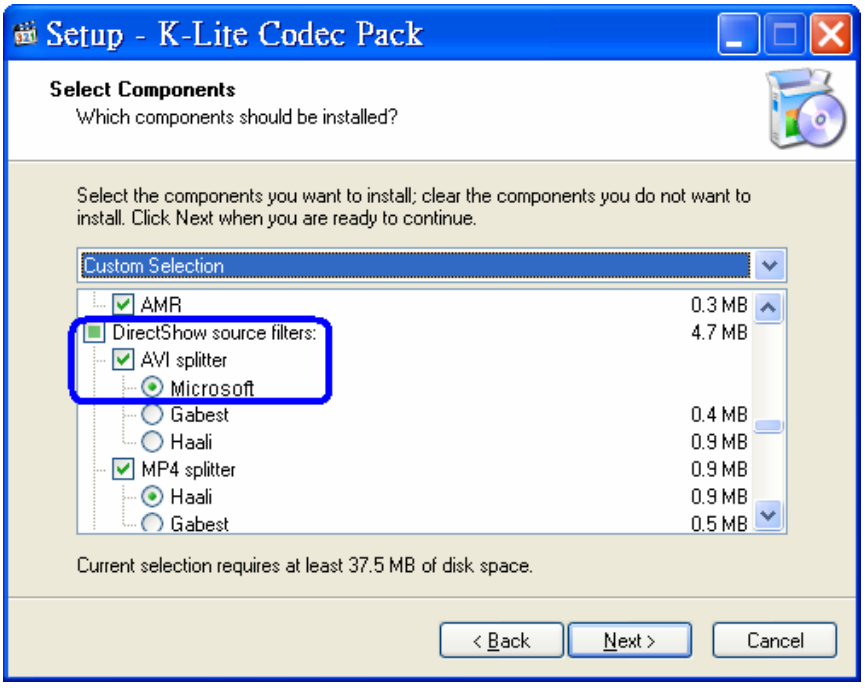
Setup - K-Lite Codec Pack
Select Components
Which components should be installed?
Select the components you want to install; clear the components you do not want to install. Click Next when you are ready to continue.
Custom Selection
AMR 0.3 MB
DirectShow source filters: 4.7 MB
AVI splitter
Microsoft
Gabest 0.4 MB
Haali 0.9 MB
MP4 splitter 0.9 MB
Haali 0.9 MB
Gabest 0.5 MB
Current selection requires at least 37.5 MB of disk space.
< Back
Next >
Cancel

6.8 Configure the OSD Menu of the Connected DVR

The OSD menu of the connected DVR contains a list of items that are used to configure the connected DVR.

Right click on a **DVR** and select <Configuration> to open the OSD menu.

When the mouse did not click or the keyboard did not type for 5 minutes, the configuration window will be closed automatically.

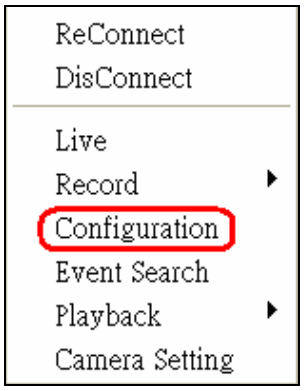

The OSD menus for the DVRs are different from each other. Refer to the following for an example.

OSD Menu of a DVR

The Menu function is similar to the Speco**Remote** software. Please refer to the DVR User's Manual for detail instruction.

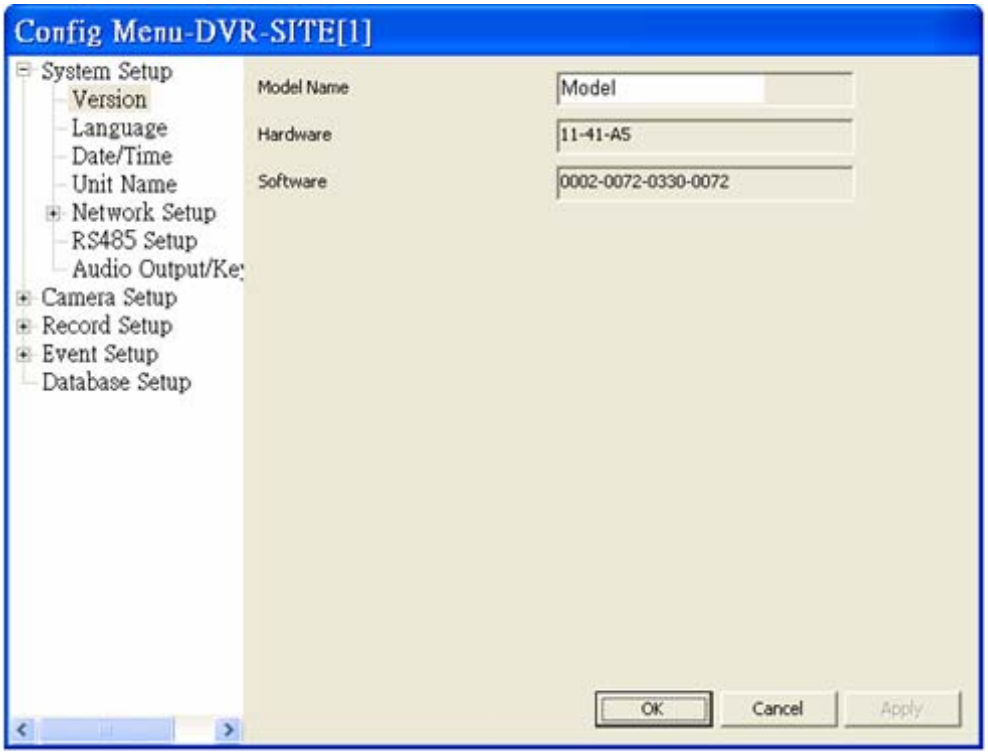

NOTE: The configuration function is not available for SIP IP cameras. Therefore, the <Configuration> item in the right click pull-down menu will be grayed out.

6.9 Search for Event Videos

The CMS is capable of searching, playing back, and archiving the event videos.

Right click on the **Site** and select <Event Search> and the <Event Search> window will be displayed.

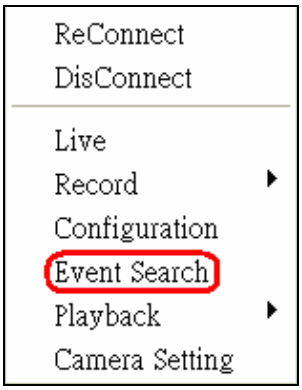

Users can search the event list of the connected DVR. If users have installed the POS module, users can either search by event or text.

To play the event video

Select "Play Event" and double click on any item to view the playback of the event.

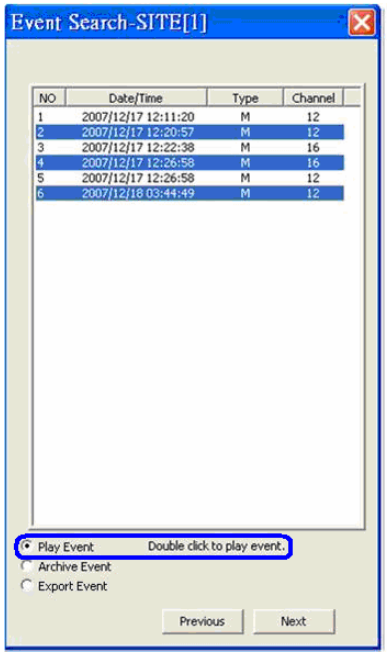

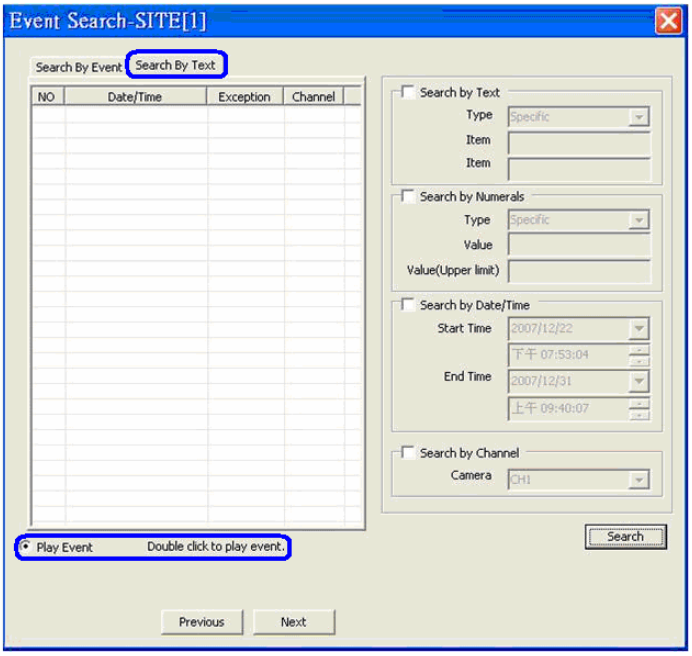

NOTE: Archive Event and Export Event will not be available in "Search By Text" tab.

To archive the event video

Select "Archive Event" and press the "Ctrl" key to select multiple event videos to be archived. The maximum items can be selected is 1,000, which is the capacity of the list.

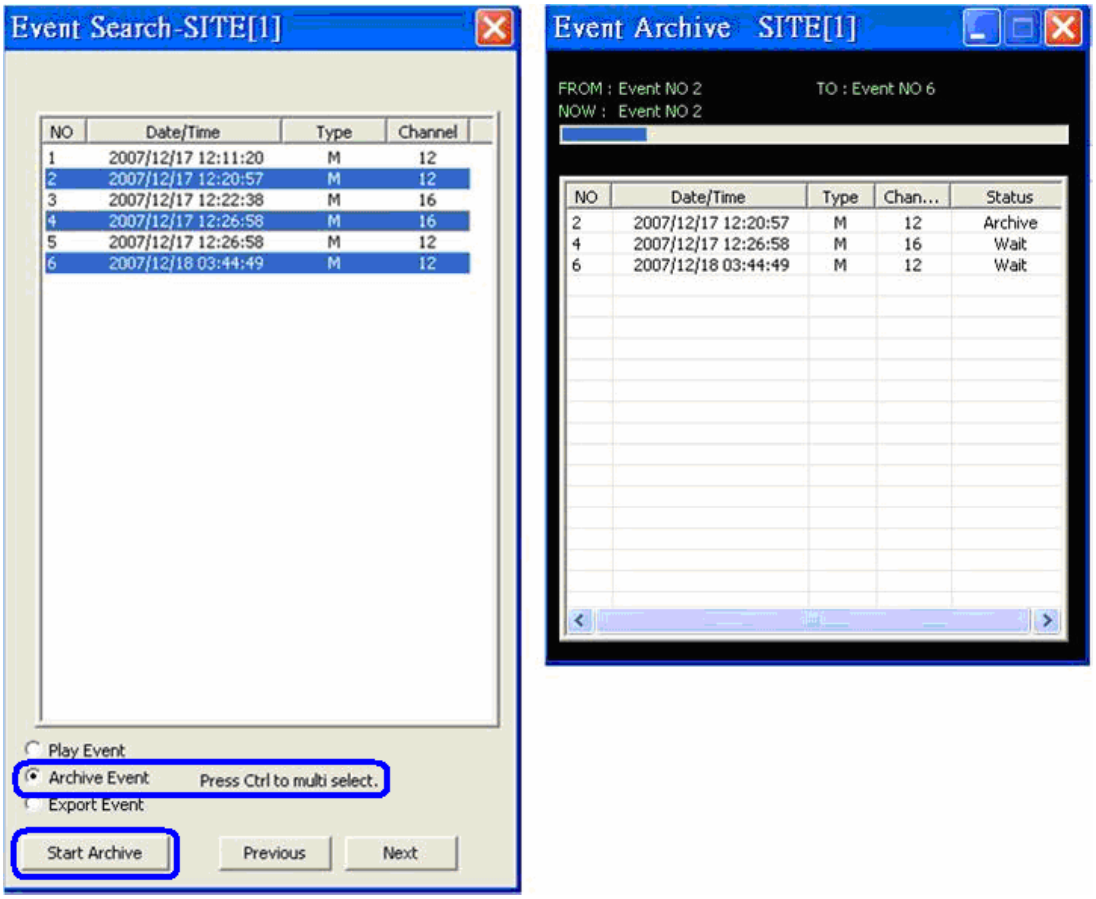

Click on "Start Archive" and an "Event Archive" window will pop up. The progress bar shows current downloading position. The status column shows the event is under "Archive", "Wait", or "Done" condition.

NOTE: The event archive or normal video archive for different sites can be performed simultaneously.

To export the event video

TL models with software version "2125" or newer can export video data at DVR site through CMS control. Software version is defined at the second column of software serial numbers, for example, 7630.**2125**.0301.0539. As well, TN models with software version "2121" or newer can perform the same function.

Select "Export Event" and press the "Ctrl" key to select multiple event videos to be exported.

Click on "Start Export" to begin exporting process. The remaining steps are the same as the exporting process described in the section **Playback Recorded Video**. Please refer to the section for details of the remaining steps.

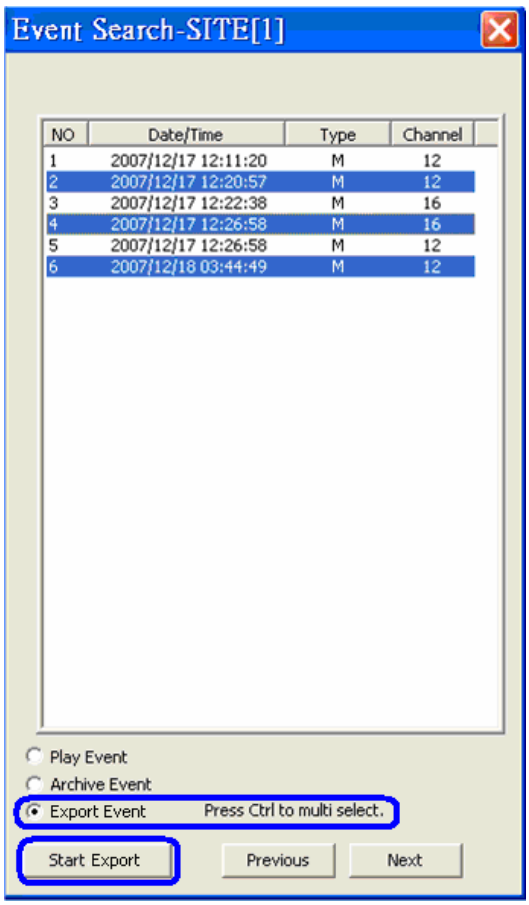

6.10 CMS Motion Detection

Users can setup motion detection at CMS site independently. Right click on a preferred grid and select <Intelligent Surveillance> → <Motion Detection> from the pull down menu.

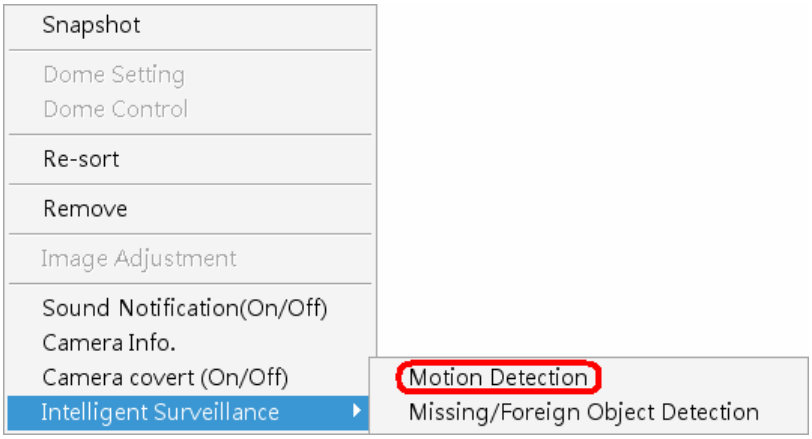

Users can choose to monitor the complete screen or select up to 8 boxed areas after clicked on <Regional>. Click on <Clear> button to delete all selected areas. Alternatively, right click on any selected area to delete it individually.

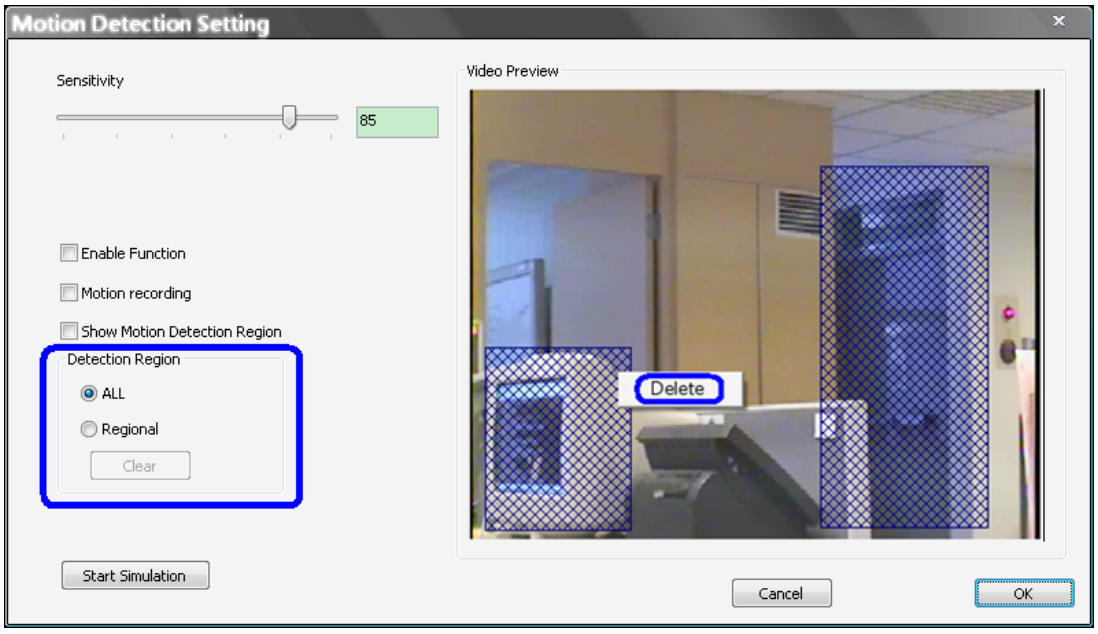

Refer to the following for description of motion detection settings.

Sensitivity: Setup a desired sensitivity level.

Enable Function: Check on it to start monitor motion detection.

Motion recording: Check on it and CMS will record event video when motion is detected. The length of event video will follow <Event Recording Duration> specified in Event setting.

Show Motion Detection Region: Check on it to display the detection area visually on the monitoring screen. The boxes will also be captured and displayed on the snapshot images.

Start Simulation: Click on it to start simulating motion detection. The button will then change to "Stop Simulation" button. When motion is detected, red boxes will be displayed to mark the motion areas.

Stop Simulation: Click on it to stop simulation.

Click on <OK> to apply the settings, or click on <Cancel> to disregard and return to Live mode.

NOTE: When motion alert is triggered, an alert icon " " will be displayed at bottom-left of the grid.

6.11 Missing/Foreign Object Search

The purpose of Missing/Foreign Object Detection function is for users to keep an eye on the important objects and areas. Right click on a preferred grid and select <Intelligent Surveillance> → <Missing/Foreign Object Detection> from the pull down menu.

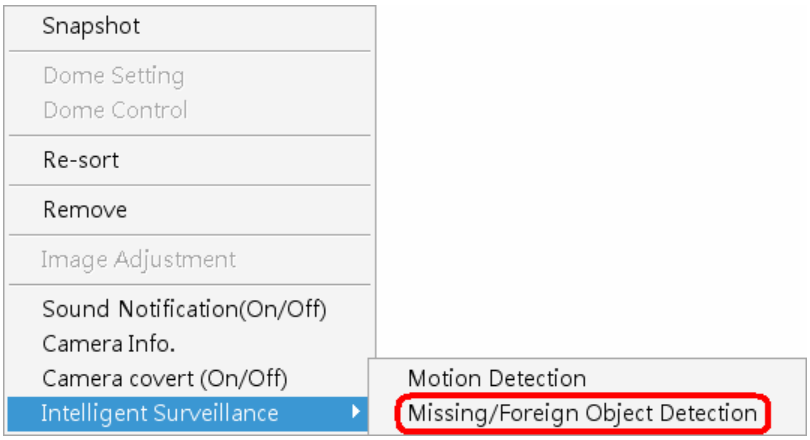

The object detected search window will be shown as below.

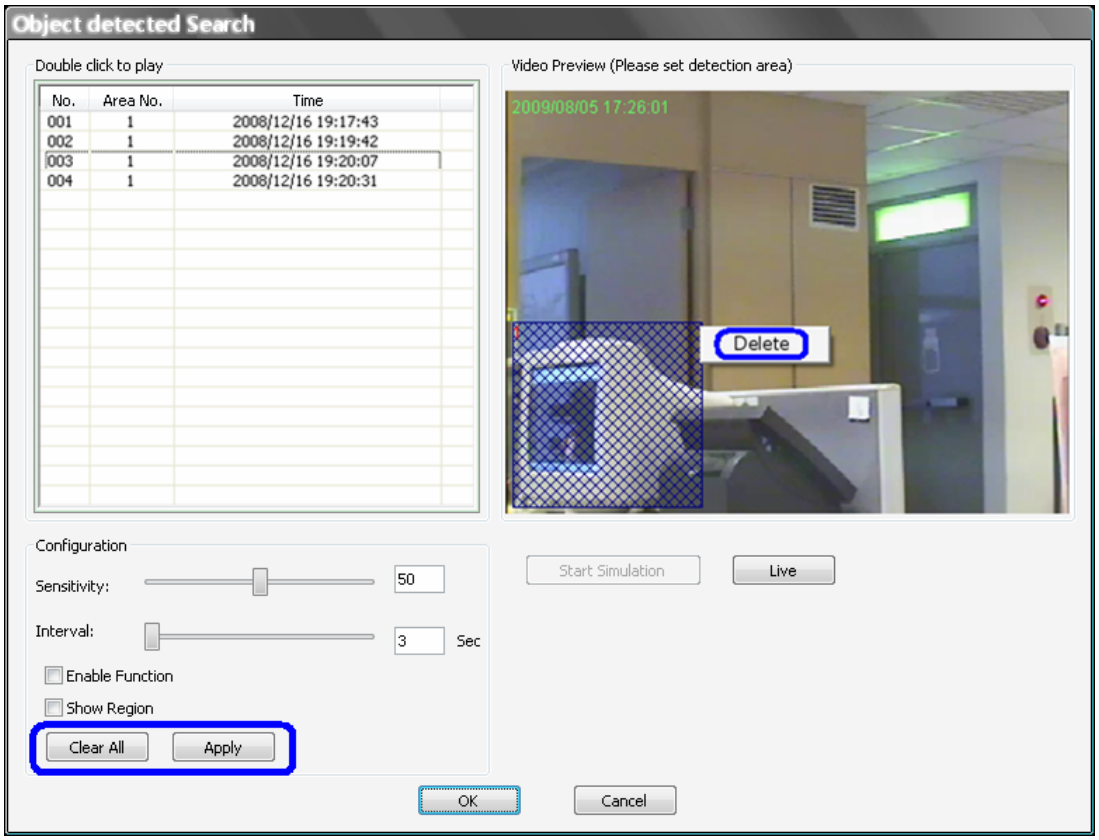

Users can setup at most 8 monitoring areas. Click on <Clear All> button to delete all boxes. Alternatively, right click on any single box to delete it individually.

Sensitivity: Setup a desired sensitivity level.

Interval: The time specified here is for determining the lost of objects. If an object is removed from the selected areas for more than the time specified here, lost of object alert will be triggered.

Enable Function: Check on it to start monitor object.

Show Region: Check on it to display the detection area visually on the monitoring screen. The boxes will also be captured and displayed on the snapshot images.

Clear All: Click on it to clear all selected boxes.

Apply: Click on it to save and apply settings in the configuration section.

Start Simulation: Click on it to start simulating object detection. The button will then change to "Stop Simulation" button. When the image is different, green boxes will be displayed to mark the lost of objects.

Stop Simulation: Click on it to stop simulation.

Live: Click on it to restore the Video Preview frame to live image.

Lost of Object Alerts

When lost of object alerts are detected, restore the object detected search window and the list on the left-hand side will show area number and time of the lost of object alerts.

If the connected site is a DVR, double click on any item to playback video that is 15 seconds before the alert triggered. However, if the video is not added to the database yet, an error message will be displayed.

NOTE: Only the configuration of area positions, sensitivity, and interval will be permanently saved. The default image will be replaced by the initial image every time when CMS restarts. Therefore, please check the configuration every time CMS starts up.

NOTE: CMS Player also has Missing/Foreign Object Detection function, and it is slightly different from what's in CMS. Refer to the **appendix A** for more details.

Click on <OK> to apply the settings, or click on <Cancel> to disregard and return to Live mode. The selected boxes will not be shown on the live monitoring screen.

NOTE: The "Motion Detection" function and "Object Search" function can be enabled simultaneously.

6.12 Take a Snapshot

The Snapshot function is a simple screen capture tool. When users click on the <Snapshot> icon, it will capture the screenshot of the window that users are currently viewing. Users can save the screenshots to the default path "\CMS\Snapshot\" or the folder that users have previously set in the file path. Please refer to <Setup the File Path> for more information about changing the file paths.

There are 2 ways to take the snapshot. One is to click on the <Snapshot> icon, and the snapshot window will be displayed. Select <OK> to save the file.

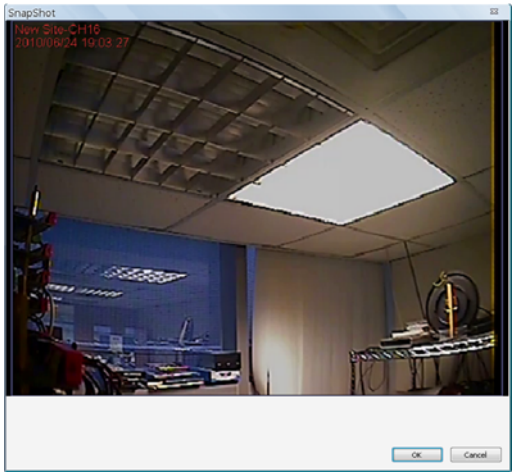

The other way is to right click on the window, and select <Snapshot>. Note that it will only capture the image of the selected channel . The file will be saved without displaying the image.

NOTE: The default image format is *.jpg. If users have selected more than one file types and took the snapshot, users will get more than one files of the same snapshot image.

Please go to <Settings> to setup the snapshot file type.

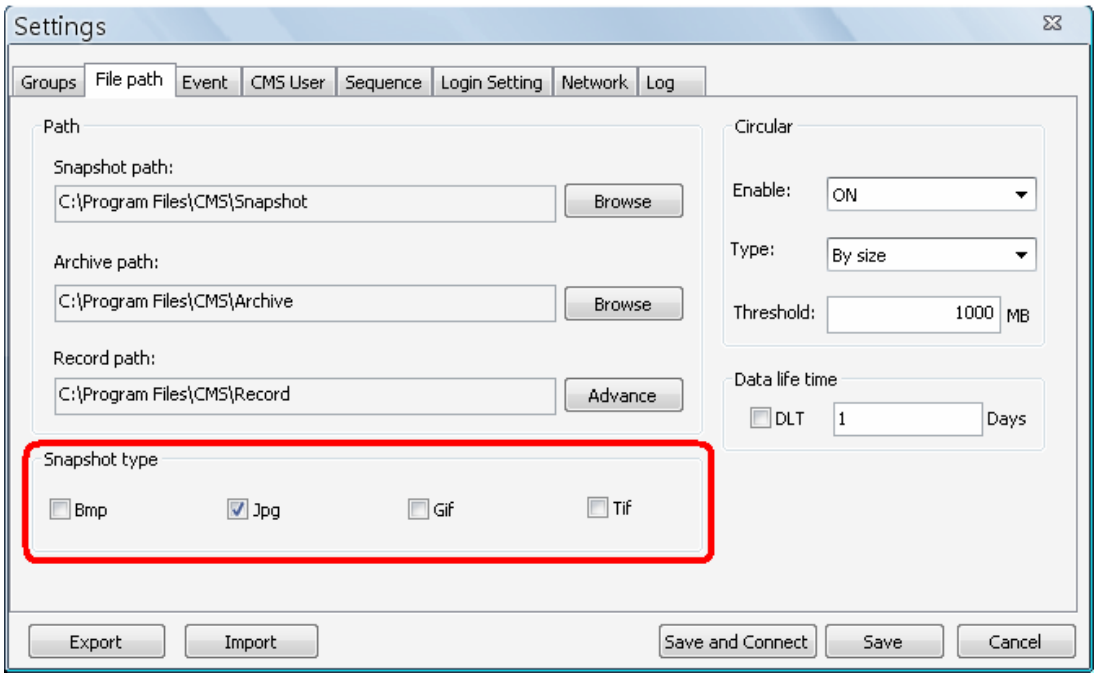

6.13 Instant Record Function

While videos are usually recorded to the connected DVR, users can choose to instantly record live and playback video clips to the local computer as an option.

Right click on the **Site** and select <Start Recording> to start recording, and <Stop Recording> to stop recording.

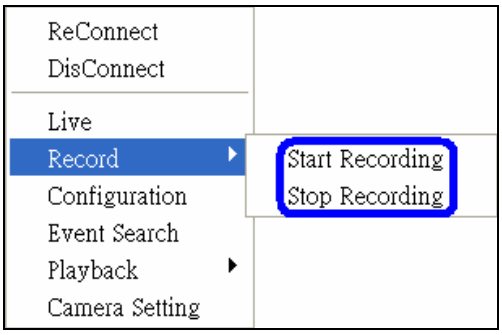

If time difference between CMS and the recording site is more than 1 day, a message will be displayed as below.

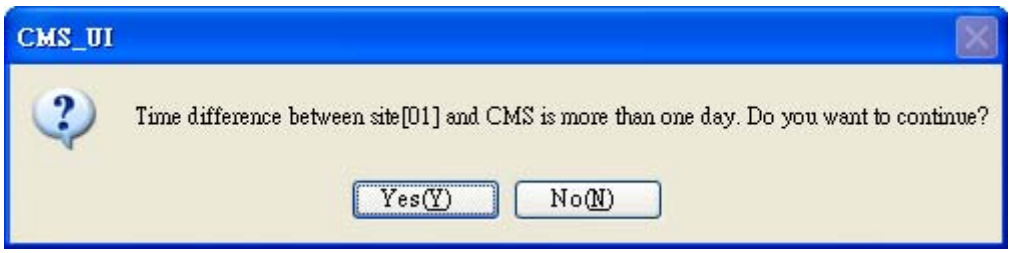

When the channels are being recorded, the title of the channels will show a capital letter "R" ([R]) at the end. The recorded files will be saved to the default folder "\CMS\Record\".

If users want to switch between Live/Playback modes while CMS is recording videos, the recoding has to be terminated. A message dialog will be displayed for confirmation.

NOTE: For the case of switching from "Live" mode to "Playback" mode, the recording will be resumed from stopping point once "Playback" mode is ended and returns to "Live" mode.

NOTE: If the connection to the recording site is disturbed and then reconnected, the recording will be terminated without resumption.

6.14 Dome Setting / Dome Control

The users can also set/control the dome camera in the CMS. Right click on the channel where a dome camera is properly installed. Refer to the following picture to see how they look like.

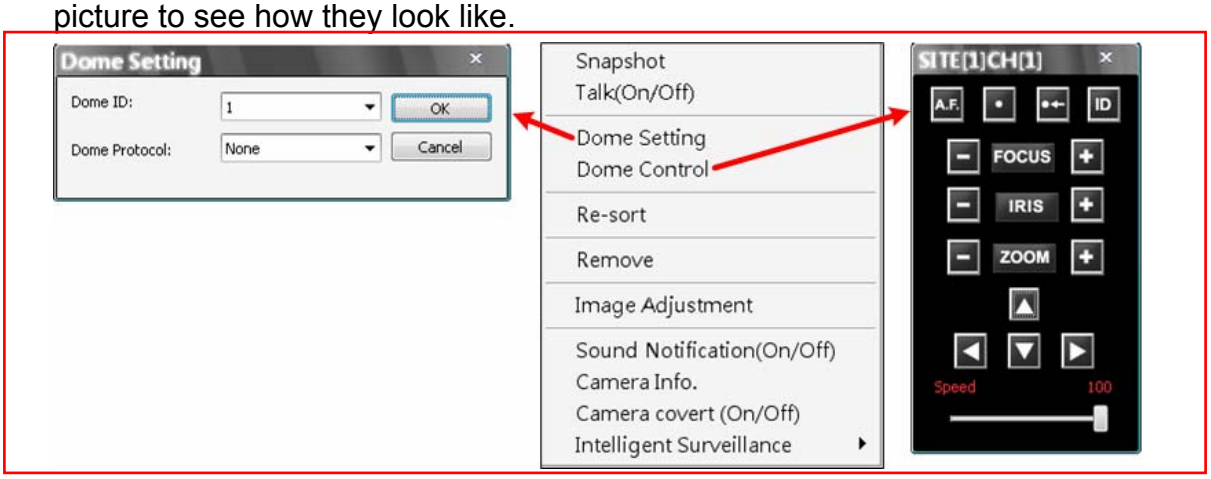

Dome Setting:

Select <Dome Setting> to setup the Dome ID or Dome Protocol. Note that dome protocol changed at this interface is only temporary. To permanently change dome protocol, please modify it in the configuration.

Dome Control:

The function of each button on the <Dome Control> panel is described below.

A.F. (Auto Focus)

Click on A.F. to focus the camera automatically.

Set/Go Preset Point

Click on to set a present point, and to go to the preset point.

ID

Click on ID to setup the Dome ID/Protocol. This function resembles to the <Dome Setting>.

Focus

This is used to manually focus on the objects. Click on the +/— icons to adjust the focus.

Iris

This is used to setup the iris. Click on the ＋ icon let in more light, or the － icon to reduce the light.

Zoom

This is used to zoom in/ out to the object. Click on the ＋/－ icons to adjust. It can also be adjusted by the scroll wheel of the mouse. Scroll toward users to zoom out and away from users to zoom in up to 7 times the original size.

Direction Button

Click on the arrows to pan and/or tilt the dome camera.

Speed Slider Bar

The slider bar is used to adjust the speed of the pan/tilt movement. 0 is the slowest and 100 is the fastest.

Mouse Control

If the mouse is moved to the top/ bottom/ left/ right edge of the screen, a red triangle as in the picture on the right will show up. At this time left clicking the mouse can move the screen toward the direction where the red triangle points to. Zoom In/ Out using the scroll wheel of the mouse.

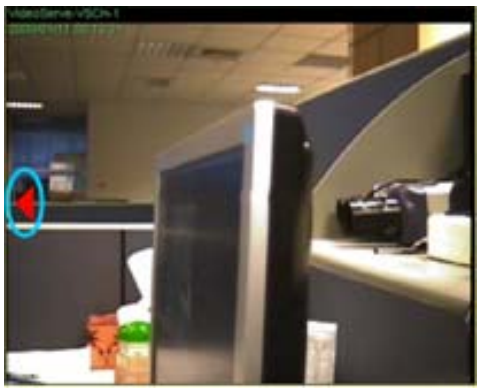

6.15 Schedule Record Function

The user can schedule specific time to record the videos to the local computer. The Schedule Record window will be displayed by clicking on the <Schedule Record> icon.

The current setting site will be shown on the top of the Schedule Record window.

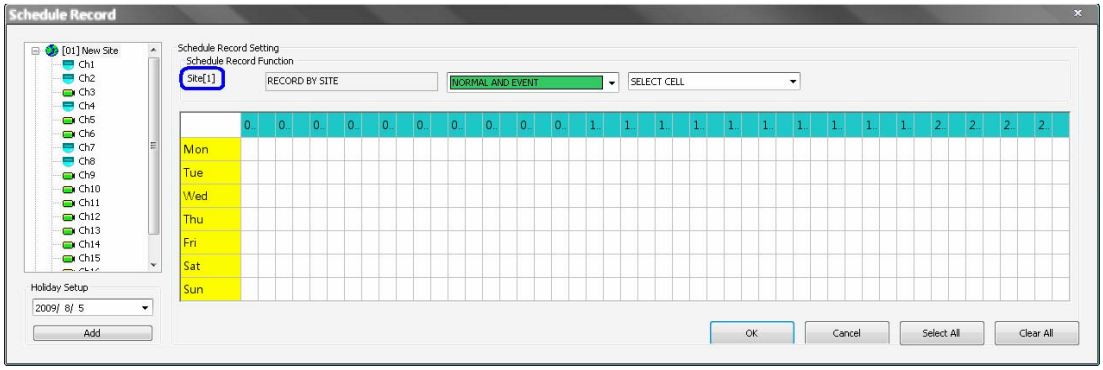

The scroll-down menu circled below shows the recording options.

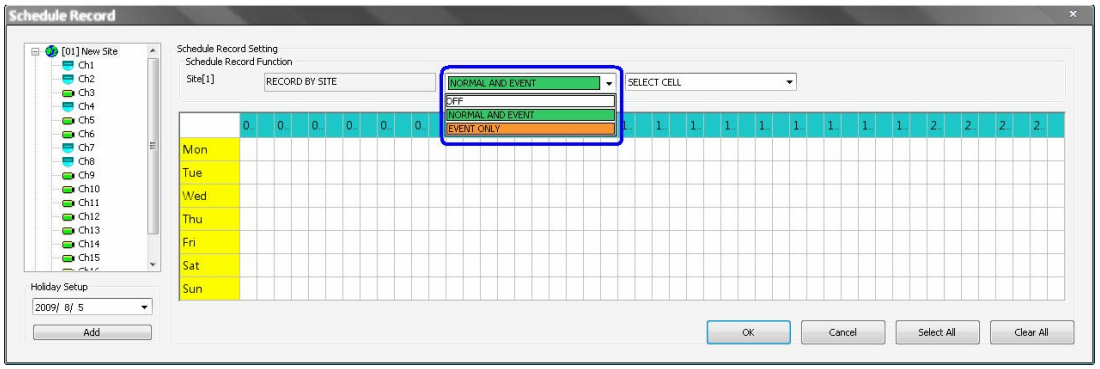

<OFF>
Select this to switch off the schedule record function.

<NORMAL AND EVENT>
Schedule to record both the normal and event videos within the selected time frame.

<EVENT ONLY>
Schedule to record only the event videos within the selected time frame.

The scroll-down menu circled below shows the schedule options.

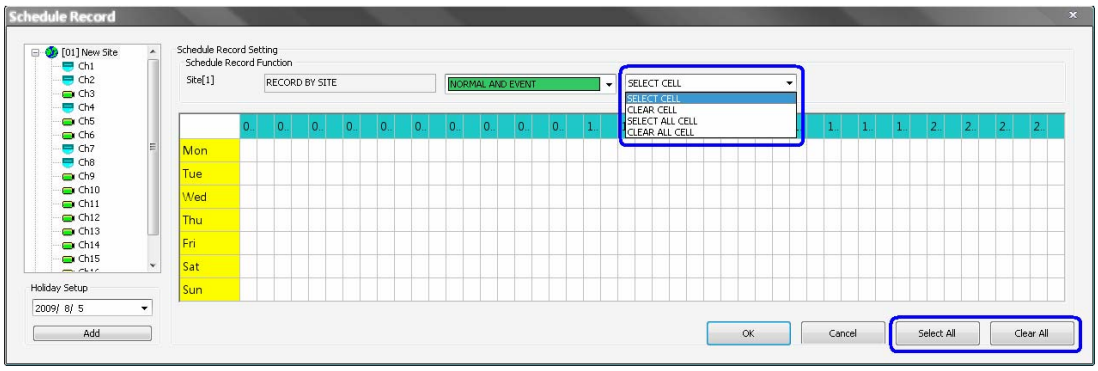

<Select Cell>
Choose this to select any cell from the table.

<Clear Cell>
Choose this to clear any cell from the table.

<Select All Cell>
Choose this to select all cells from the table.

<Clear All Cell>
Choose this to clear all cells from the table.

The <Select All> and <Clear All> buttons are for setting all sites to always record or always not record by one click.

Follow steps below for an example of setting schedule record for the CMS.

Schedule Recording Times

Step 1. Select a site or a channel from the box on the right by a single click. When a site is selected, the same setting of schedule record will be applied to all channels. Click on a channel to set unique schedule record for the particular channel. In this example, schedule of a site will be set. Select a site in box 1, and set the recording option to <NORMAL AND EVENT> in box 2.

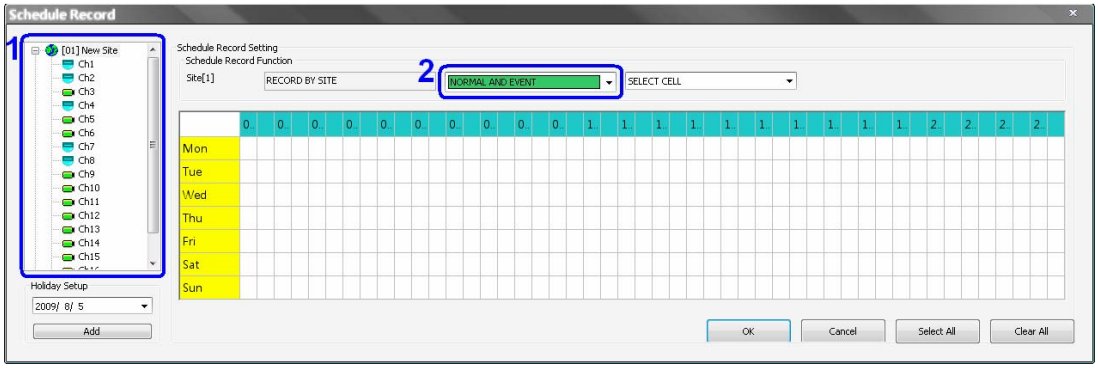

Step 2. Assuming that the site will be scheduled to start recording video from 2:00 to 4:30 on Tuesday and Wednesday. Since the duration of each cell is 30 minutes, click on the cell under 02 for Tuesday and drag to the cell under 04 for Wednesday; and the color of the cells will be changed to green indicating that both normal and event videos are going to be recorded during the selected times.

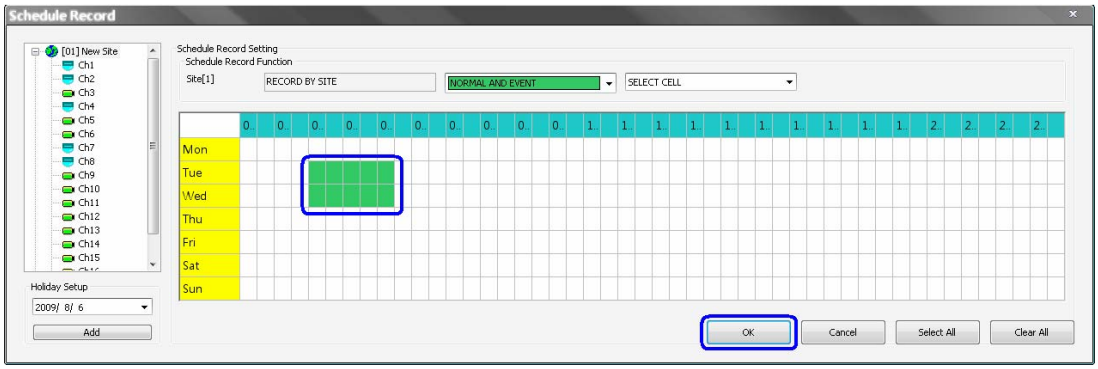

Step 3. After the time frames are selected, click <OK> to save and exit the Schedule Record.

Cancel Scheduled Recording Times

If the user want to cancel a time frame from selected schedule, for instance, 3:00~3:30, set the selecting option to <Clear Cell> in box 1. Click and drag the cells under 03 from Tuesday to Wednesday. The cells will be blank which indicates that CMS is not going to record anything. Click on <OK> to save and exit the Schedule Record window.

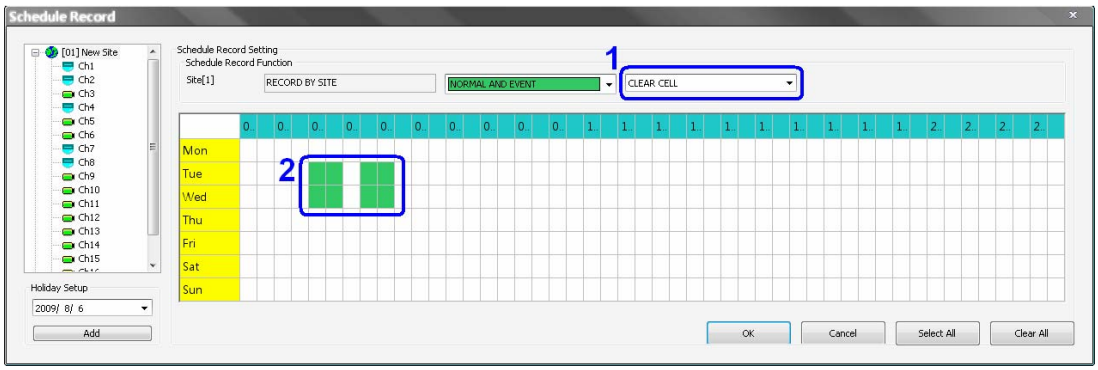

Select/Clear All Cell

If users want to set the schedule to record at all times, click on the circled blank cell located on top left corner of the table or set the selecting option to <Select All Cell>. If users want to reset the schedule of the site, set the selecting option to <Clear All Cell>. Alternatively, users can click on the <Select All> or <Clear All> buttons to setup all sites to always record or always not record at once. Click on <OK> to save and exit Schedule Record window.

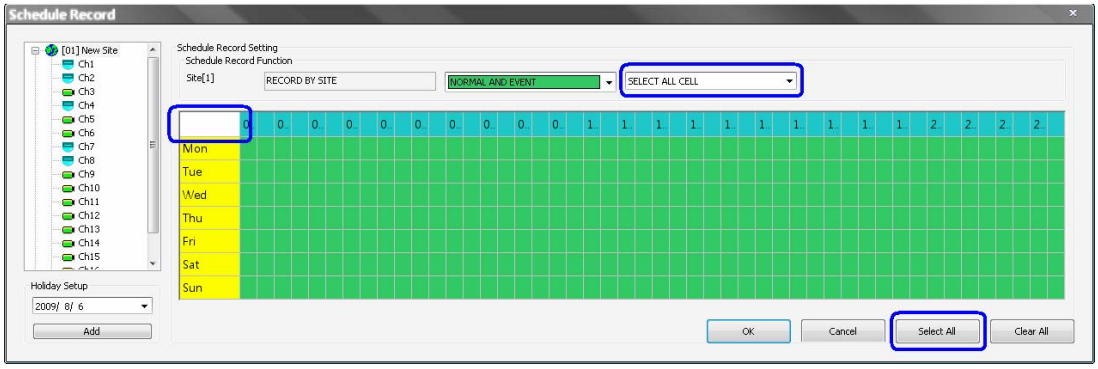

Select/Clear Cell by Date/Time

Another way to select or clear time frame is by clicking on the Day or Time tabs. For example, when users click on <Tuesday> tab, the color of all Tuesday cells will be changed and the site is scheduled to record normal and event videos every Tuesday. When users click on 5:00~5:30 tab, color of all 5:00~5:30 from Monday to Sunday will be changed. Click on <OK> to save and exit Schedule Record window.

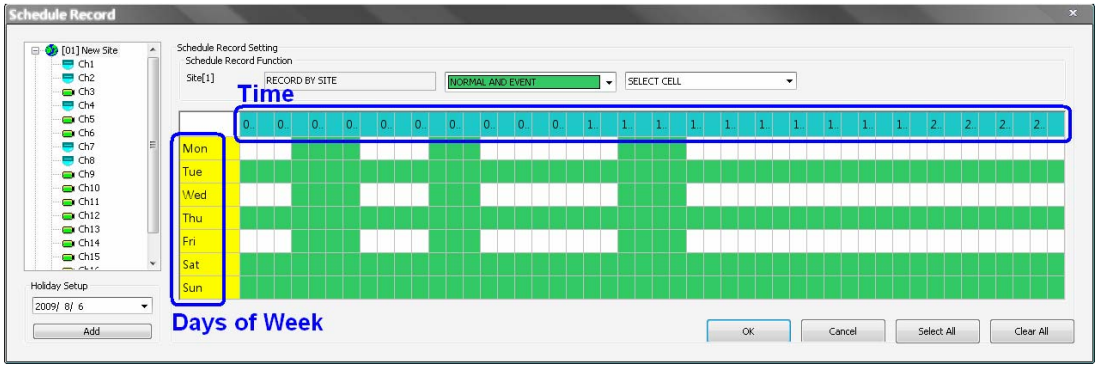

Special Schedule of a Specific Date

If users wish to setup a special schedule for a specific date, simply select a date from the pull-down menu of <Holiday Setup> and click on <Add>. On the right of the <Schedule Record> window, users will see a new day cell as shown in #3. Setup the schedule for that day, and the schedule record will only run once for that special day.

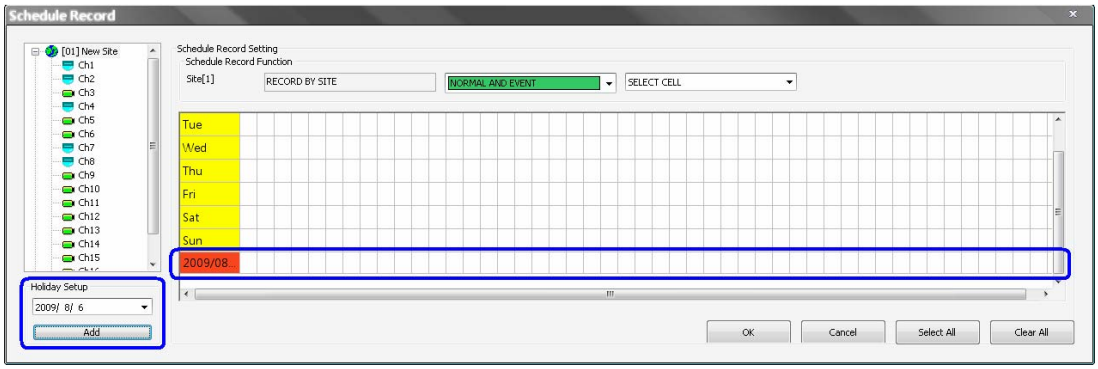

6.16 E-MAP Function

The E-Map is a program that allows the user to illustrate the position of the cameras on a self selected image. Click on the <Emap> icon located on the top of the CMS main window to open the E-Map. Please follow the steps below to setup the E-Map.

Step 1. First load an image file by clicking <LOADIMAGE> as shown below.

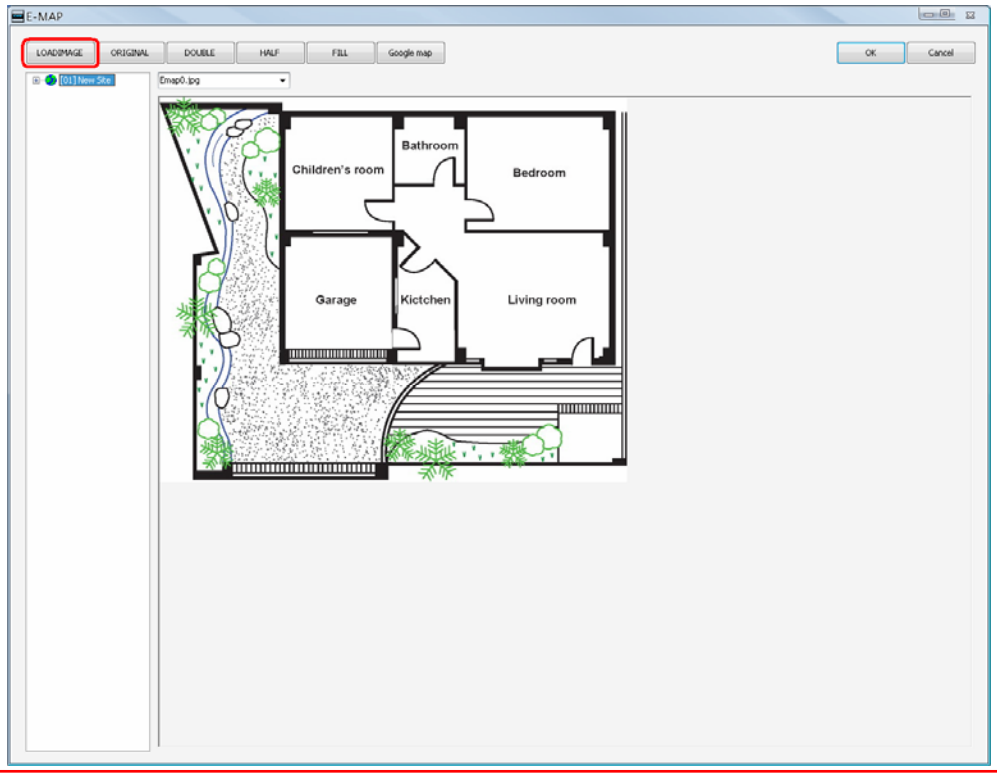

NOTE: The image shown in the window is the default picture. It will only be available when default is installed.

Step 2. The figure below is the Load Image window to add or delete images, and undo or confirm settings. Click on <Add> to add an image. Note that E-MAP only supports *.bmp, *.jpg, and *.gif files.

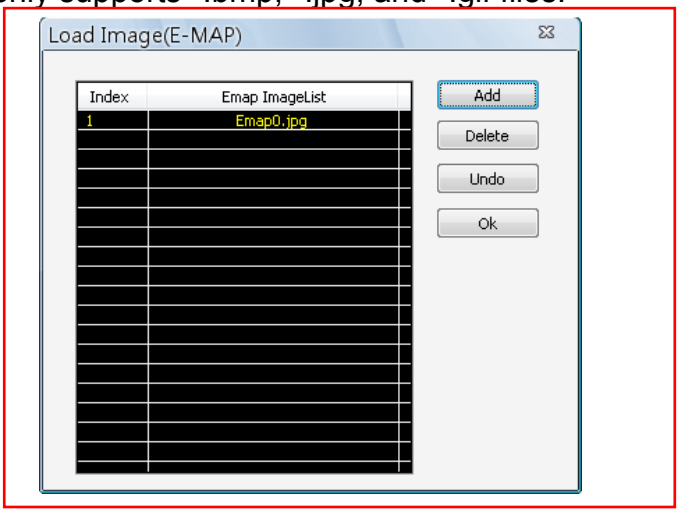

Step 3. After the image is added, the filename of the image will be displayed on the list. Index indicates the order, starting from "1", of the files. After the image is loaded, click <Ok> to confirm and save the setting.

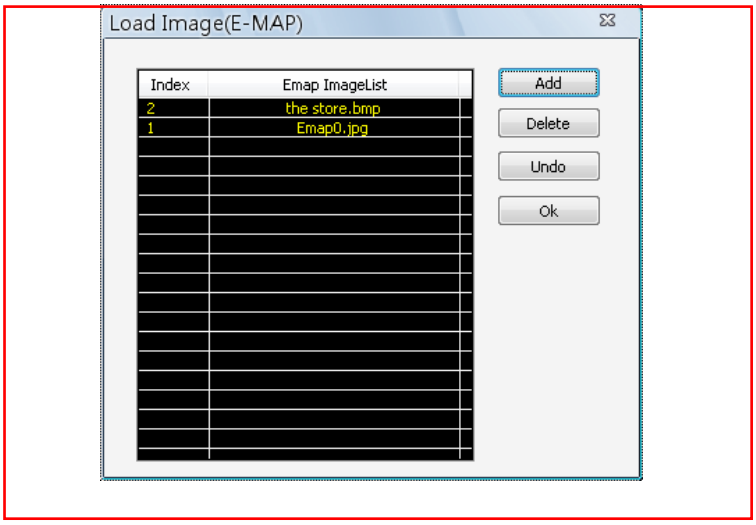

Step 4. Select the image file just loaded to the E-Map from the scroll menu.

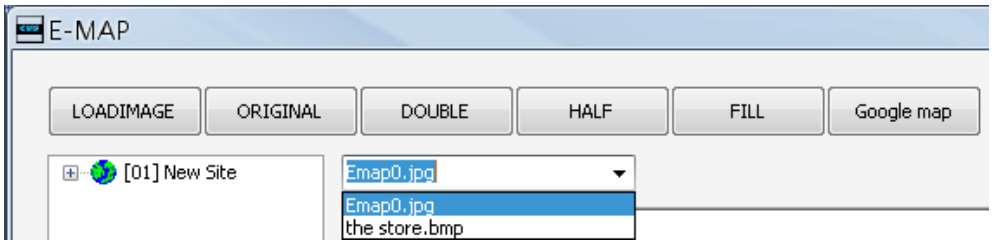

Step 5. The chosen image will be displayed in the E-Map main window. The image of a grocery store is used in the following example. Drag and drop a channel from the site tree on the left to any place of the image.

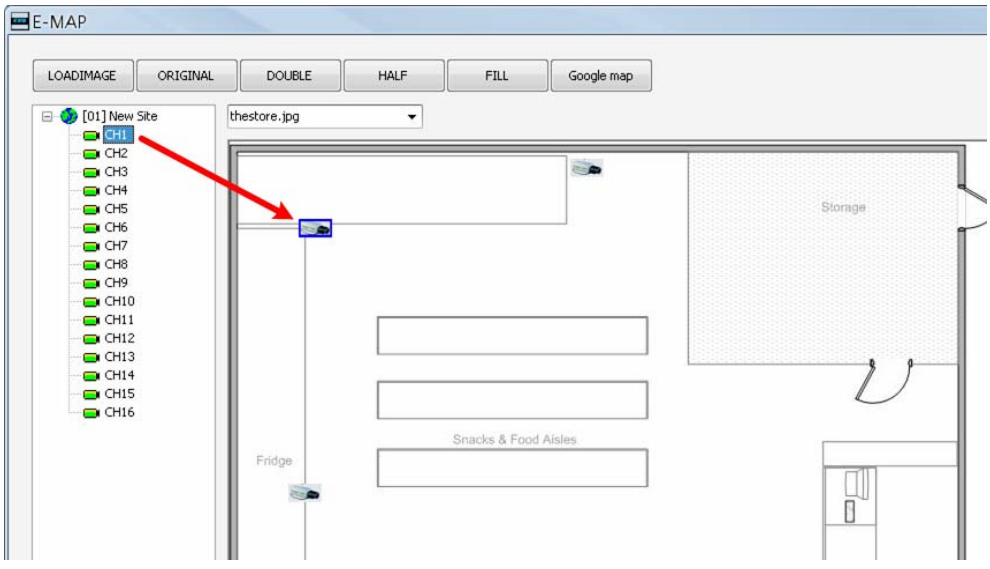

Right click on a camera icon can remove it or rotate its pointing direction, including North, Northeast, East, Southeast, South, Southwest, West, and Northwest.

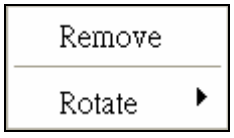

Step 6. When the mouse pointer moves over a camera icon in the image, an information dialog box will be displayed as below picture marked #1.

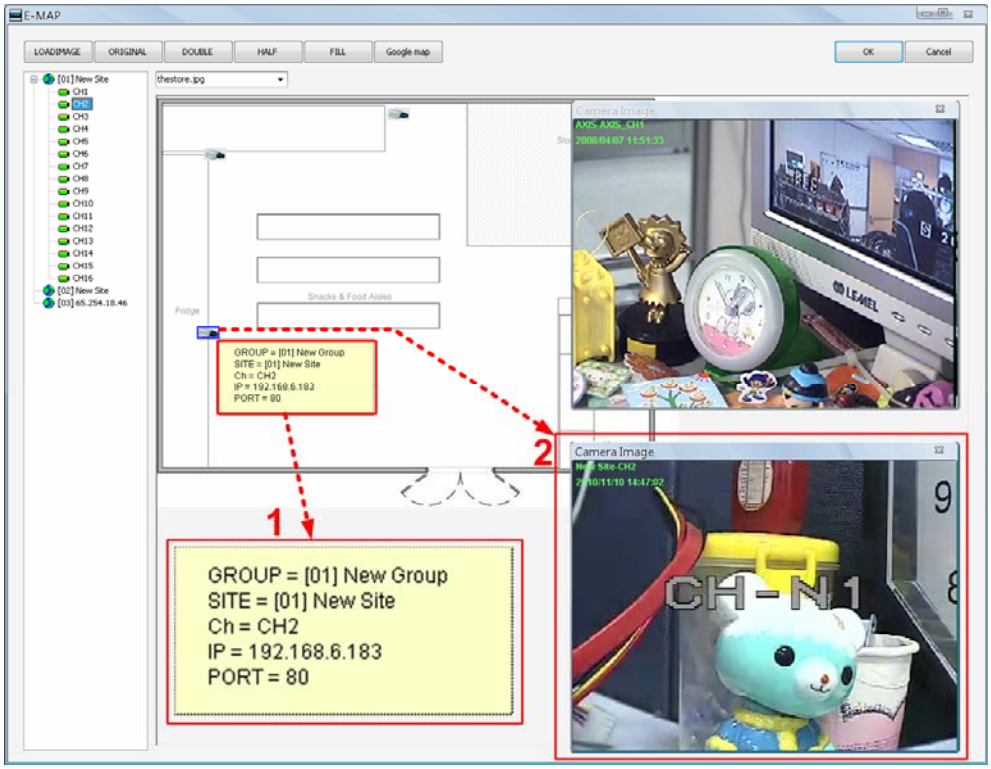

Double click on any camera will display the live preview image of the camera. When a camera icon is clicked, the camera live preview window will be highlighted if it's been displayed, as above picture marked #2. Otherwise, the corresponding channel in the site tree will be highlighted as shown above.

NOTE: The camera live preview window is limited up to three instances at the same time.

Step 7. Right click on the camera preview window to display the control menu as shown below. The menu items includes: Snapshot, Dome Setting, Dome Control, Sound Notification(On/Off), and Camera Info.

Camera Icons:

There are three different types of camera icons in E-MAP: dome camera, fixed camera, and alert icons.

Dome Camera icon

Fixed Camera icon

Alert icon

Dome camera icon will be displayed when the selected camera is a PTZ (pan/tilt/zoom) dome camera. Fixed Camera icon will be displayed when the selected camera is a fixed camera. Alert icon will be displayed when an alert is triggered to the camera on the image. The alert icon will blink to attract attention.

Change E-MAP Size:

Users can adjust the display size of the image on E-MAP by clicking on the icons described as below.

<Original>: To display the original size of the image.
<Double>: To double the size of current displayed image.
<Half>: To reduce current displayed image size by one half.
<Fill>: To adjust the image to fit display window.

NOTE: If there is no image file loaded on the E-MAP window, an error message will be shown when clicked on any of the four buttons above.

NOTE: When the image is very large, or when users cannot see the entire image in the display window, click on a channel in the site tree and the E-MAP will automatically move to the location of the selected channel.

Google Map Function

With Google Map function, users can mark the locations of loaded emaps on Google map. Refer to the steps below for details.

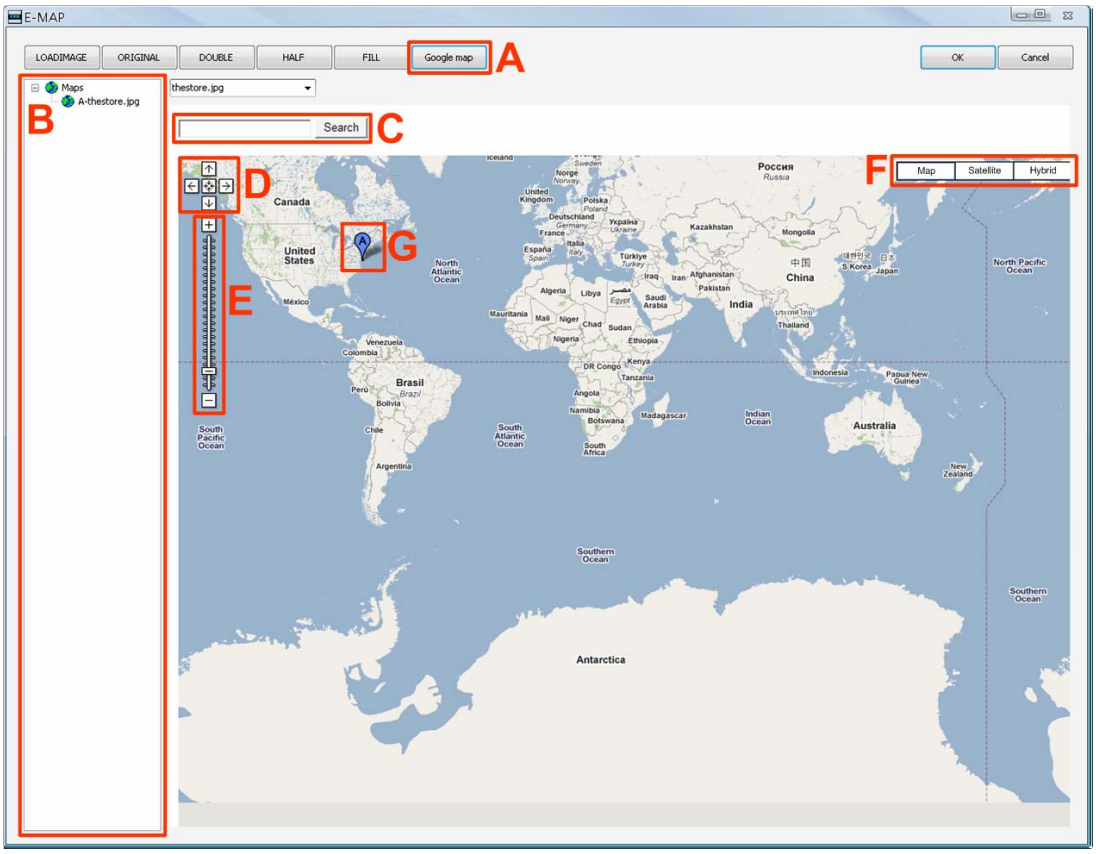

Step A. Click on <Google map> icon and Google map will be displayed.

Step B. The loaded emaps will be listed here.

Step C. Type the name of the location and click on <Search>. If Google map is able to find the target location, it will be shown at the center of Google map. The display size of Google map will not be changed.

Step D. Click on the directional icons to move Google map to preferred directions. Click on the center icon to return to the last view.

Step E. Click on +/− to magnify/shrink the display size of Google map. Alternatively, drag the slider bar to select preferred display size.

Step F. Select preferred type of Google map. "Hybrid" is the mixture of pure map and Satellite map.

Step G. Click and drag the emaps from the site tree to the target locations. A balloon with a letter will be displayed to mark the location of each emap. Users can always click and drag balloons to change their locations. Right click on any balloon and select <Remove this map> to delete the mark.

NOTE: Double click on any balloon and the emap will be displayed. Alternatively, the emap can also be restored via double clicking on the emap icon listed in the site tree.

6.17 Health Function

This is a function that verifies the HDD status of the DVR sites in current connected group. Click on the <Health> icon and a progress bar will be shown to indicate that the information is being retrieving. The following figure is an example. Note that since SIP cameras do not have connected HDD, they will not be shown in the chart.

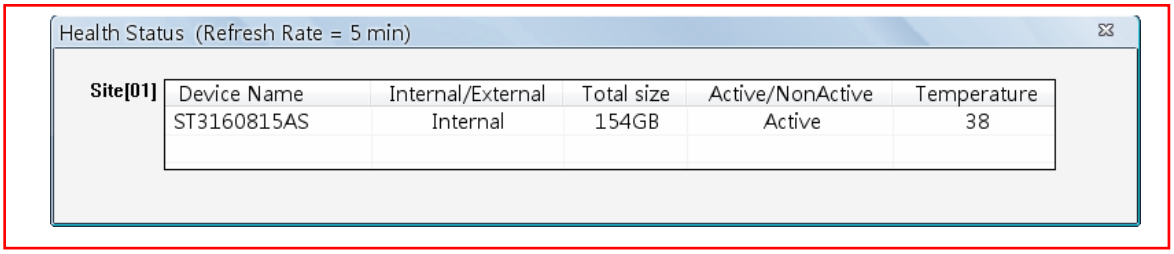

The information items shown in the chart are described as below:

Device Name

This item shows the model name of the HDD.

Internal/External

This item indicates whether the HDD is an internal or external device.

Total Size

This item indicates the total size of the HDD.

Active/Non Active

This item indicates whether the HDD is active or non-active.

Temperature

This item indicates the current temperature of the HDD in Celsius degree.

NOTE: Temperature data is not retrievable for some specific models. Under Temperature column, it will show "Not available".

6.18 Lock Function

The Lock function allows the user to protect the CMS from unauthorized use when there is need to be away from the computer for a while. Closing the CMS is not allowed and other functionality will be limited as described below.

Click on the <Lock> icon and a confirmation message will be displayed as on the right. Click "Yes" to confirm.

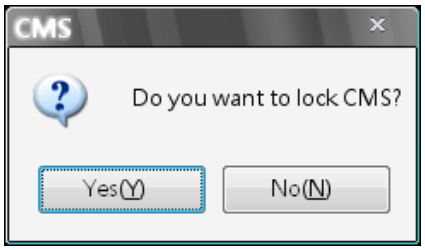

After the user clicked "Yes", the icon will be changed to show that CMS is currently being locked. When the user clicks unlock, the window as shown on the right will be displayed for the user to enter username and password to unlock.

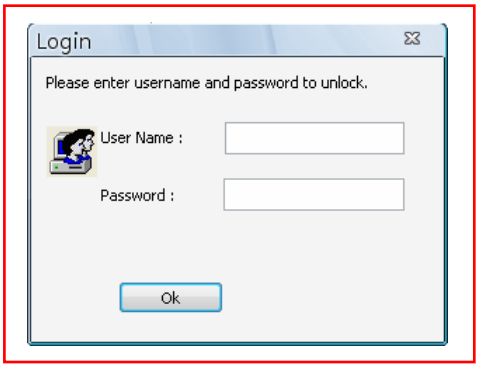

To unlock, the following are two scenarios:

	Login Account	Unlock Account	Note
1	User	- Login User - Any Administrator	The access authority will still be User's limit.
2	Administrator	- Login Administrator	If password is changed, use new password to unlock.

When the CMS is locked, windows control will be as the following two types:

	Type	Example	Windows Control
1	Setting	Setting, Schedule Record, EMAP, Dome Control, etc	The windows will be closed without saving changes. It is recommended to save settings before locking the CMS.
2	Monitoring	Archive, Alert, etc.	It is not allowed to close the window but just minimize it.

NOTE: If the CMS is forced to be closed while it's locked, the CMS system will still be locked when it is started up again.

NOTE: If the password of the current login account is changed, use the new password to unlock.

6.19 Digital Deterrent Function

The **DVR-4TH/ 8TH/ 16TH** series models provide an extra function called "Digital Deterrent" that allows the user to setup sounds to be played when alert events are triggered. Right click on the DVR icon in the site tree and select <Digital Deterrent> from the pull down menu, as shown on the right. Note that administrator and user accounts (of the DVR) are granted different privileges.

NOTE: If the CMS failed to retrieve the digital deterrent setting, the digital deterrent main window will not be displayed.

Digital Deterrent Overview:

The digital deterrent will first show an overview window. The function of the overview window is the same for both the administrator and the user accounts. Click on any grid to play the preset sound. The box next to "Click to play sound" will display the sound file being played. Note that all grids will show "None" if it is the first time trying to setup the digital deterrent function. "None" and "Default" cannot be played.

The following shows the UI of an administrator's privilege:

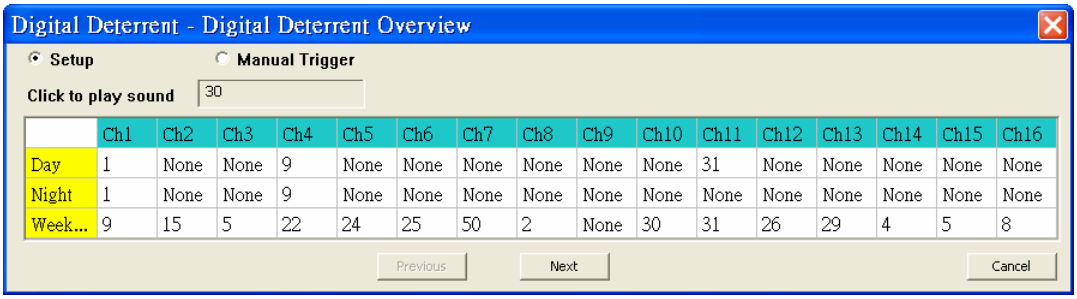

	Ch1	Ch2	Ch3	Ch4	Ch5	Ch6	Ch7	Ch8	Ch9	Ch10	Ch11	Ch12	Ch13	Ch14	Ch15	Ch16
Day	1	None	None	9	None	None	None	None	None	None	31	None	None	None	None	None
Night	1	None	None	9	None	None	None	None	None	None	None	None	None	None	None	None
Week...	9	15	5	22	24	25	50	2	None	30	31	26	29	4	5	8

A user's privilege UI is shown as the following:

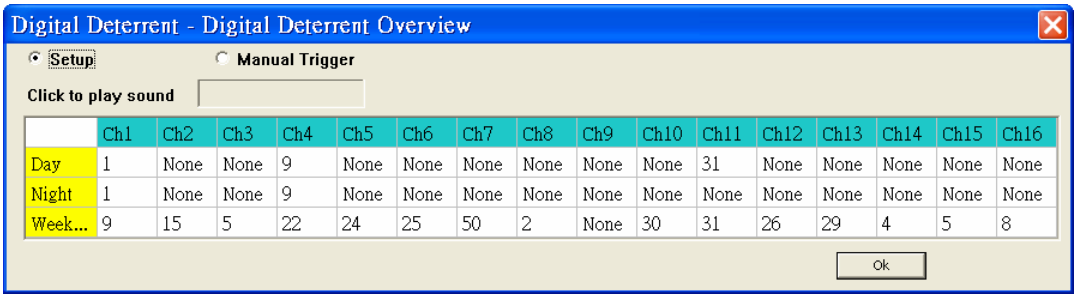

	Ch1	Ch2	Ch3	Ch4	Ch5	Ch6	Ch7	Ch8	Ch9	Ch10	Ch11	Ch12	Ch13	Ch14	Ch15	Ch16
Day	1	None	None	9	None	None	None	None	None	None	31	None	None	None	None	None
Night	1	None	None	9	None	None	None	None	None	None	None	None	None	None	None	None
Week...	9	15	5	22	24	25	50	2	None	30	31	26	29	4	5	8

Digital Deterrent Trigger:

Select "Manual Trigger" at the top of the window to display the trigger window. Both the administrator and the user accounts can access the function of the trigger window. Click on any grid to manually trigger the preset sound at the corresponding camera site. The box next to "Click to trigger" will tell whether the trigger is susceess or fail.

The following shows the UI of an administrator's privilege:

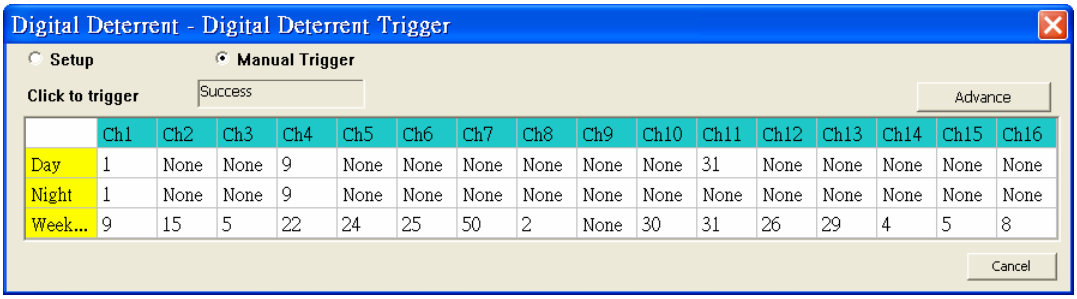

	Ch1	Ch2	Ch3	Ch4	Ch5	Ch6	Ch7	Ch8	Ch9	Ch10	Ch11	Ch12	Ch13	Ch14	Ch15	Ch16
Day	1	None	None	9	None	None	None	None	None	None	31	None	None	None	None	None
Night	1	None	None	9	None	None	None	None	None	None	None	None	None	None	None	None
Week...	9	15	5	22	24	25	50	2	None	30	31	26	29	4	5	8

A user's privilege UI is shown as the following:

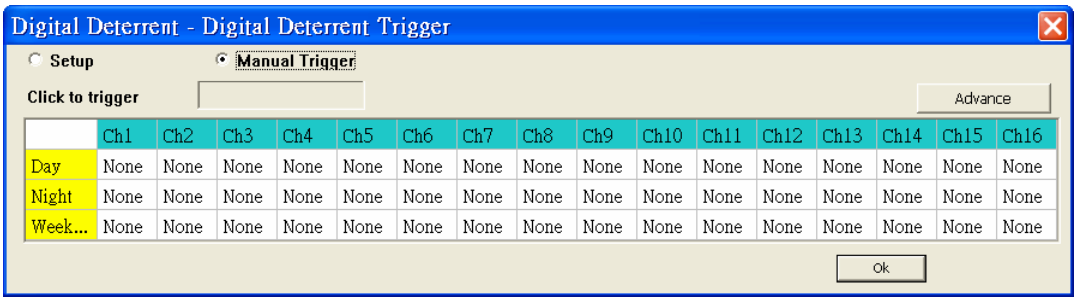

	Ch1	Ch2	Ch3	Ch4	Ch5	Ch6	Ch7	Ch8	Ch9	Ch10	Ch11	Ch12	Ch13	Ch14	Ch15	Ch16
Day	None	None	None	None	None	None	None	None	None	None	None	None	None	None	None	None
Night	None	None	None	None	None	None	None	None	None	None	None	None	None	None	None	None
Week...	None	None	None	None	None	None	None	None	None	None	None	None	None	None	None	None

Click on the <Advance> button to manually trigger a selective sound at a selective camera site. Select a channel and a sound and click <Send> to trigger.

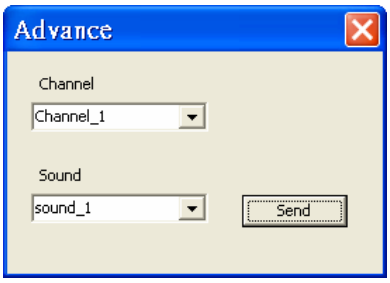

Digital Deterrent Set Audio:

Click on <Next> button will display the set audio window. This window is for the administrator account only. The administrator is allowed to configure audio settings here. Refer to the following for the display of set audio window.

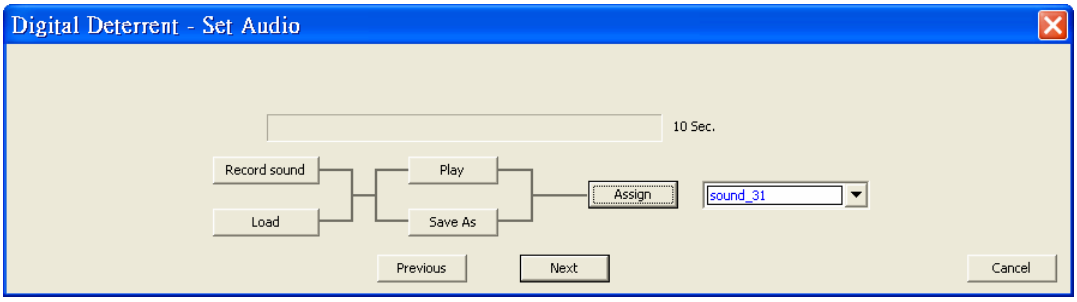

Click on <Record sound> button to start recording new sound instantly. The recorded sound has to be within 10 seconds and will be temporary saved in the destination folder \CMS\Setting\DD Sound\. When the digital deterrent window is closed, the files will be automatically deleted. Click on <Save As> button to permanently save the recorded sound file.

Click on <Load> button to load prerecorded sound file. The loaded file should be a wave file in pcm, a-law, or mu-law format, within 10 seconds.

Click on <Play> to play the current recorded or loaded sound file. Then select a desired number of sound in the combo box and click <Assign> to store the current sound file to the selected number. Note that the items in the combo box show in black when a sound file is assigned, show in grey when no sound file is assigned, or show in blue when a sound is assigned just now but not applied yet.

Repeat recording/ loading and assignment steps to setup more sound files. Once the setting is done, click on <Next> button to go to the next step.

NOTE: Before recording/ loading a sound file, <Play>, <Save As>, and <Assign> buttons will not be available.

Digital Deterrent Setup:

The last window is for the administrator to assign sound files per each channel according to schedule. The window will be displayed as the following.

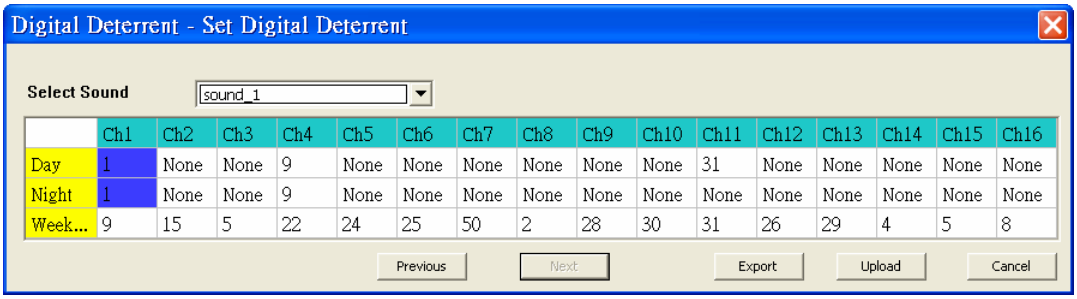
Digital Deterrent - Set Digital Deterrent
Select Sound
sound_1
Ch1 Ch2 Ch3 Ch4 Ch5 Ch6 Ch7 Ch8 Ch9 Ch10 Ch11 Ch12 Ch13 Ch14 Ch15 Ch16
Day 1 None None 9 None None None None None None 31 None None None None None
Night 1 None None 9 None None None None None None None None None None None None
Week... 9 15 5 22 24 25 50 2 28 30 31 26 29 4 5 8
Previous
Next
Export
Upload
Cancel

Select a sound in the combo box and click on any grid to assign the selected sound to the corresponding channel and schedule. The grid assigned with the sound selected in the combo box will be highlighted. Note that the combo box will only show sounds that are assigned with files.

The <Export> button allows the administrator to export sound files to selected destination for backup purpose. A window will be displayed to show status.

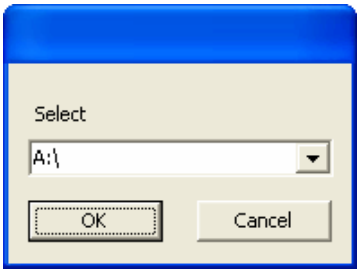

When the setting is done, click on <Upload> button to send the settings to the DVR. A progress window will be displayed as follows. The left hand side shows newly added sound files, while the right hand side shows the assignment of sound files to corresponding channels and schedules. Click <OK> and the digital deterrent window will be closed.

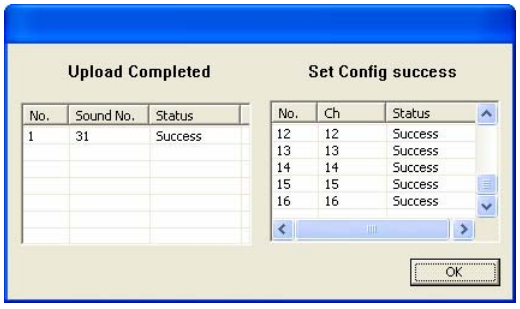

NOTE: Click on <Cancel> button will clear everything.

Appendix A: The CMS Player

The CMS Player is a compact version of the standard DVR Player. When multiple CMS instances are opened in multiple monitors, each CMS can launch 1 CMS Player. The main window of the CMS Player is shown below with the name of the buttons.

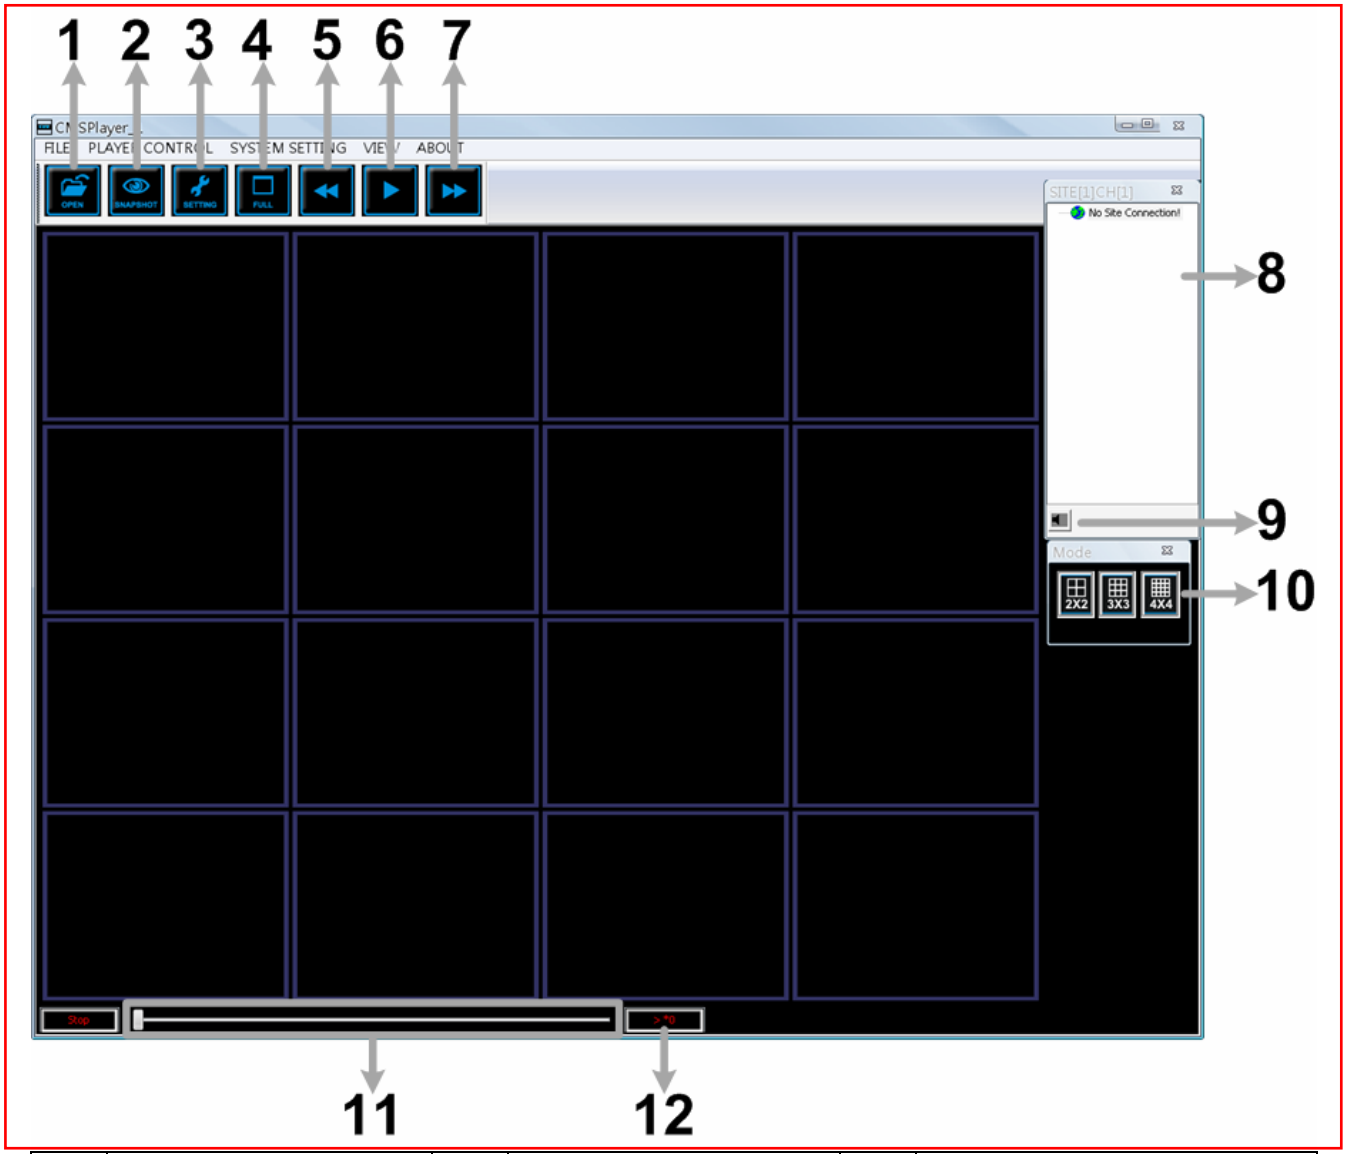

1	Open Video File	**5**	Fast/Step Backward	**9**	Audio
2	Snapshot	**6**	Play/Pause	**10**	Display Modes
3	Frame View Setting	**7**	Fast/Step Forward	**11**	Slider Bar
4	Full Screen	**8**	Site Tree	**12**	Playback Speed Indicator

The usage and function of each button will be described in the following paragraphs.

Open Video File

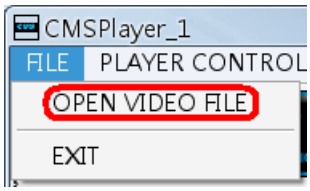

Click on the <Open Video File> icon to display the "Playback Search" window. Alternatively, click on the File Menu Bar as shown on the right. Users are allowed to playback, export, or delete videos. The instruction of video playback is illustrated in section ***Playback Recorded Video***. The followings will be details about video exportation and deletion.

Export Video:

Refer to below for steps of video exportation.

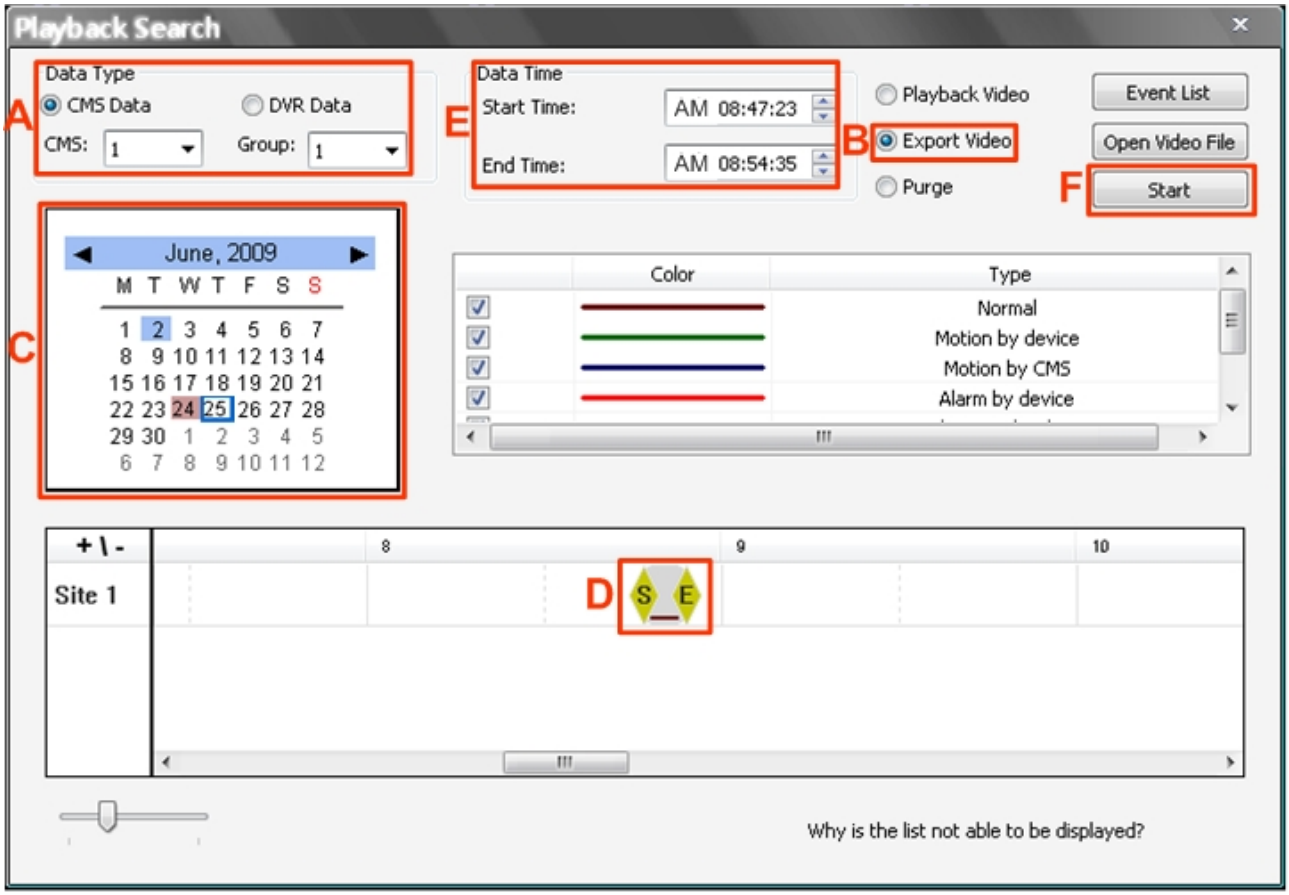

Step A. Select <CMS Data> and choose CMS server & group. Alternatively, select <DVR Data> and allocate a folder containing DVR HDD files.

Step B. Select <Export Video>.

Step C. Select date of designated videos. Today's date is in blue box, the date with video data is highlighted in brown, and the selected date is highlighted in blue.

Step D. Click and drag the cursor to select designated videos.

Step E. The start and end time of the selected video will be displayed here.

Step F. Click on the <Start> button. A window will pop up, and users are allowed to enter a filename and select video type (AVI or DRV) through the window. Then click on <Save> to start the exportation.

Delete Video:

Only when the current CMS login account is in the admin group, will the video deletion function be available. Refer to the following for step by step instructions.

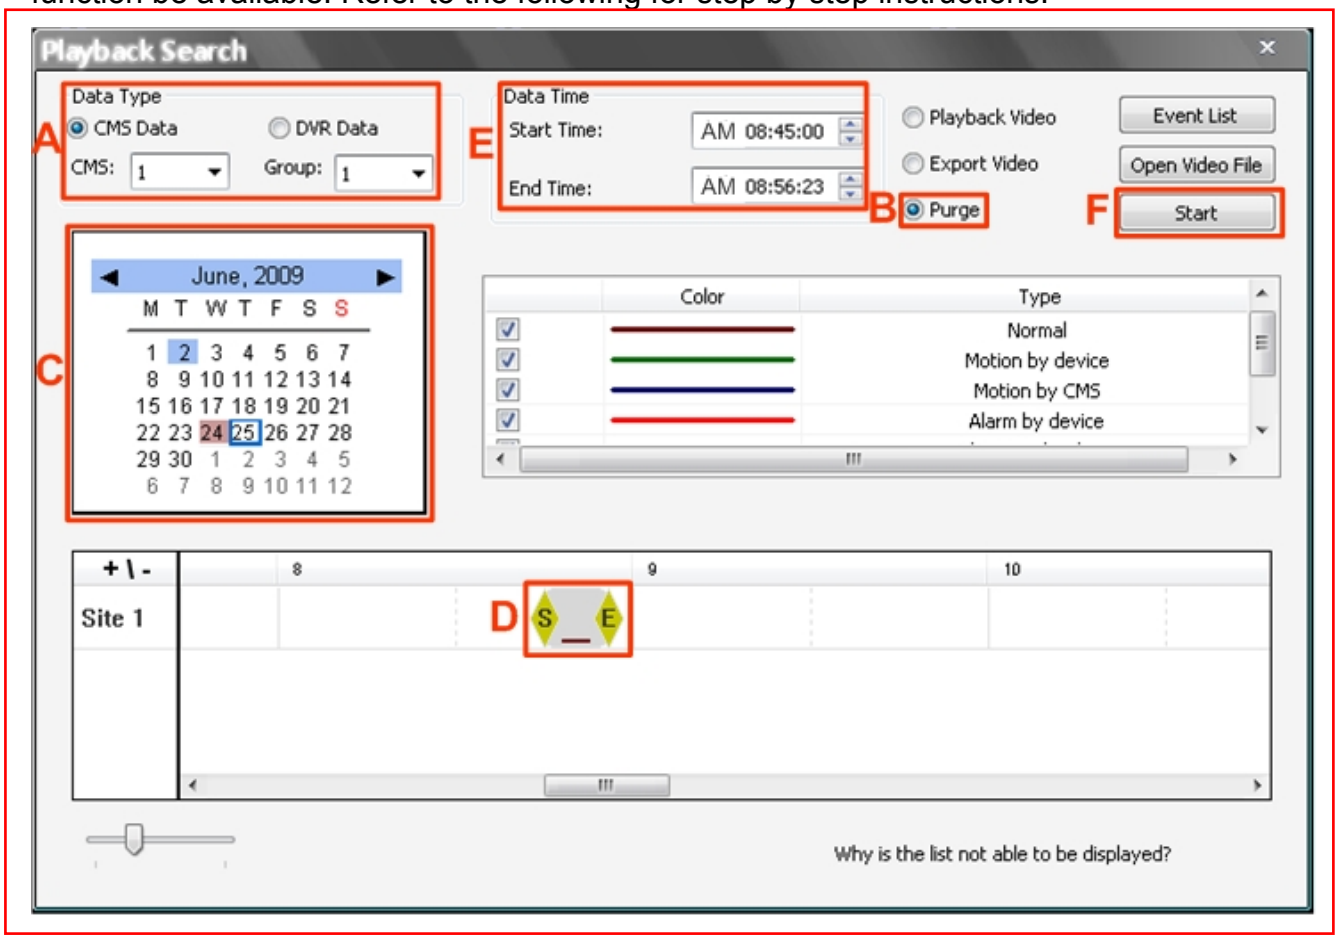

Step A. Select <CMS Data> and choose CMS server & group. Note that DVR data does not support purge function.

Step B. Select <Purge>.

Step C. Select date of designated videos. Today's date is in blue box, the date with video data is highlighted in brown, and the selected date is highlighted in blue.

Step D. Click and drag the cursor to select designated videos.

Step E. The start and end time of the selected video will be displayed here.

Step F. Click on the <Start> button and a confirmation dialog will be displayed. Enter correct username and password to start the deletion.

Event List:

In addition, users can also playback and export event videos via searching through the event list. Click on the <Event List> button on the upper right hand corner of the "Playback Search" window. The "Event List" window will be displayed as on the right. Refer to below for the instruction.

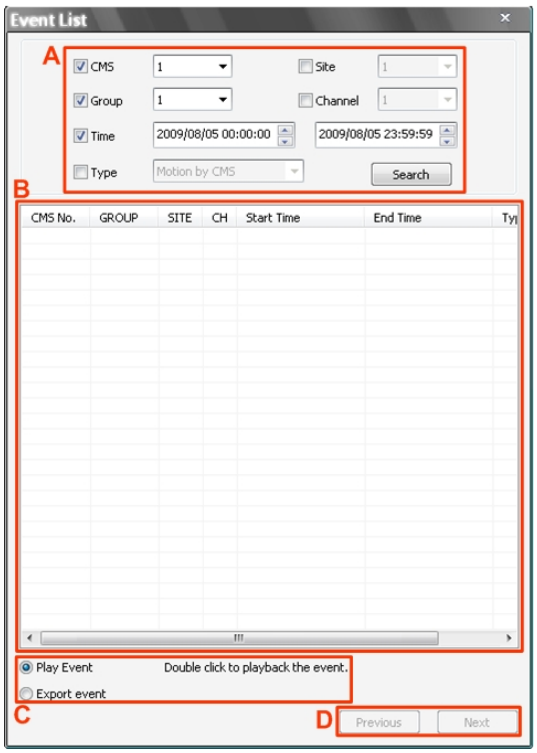

First set searching criteria in Box A and click on the <Search> button. The event videos satisfied the searching criteria will be listed in Box B. If the list contains more than 1000 event videos, click on the <Previous> and <Next> buttons in Box D to see more selections.

In Box C, users can choose to playback or export event videos. Select <Play Event> and double click on any item in Box B to playback the event video. Alternatively, select <Export event> and a <Start> button will appear at the bottom. Press Ctrl key to select multiple files and click on the <Start> button to begin exporting the event video(s).

NOTE: For event search of DVR data, the <CMS>, <Group> and <Site> in Box A will be inaccessible.

Video Type Display:

The chart in the middle of the "Playback Search" window allows users to assign unique color displays to represent different types of video data. Double click on any cell under the "Color" column and choose a preferred color to represent the corresponding video type.

Snapshot

Click on the <Snapshot> icon to capture a snapshot of the screen. Alternatively, click on the Player Control Menu Bar as shown on the right.

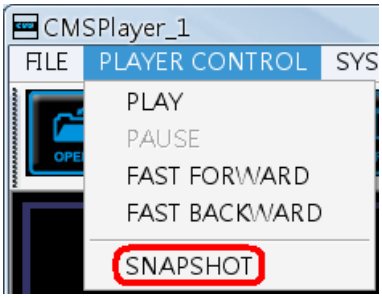

When the snapshot window is opened, users can choose to rename the filename or leave it as it is. Click on <OK> to save the snapshot or <CANCEL> to discard it.

Frame View Setting

The user can choose to show/hide the time and alert text on the video.

Click on the <Frame View Setting> icon, and the View Setting window will be displayed. Check <Show Time>, and the time will be shown on the screen. Check <Show Frame State>, and the alert text such as motion, or video loss will be shown. Uncheck to hide the information.

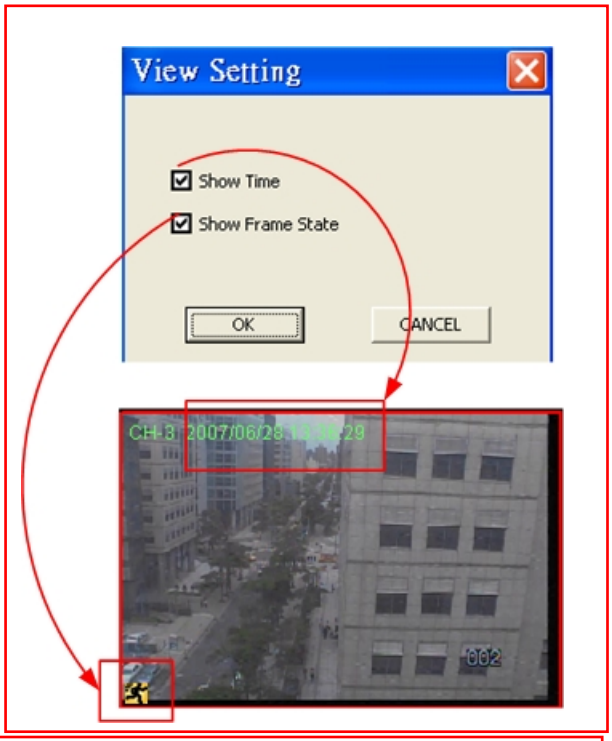

The other way to display the View Setting window is by clicking on the System Setting Menu Bar as shown on the right.

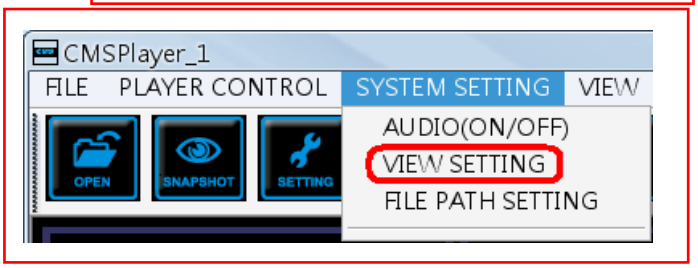

Full Screen

Click on the <Full Screen> icon to change to full screen displaying mode. Alternatively, click on the View Menu Bar or and select <Full/Normal Screen>, as shown below.

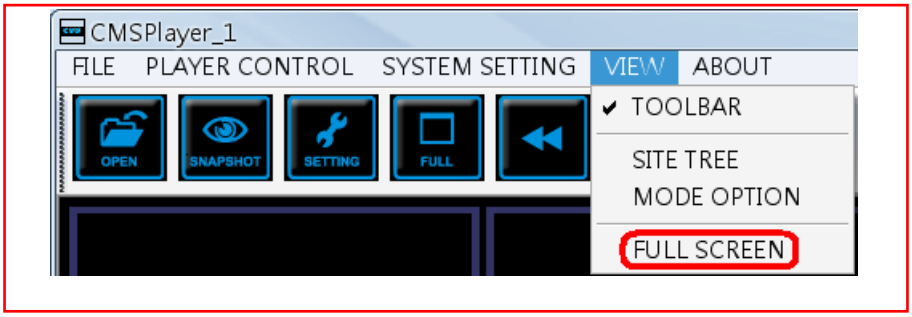

In full screen mode, the full screen icon will change to

. Click on it to return to normal screen. Alternatively, press "Esc" button on the keyboard .

Fast/Step Backward

Click on to play the video fast backward. The other way to play the video fast backward is by clicking on the Player Control Menu Bar as shown on the right.

When the playback of the video is paused, click on this icon to move one step backward.

Play

Click on to play the video. The other way to play the video is by clicking on the Player Control Menu Bar as shown on the right.

Pause

Click on to pause the video. The other way to pause the video is by clicking on the Player Control Menu Bar as shown on the right.

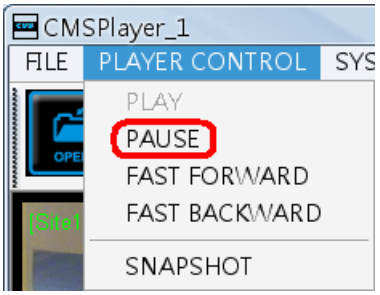

Fast Forward / Step Forward

Click on to play the video fast forward. The other way to play the video fast forward is by clicking on the Player Control Menu Bar as shown on the right.

When the playback of the video is paused, users can click on this button to move one step forward.

Site Tree

The site tree shows the channels of the opened DRV file. Double click on a channel to view the specific channel in one screen. Right click on the site tree can choose to expand or hide site tree. If the site tree is closed, it can be recalled under the View Menu Bar as shown below.

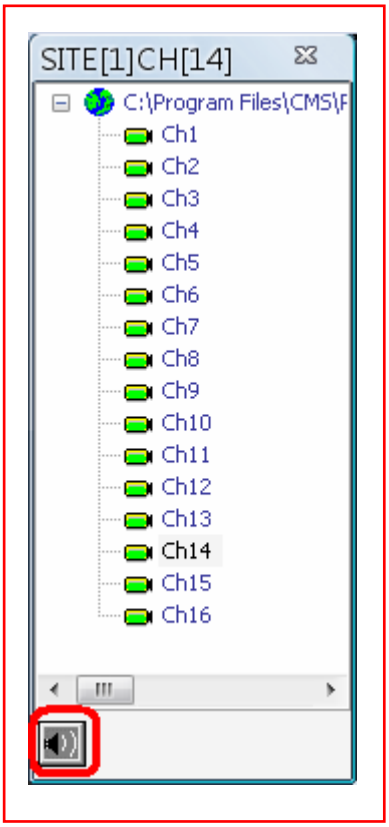

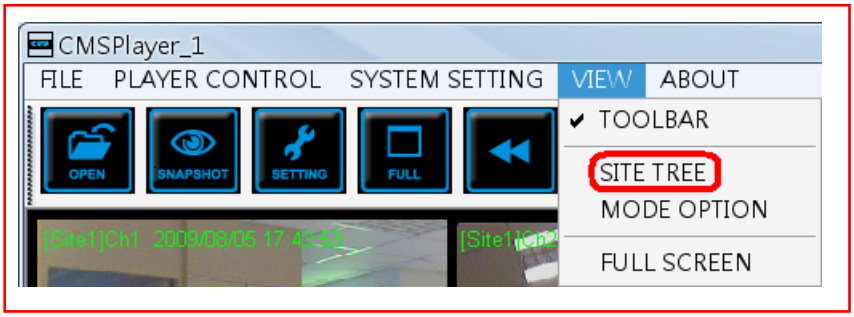

Audio

Click on the speaker icon located on the bottom of the site tree to enable or disable the audio. Alternatively, click on the System Setting Menu Bar as shown below.

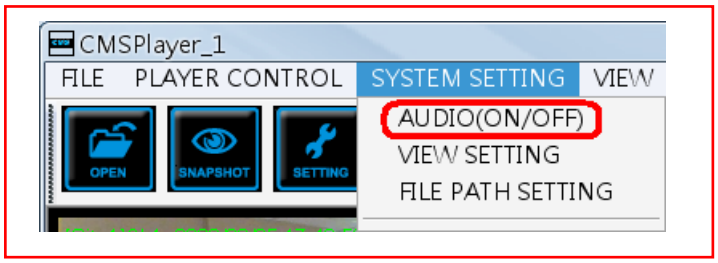

Display Modes

Click on the <2X2>, <3X3>, or <4X4> icons to view the images in a multiple window mode. If the Mode window is closed, it can be recalled under the View Menu Bar as shown below.

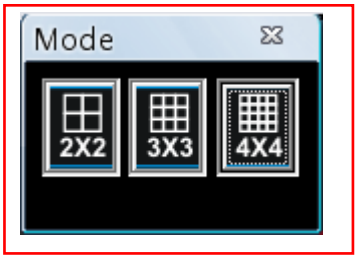

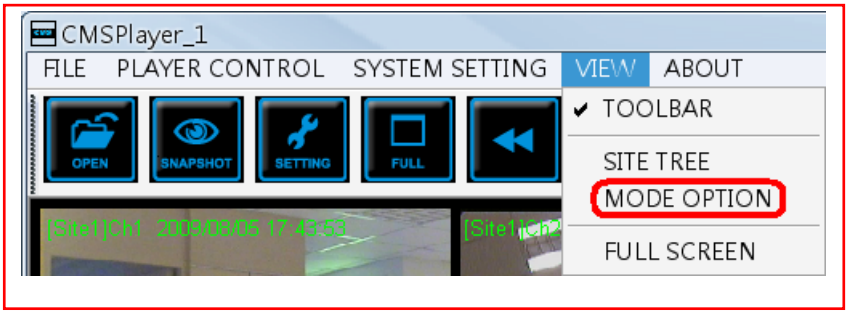

Slider Bar

Click and drag the bar to search through the video.

Playback Speed Indicator

The Speed Indicator shows playback speed in forward or backward direction.

- > indicates forward playback while < indicates backward playback.
- The playback speed can be *1, *2, *4, *8, *16, or *32.

About

Click on the About Menu Bar as shown below to view the information of the CMS Player version, as shown on the right.

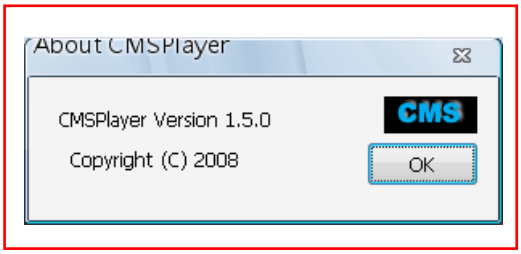

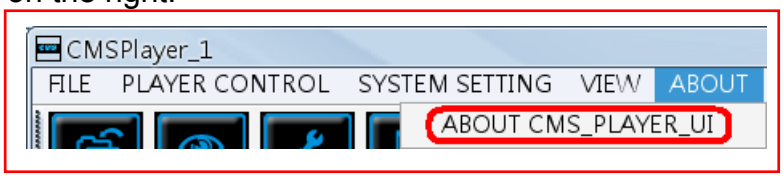

File Path Setting

The <File Path Setting> under the System Setting Menu Bar, as shown on the right, allows the user to preset file paths for AVI conversion files and snapshot files. The File Path Setting window is as below.

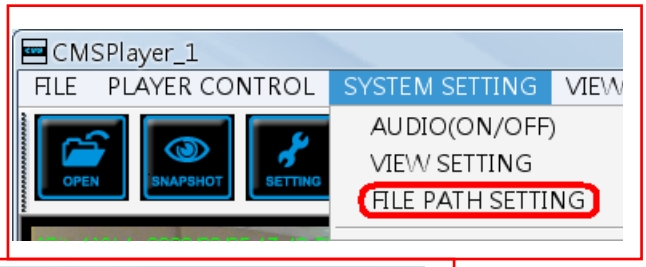

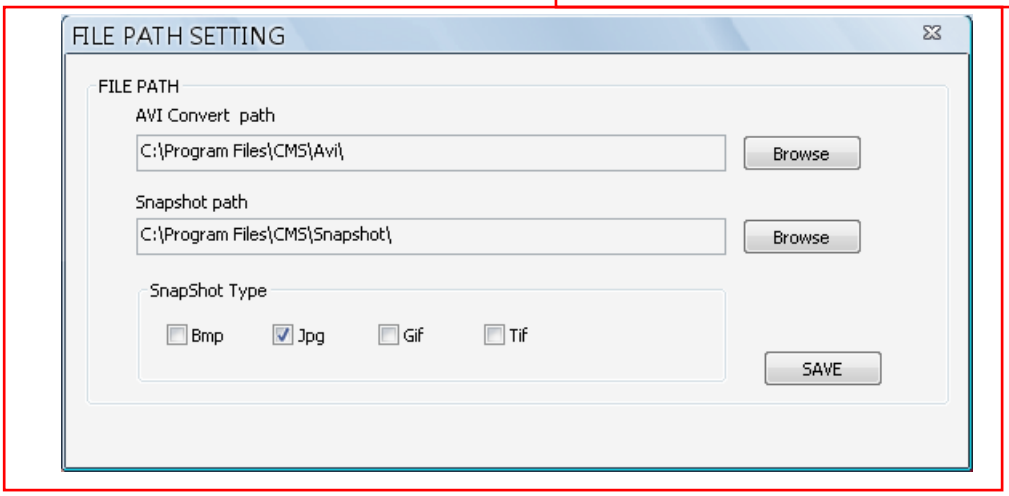

Click on <Browse> to select desired folders. In addition, file type of snapshot pictures can also be selected: Bmp, Jpg, Gif, or Tif formats. After the settings are selected, click on <Save> to save.

Toolbar

Under the View Menu Bar, users can choose to show/hide the Toolbar. When users closed the Site Tree or Mode Option, users can recall the window under this menu too.

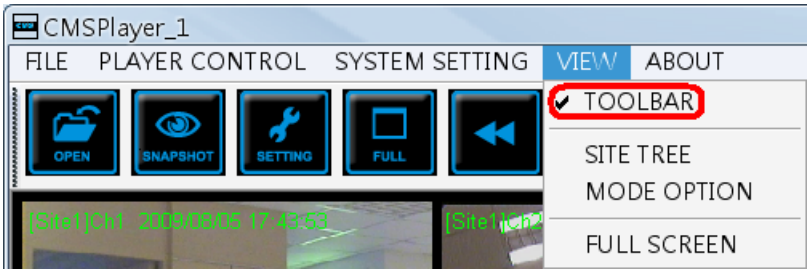

Assign a Channel to Certain Grid

Similar to CMS, CMS Player also allows users to assign any channel in the site tree to any grid of CMS Player main window. Follow steps below to complete assignment.

Step 1: Click and hold the channel users want.
Step 2: Drag and drop it onto the window that users want to assign in.

Resort/Remove Displaying Grid

Right click on any channel and select <Re-sort> to restore the original layout.

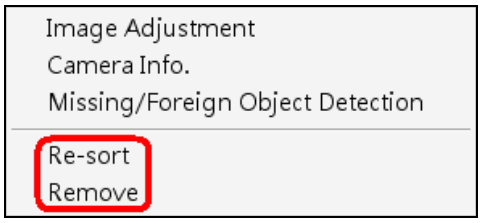

In addition, users can also remove any channel by right clicking on the grid and select <Remove>. Alternatively, users can select any grid and press <Delete> key on the keyboard to remove the channel.

NOTE: Selecting <Re-sort> will restore the removed channels, or users can add a channel back to any grid via drag and drop.

Image Adjustment

Image adjustment function in CMS Player is the same as in CMS. Please refer to section ***Adjust the Image*** for more details.

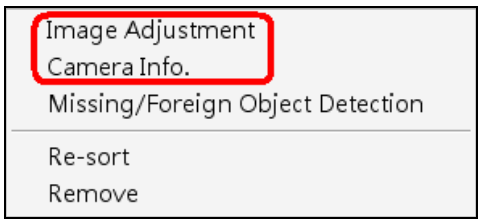

Camera Info.

Camera Info. function in CMS Player is the same as in CMS. Please refer to section ***Camera Setting / Camera Info.*** for more details.

Missing/Foreign Object Detection

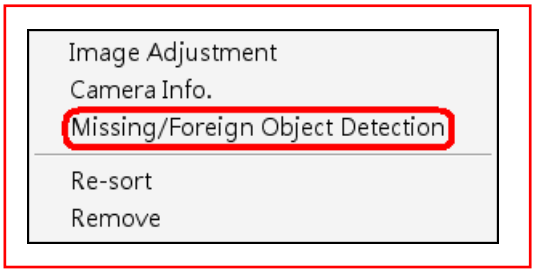

Right clicking on any grid with video and select the option <Missing/Foreign Object Detection>. The basic configuration of Missing/Foreign Object Detection function in CMS Player is the same as what is in CMS. Please refer to section ***Missing/Foreign Object Detection*** for more details. This section will introduce the different part of the Missing/Foreign Object Detection function in CMS Player.

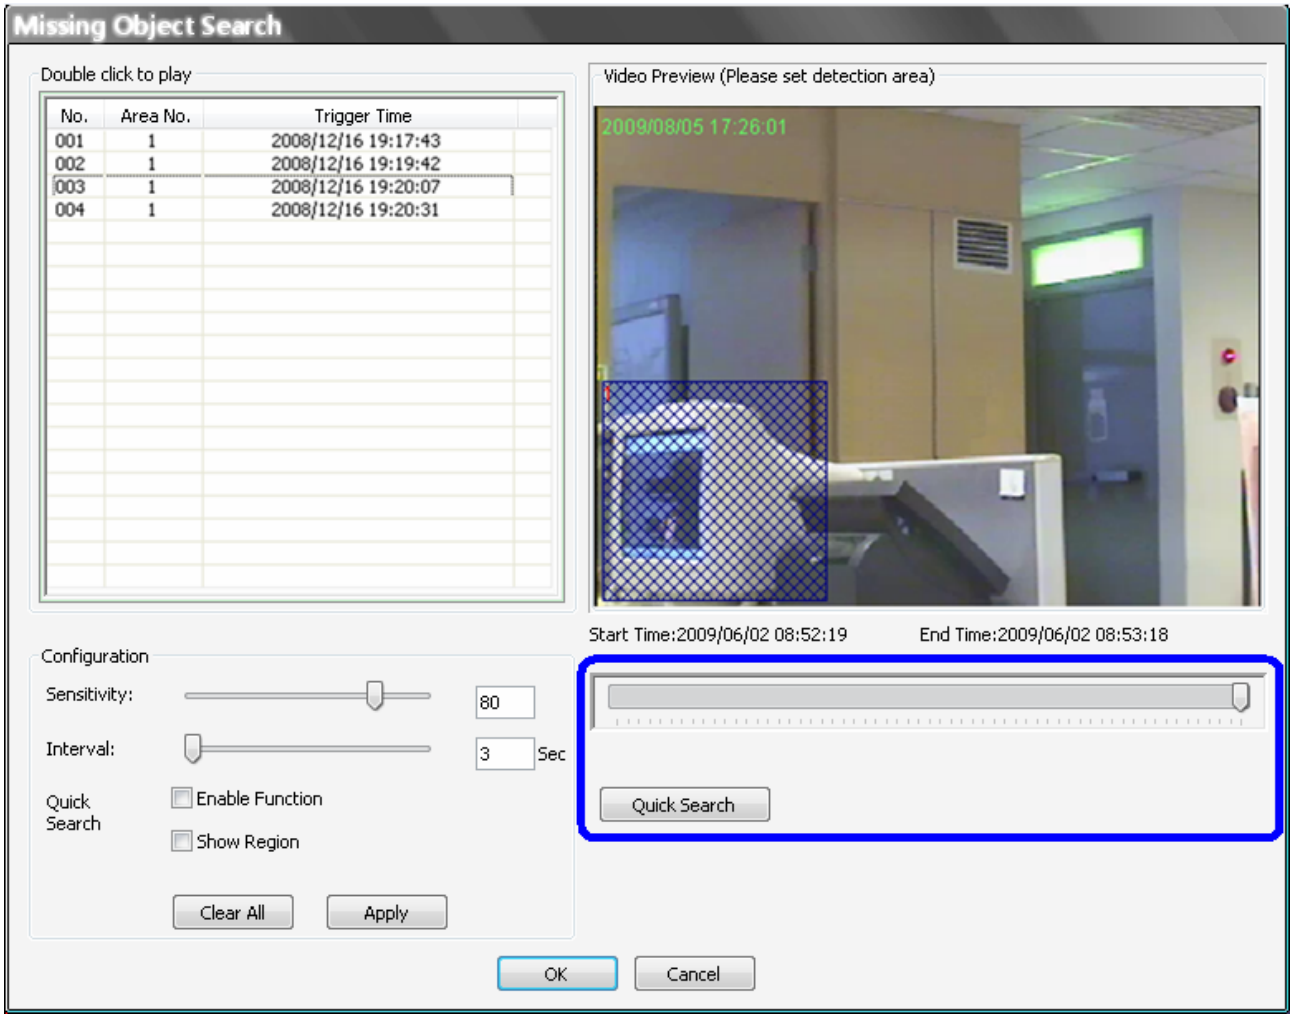

Quick Search: Click on it to quick skim through the video for object search of the selected area(s). The list will be filled when foreign or lost of object alert(s) found.

Stop Quick Search: Click on it to stop quick search.

Appendix B: Troubleshooting

The followings are some common situations when the user is having difficulty with the CMS server.

1. The CMS server does not work properly. How can it be recovered or where can I ask for help?

   Please try the following ways to recover it first.

   A. Please check if the computer meets the system requirement.

   B. If the CMS automatically closes when it's opened or when it's connecting to sites, please send the files stored in \CMS\Setting\ under improper operation condition. Afterwards, re-install CMS and check to install **Default Setting** during installation. Remember not to import old setting files. This will tell whether if the old setting data are corrupted.

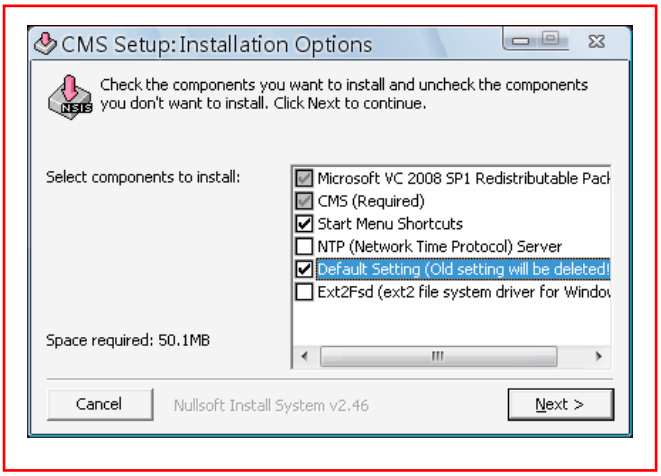
CMS Setup: Installation Options
Check the components you want to install and uncheck the components you don't want to install. Click Next to continue.
Select components to install:
Microsoft VC 2008 SP1 Redistributable Pack
CMS (Required)
Start Menu Shortcuts
NTP (Network Time Protocol) Server
Default Setting (Old setting will be deleted!
Ext2Fsd (ext2 file system driver for Windo
Space required: 50.1MB
Cancel
Nullsoft Install System v2.46
Next >

   C. If CMS cannot successfully connect to sites, check the followings.

   - Confirm IP, port, username, and password of the site. Users can connect to the site via IE browser to verify the site exists and is connectable.
   - Close firewall and virus scan software and try to connect again. If the problem is due to firewall or virus scan software, please change their settings.
   - If the connection still failed, please send the IP address to our engineer.

   NOTE: When users need to ask for the engineer's help, please send a copy of the files stored in \CMS\Log\ as well.

2. The CMS server takes up too many HDD space.

We have found that the preset of the virus scan software "NOD32" will automatically create a temporary file under windows system temporary folder when the CMS connects to sites. This temporary file will automatically increase the size which causes the HDD became lack of space.

Please go to the control center of the NOD32 and disable **IMON**. Then the problem should be resolved. The following pictures are examples.

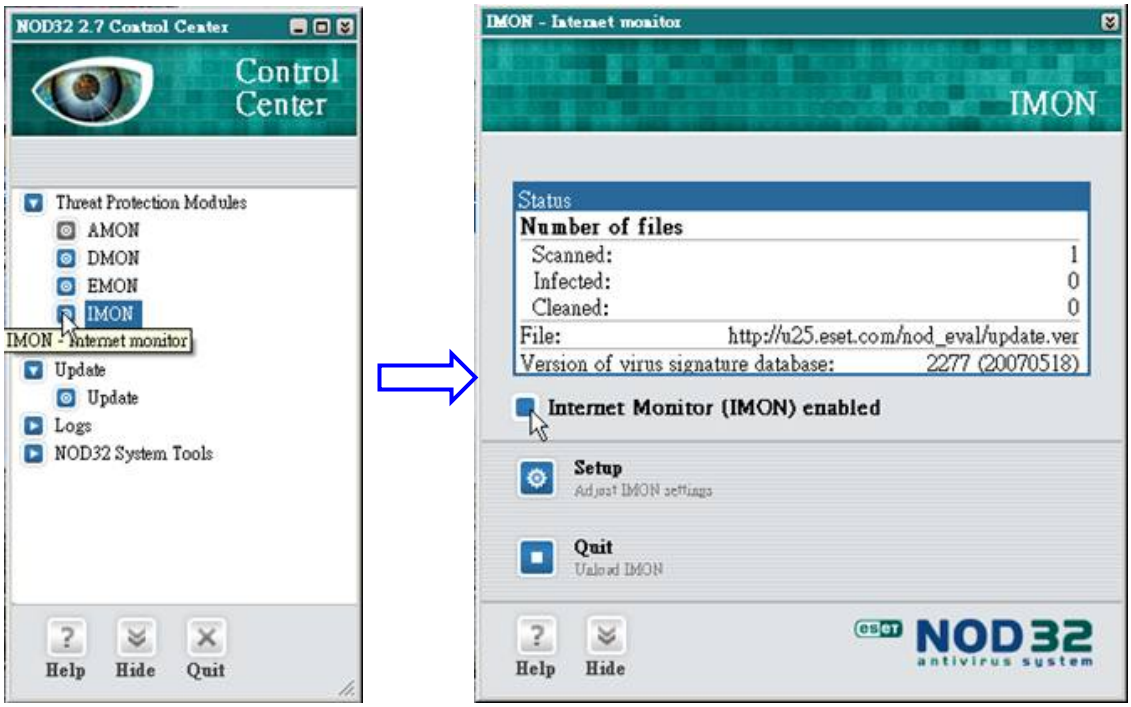

Have a question or comment? We would love to hear from you. Speco Technologies is committed to providing you with the highest quality, most cost-effective products and solutions for your audio and video installations.

For product related issues such as product availability, pricing, and order status contact us at sales@specotech.com

For issues regarding this web-site webmaster@specotech.com

If you would like to contact our Technical Support Group by email
techsupport@specotech.com
or call:
1-800-645-5516 option #3 or
631-957-8700 option #3

For information call toll free at 1-800-645-5516.

Our Address:

Speco Technologies
200 New Highway
Amityville, NY 11701

Phone: 631-957-8700
Fax: 631-957-9142